


ASSEMBLY INSTRUCTIONS

Harriet

ITEM NO.: 305 Teak
311 Ash White

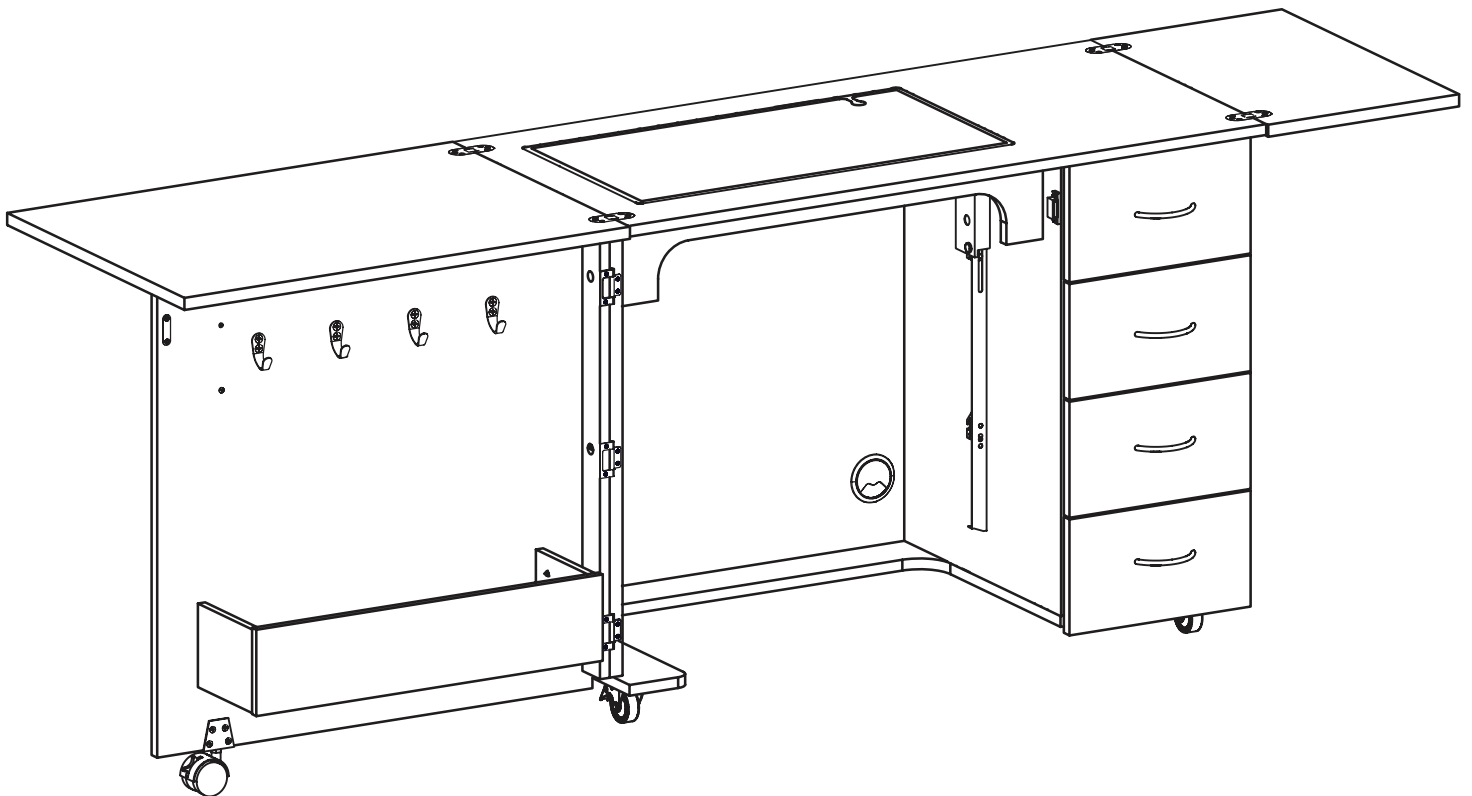

General Assembly Guidelines

1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.


2. Tools Required



#2 Phillips Screwdriver +



 Hammer




Rubber Mallet



Electric Screwdriver +
Torque set to 3-5

3. Understanding How the Cam Fastener Works

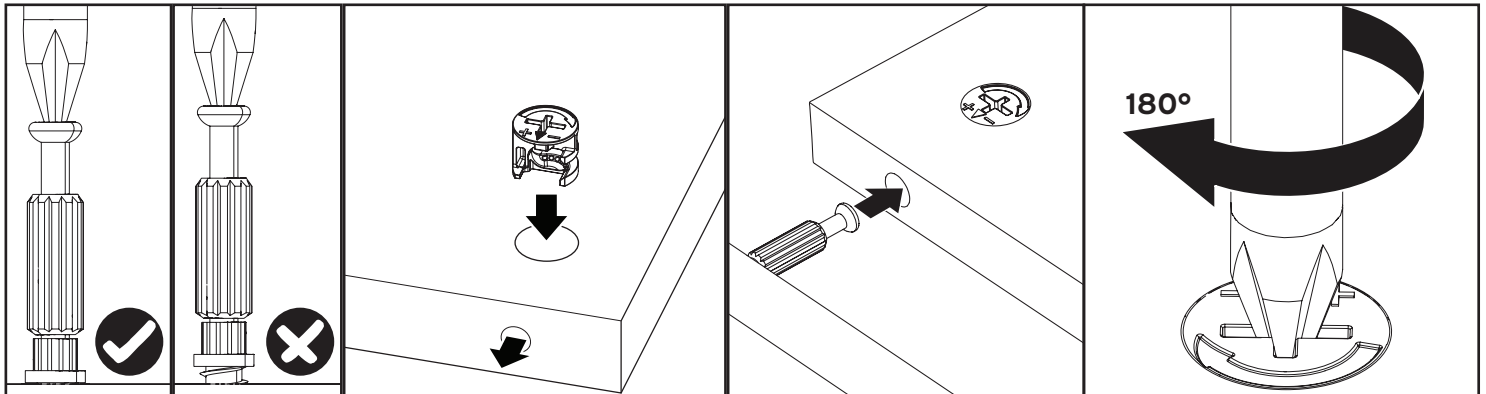


Screw cam bolts flush as illustrated.

Press cam into hole until flush with surface. The arrow direction must be in the direction of the hole.


Insert bolt through pre-drilled hole in edge of panel.

Turn clockwise to lock cam with bolt.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better.

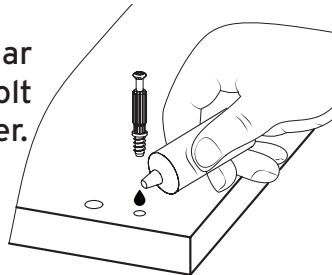

4. **Glue** provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.

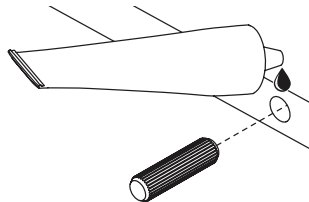


Use and Care Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

Cleaning - To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. **DO NOT** use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.

Electrical and Hydraulic Lifts - Require annual lubrication with WD-40 or similar lubricant.

Parts List: Panels

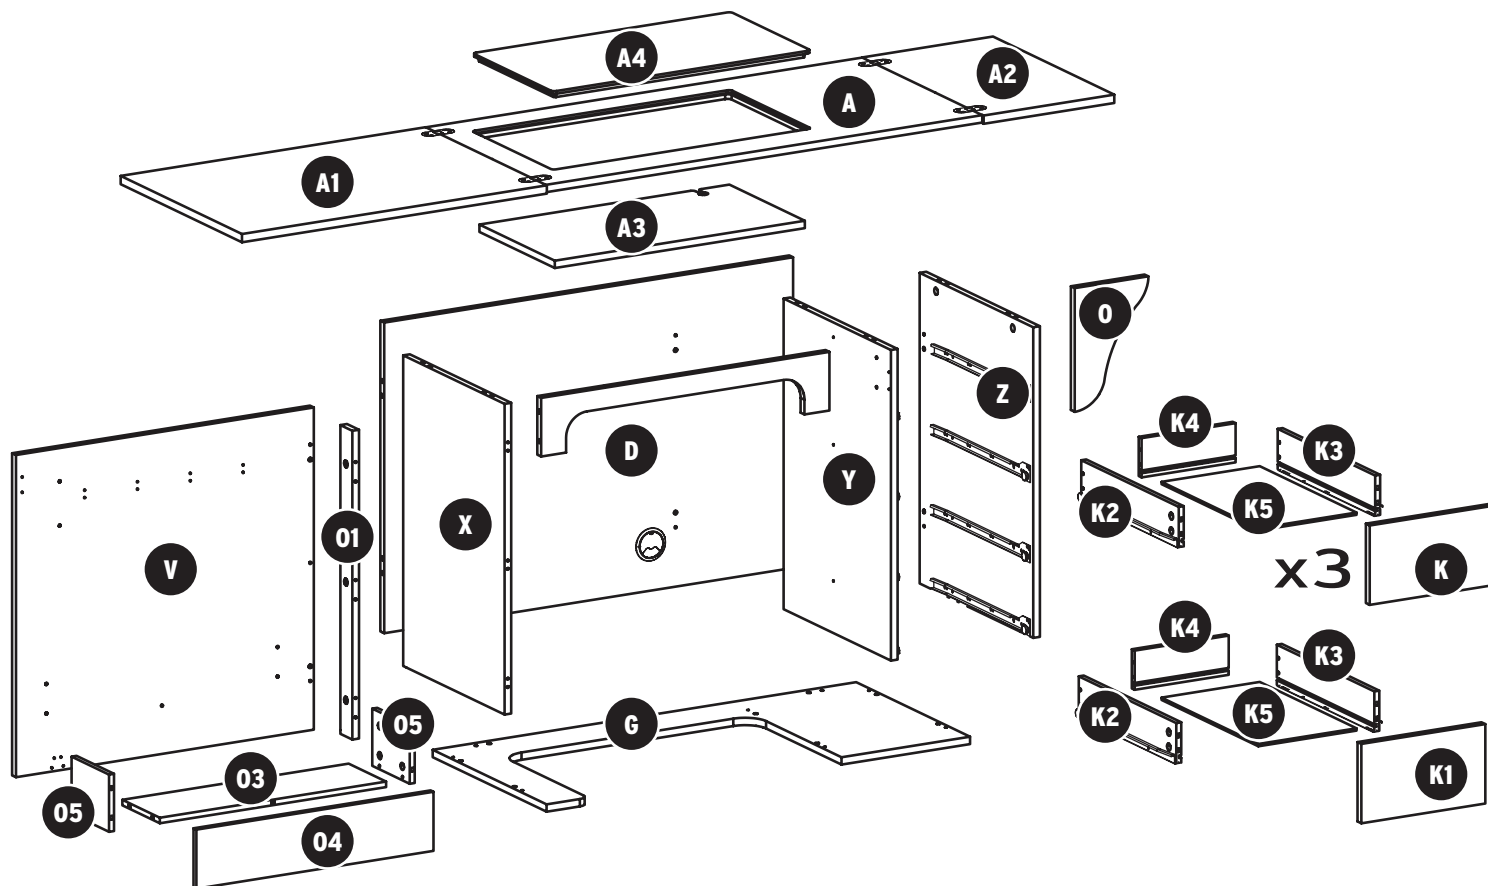


ITEM	DESCRIPTION	QTY	BOX	ITEM	DESCRIPTION	QTY	BOX
A/A1/A2	Top Panel	1	1 of 3	K3	Drawer Right Side Panel	4	3 of 3
A3	Lift Panel	1	1 of 3	K4	Drawer Back Panel	4	3 of 3
A4	Cover Panel	1	1 of 3	K5	Drawer Bottom Panel	4	3 of 3
G	Bottom Panel	1	1 of 3	02	Front Brace Panel	1	3 of 3
				03	Door Bin Bottom Panel	1	3 of 3
D	Back Panel	1	2 of 3	04	Door Bin Front Panel	1	3 of 3
Y	Middle Panel	1	2 of 3	05	Door Bin Side Panels	2	3 of 3
Z	Right Side Panel	1	2 of 3	V	Door Panel	1	3 of 3
01	Door Connector Panel	1	2 of 3	K	Drawer Front Panel	3	3 of 3
				K1	Bottom Drawer Front Panel	1	3 of 3
X	Left Side Panel	1	3 of 3	0	Leaf Support Wing	1	3 of 3
K2	Drawer Left Side Panel	4	3 of 3				
					Hardware & Lift Box	1	3 of 3

Parts List: Hardware

TIP: Keep all the parts in their individually labeled bags. This will make finding parts easier as you assemble your cabinet.



 
c1 6x35 Cam Bolt **x59**




d1 8x30 Dowel Pin **x26**



 
c2 5/8" Cam Cover **x59**



h1 Hinge **x2**

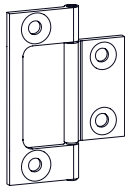

h2 Flush Hinge **x3**

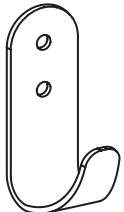

h3 Door Hooks **x4**



b2 4x20 Fix Bolt **x10**




c3 12mm Cam Lock **x29**



c4 10mm Cam Lock **x30**



pp 3M Adhesive Panel Protector **x5**

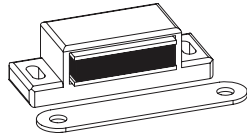

m Magnet and Plate **x1**



s1 4x14 Screw **x34**



s2 3x14 Screw **x14**



 
s3 3.5x20 Screw **x2**



s5 3.5x30 Screw **x16**



s7 4x60 Screw **x4**




b1 8x16 Fix Bolt **x16**




h Handle **x5**




a Allen Wrench **x1**

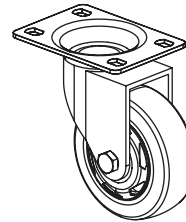


t1 Non-Locking Plate Caster **x2**

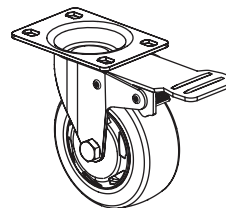


t2 Locking Plate Caster **x2**

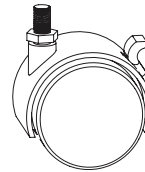

t2 Locking Stem Caster **x1**

 


r3 14mm Wrench **x1**

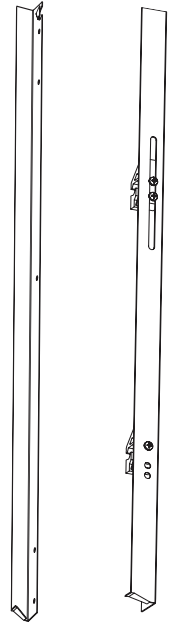


Lift Rail
(Left) **x1**

Lift Rail
(Right) **x1**

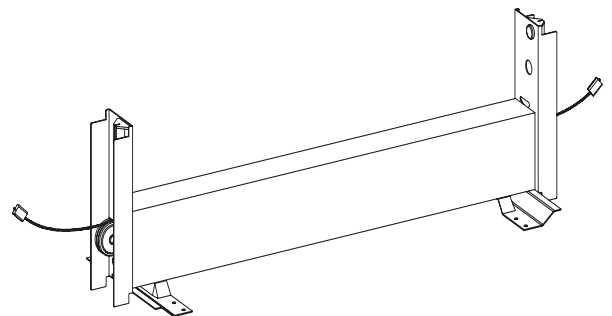


Lift **x1**

 Step 1: Cabinet Shell



c1 6x35 Cam Bolt **x6**

 

d1 8x30 Dowel Pin **x12**




c3 12mm Cam Lock **x14**



Lift Rail
(Left) **x1**



s1 3.5x14 Screw **x3**

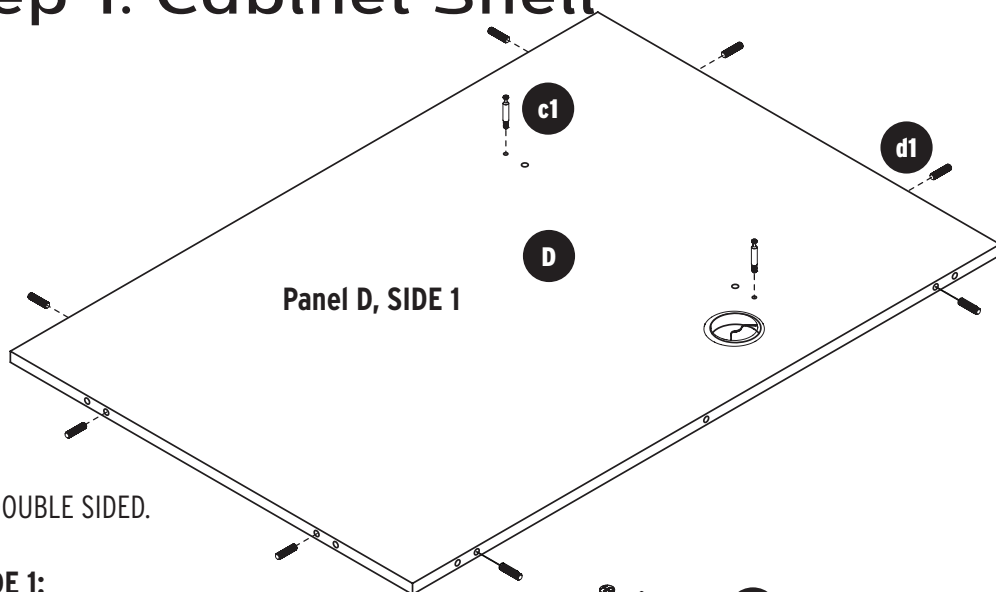



PANEL D IS DOUBLE SIDED.

Panel D, SIDE 1:

- Attach 2 **c1** Cam Bolts
- Insert 8 **d1** Dowels

Panel D, SIDE 2:


- Insert 10 **c3** Cam Locks

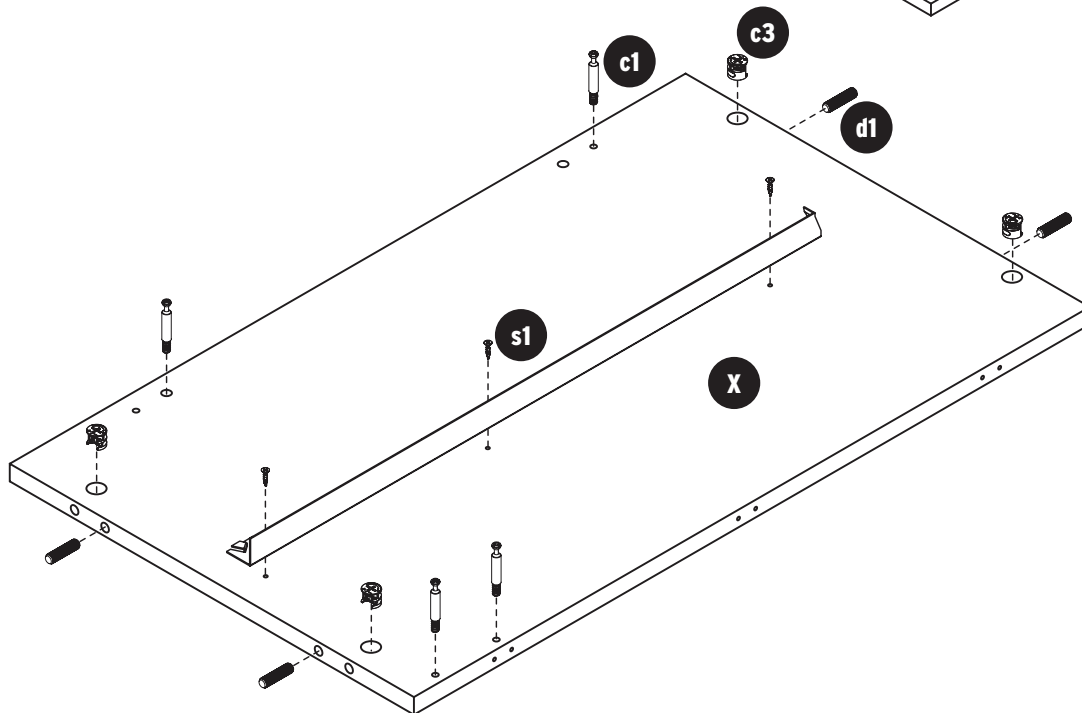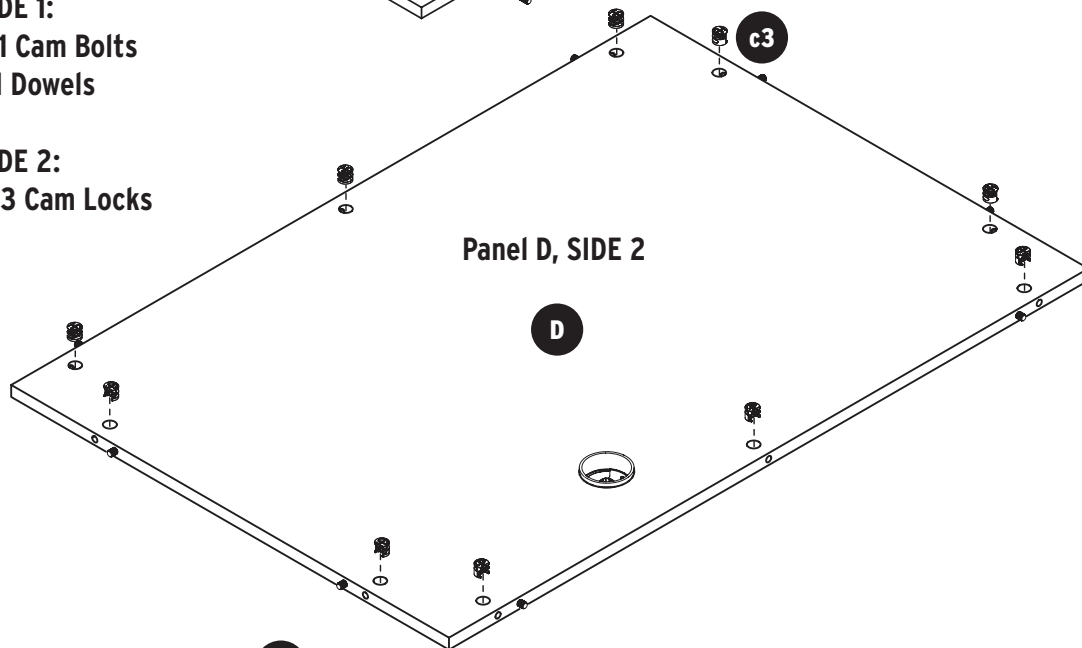

To Panel X:

- Attach 4 **c1** Cam Bolts
- Insert 4 **d1** Dowels
- Insert 4 **c3** Cam Locks
- Attach **Lift Rail (Left)** with 3 **s1** Screws.

 Step 1: Cabinet Shell



d1 8x30 Dowel Pin **x10**




c3 12mm Cam Lock **x6**



c1 6x35 Cam Bolt **x4**



s1 3.5x14 Screw **x3**

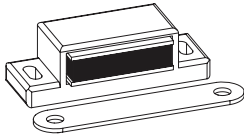

m Magnet **x1**





s3 3.5x20 Screw **x2**

Lift Rail
(Right) **x1**

PANEL Y IS DOUBLE SIDED.

To **Panel Y**, Side 1:

- Insert 4 **c3** Cam Locks
- Insert 6 **d1** Dowel Pins

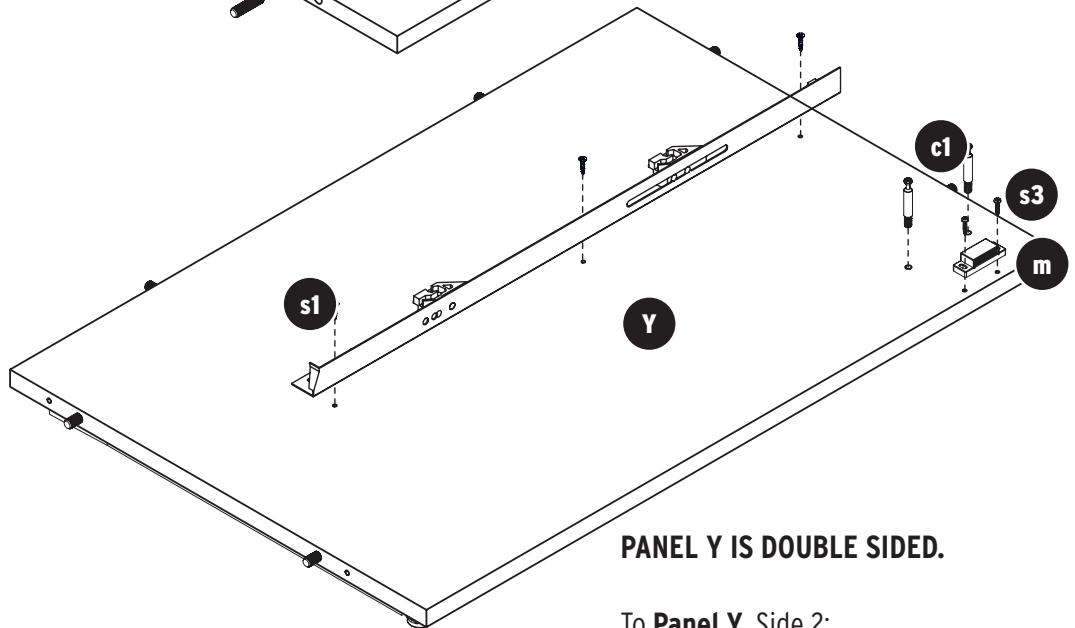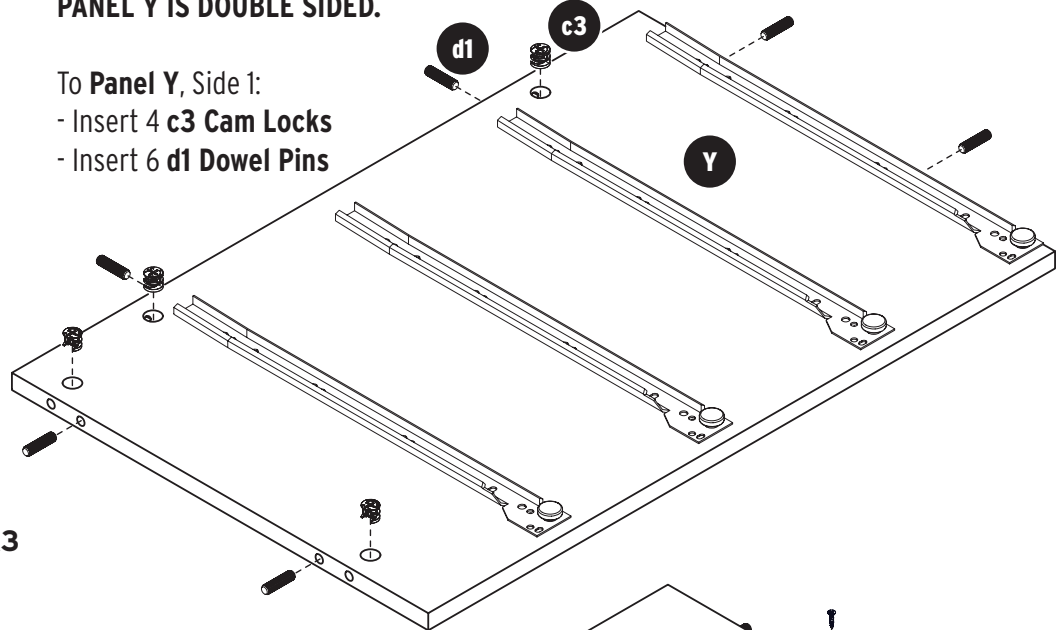


PANEL Y IS DOUBLE SIDED.

To **Panel Y**, Side 2:


- Attach 2 **c1** Cam Bolts
- Attach **m** Magnet using **S3** Screws

To **Panel Z**:

- Attach 2 **c1** Cam Bolts
- Insert 2 **c3** Cam Locks
- Insert 4 **d1** Dowel Pins

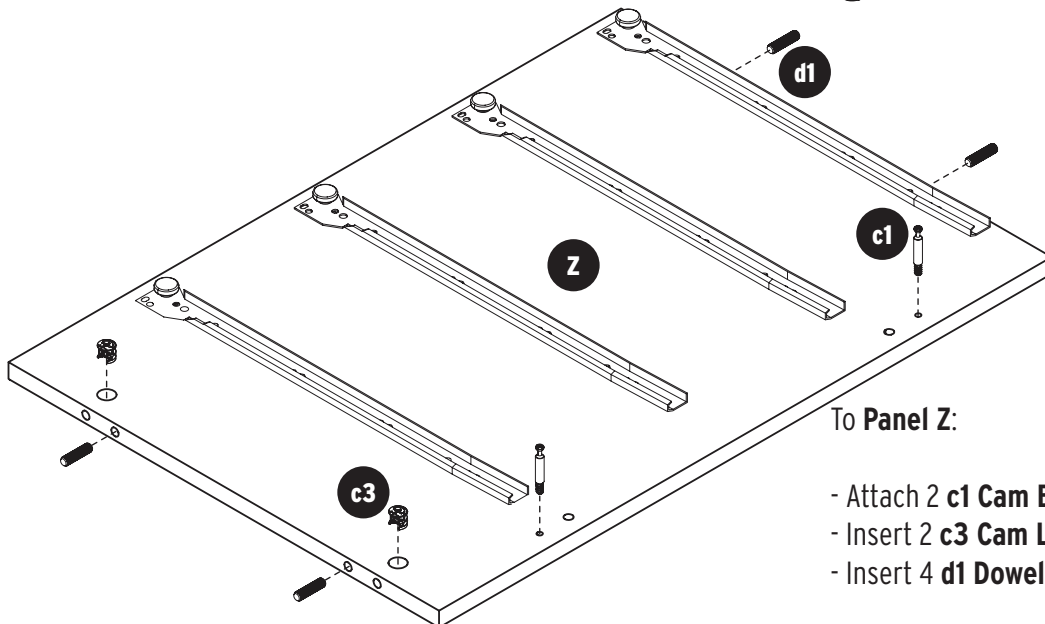


Step 1: Cabinet Shell

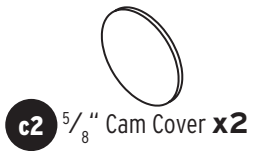

CABINET ASSEMBLY IS SHOWN UPSIDE DOWN

Carefully slide **Panel Y** onto **Panel D**, guiding Cam Bolts on **Panel D** into Cam Locks on **Panel Y**.

Tighten Cam Locks and apply **c2 Cam Covers**.

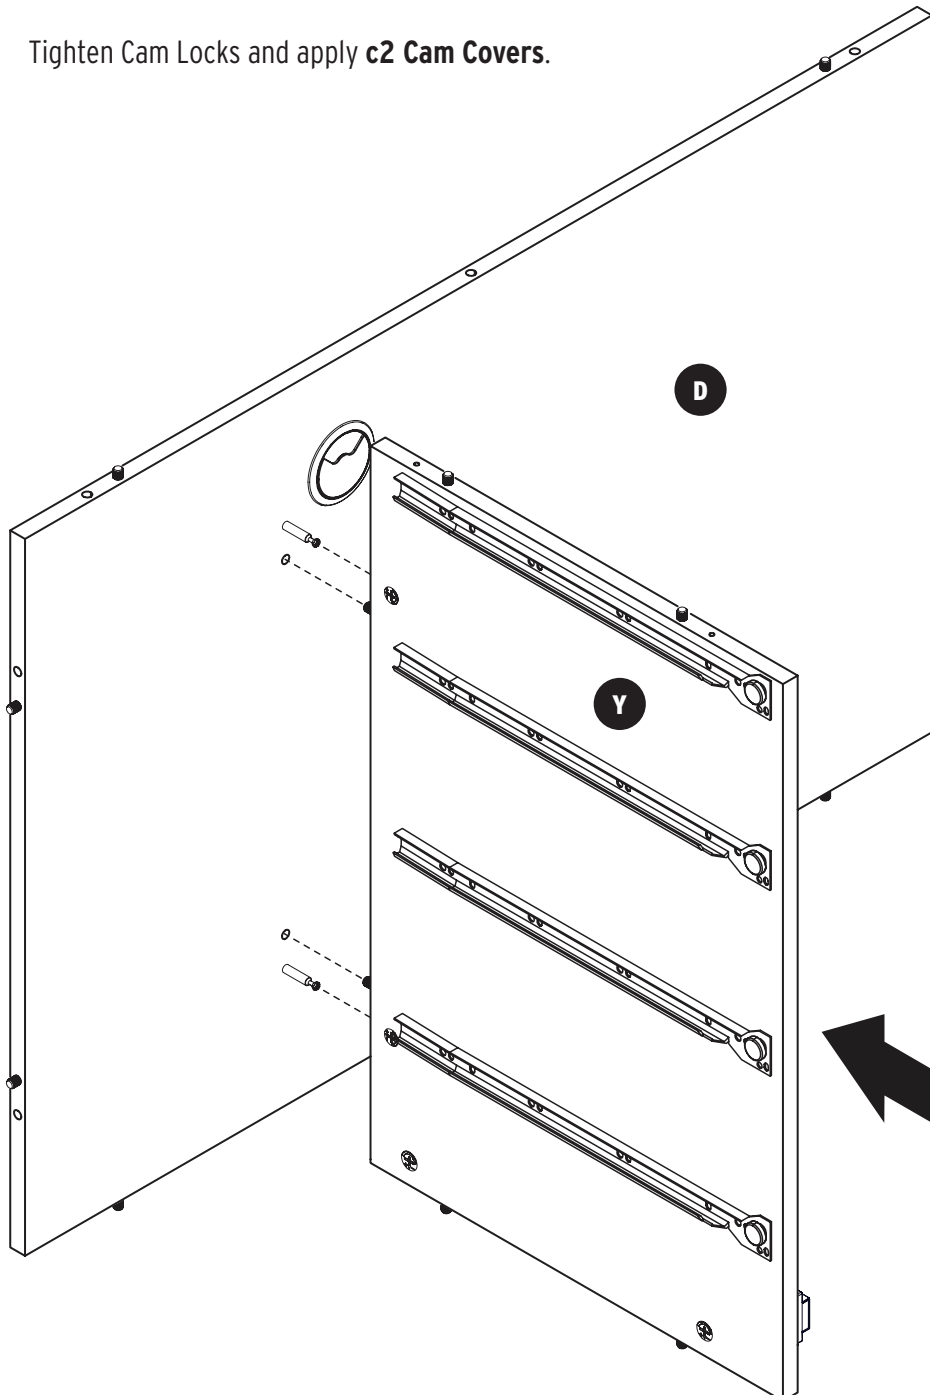

Step 1: Cabinet Shell



d1 8x30 Dowel Pin **x2**





c2 $\frac{5}{8}$ " Cam Cover **x2**



c3 12mm Cam Lock **x6**

To **Panel 02**:


- Attach 6 **c1** Cam Bolts
- Insert 2 **d1** Dowel Pins

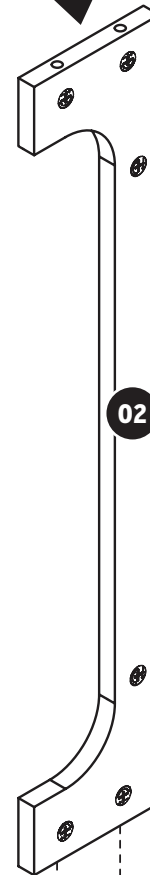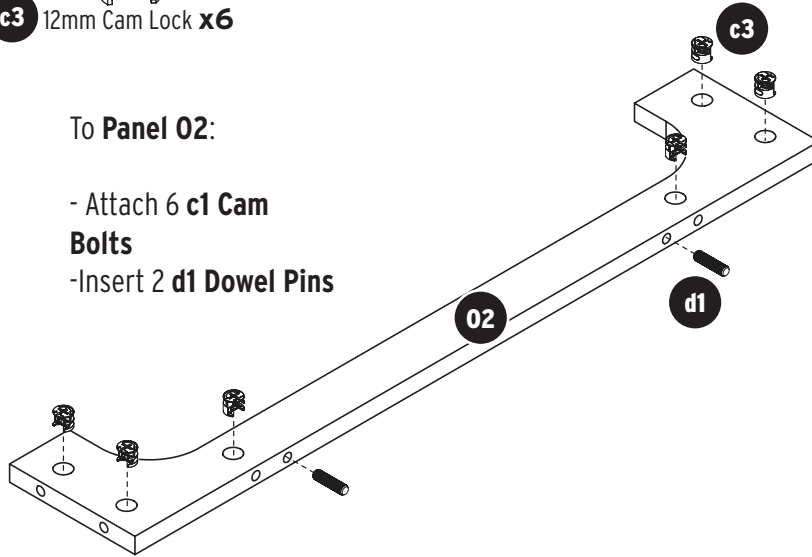


On a carpeted or protected floor, lay **Panel X** down on its back.

Carefully lower **Panel 02** onto **Panel X**, guiding Cam Bolts on **Panel X** into Cam Locks on **Panel 02**.

Tighten Cam Locks and apply **c2** Cam Covers.

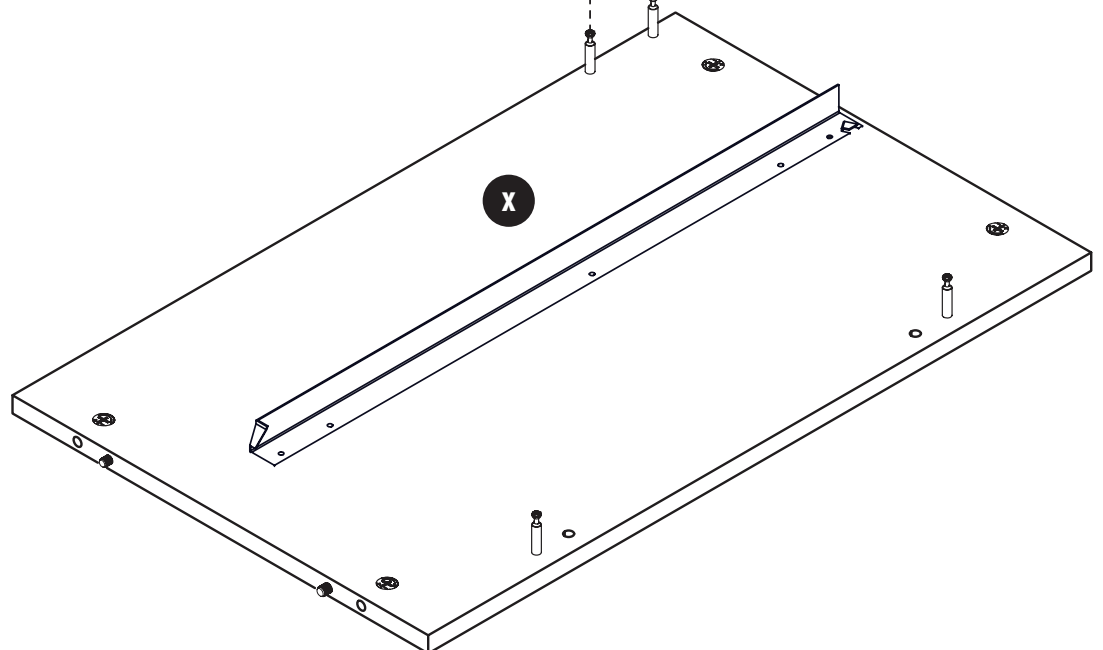


Step 1: Cabinet Shell

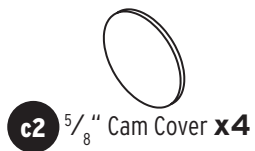



Carefully slide the **Panel X/02** assembly into position as shown.

Guide Cam Bolts on **Panels X** and **Y** into Cam Locks on **Panels D** and **02**.

Tighten Cam Locks and apply **c2 Cam Covers**.

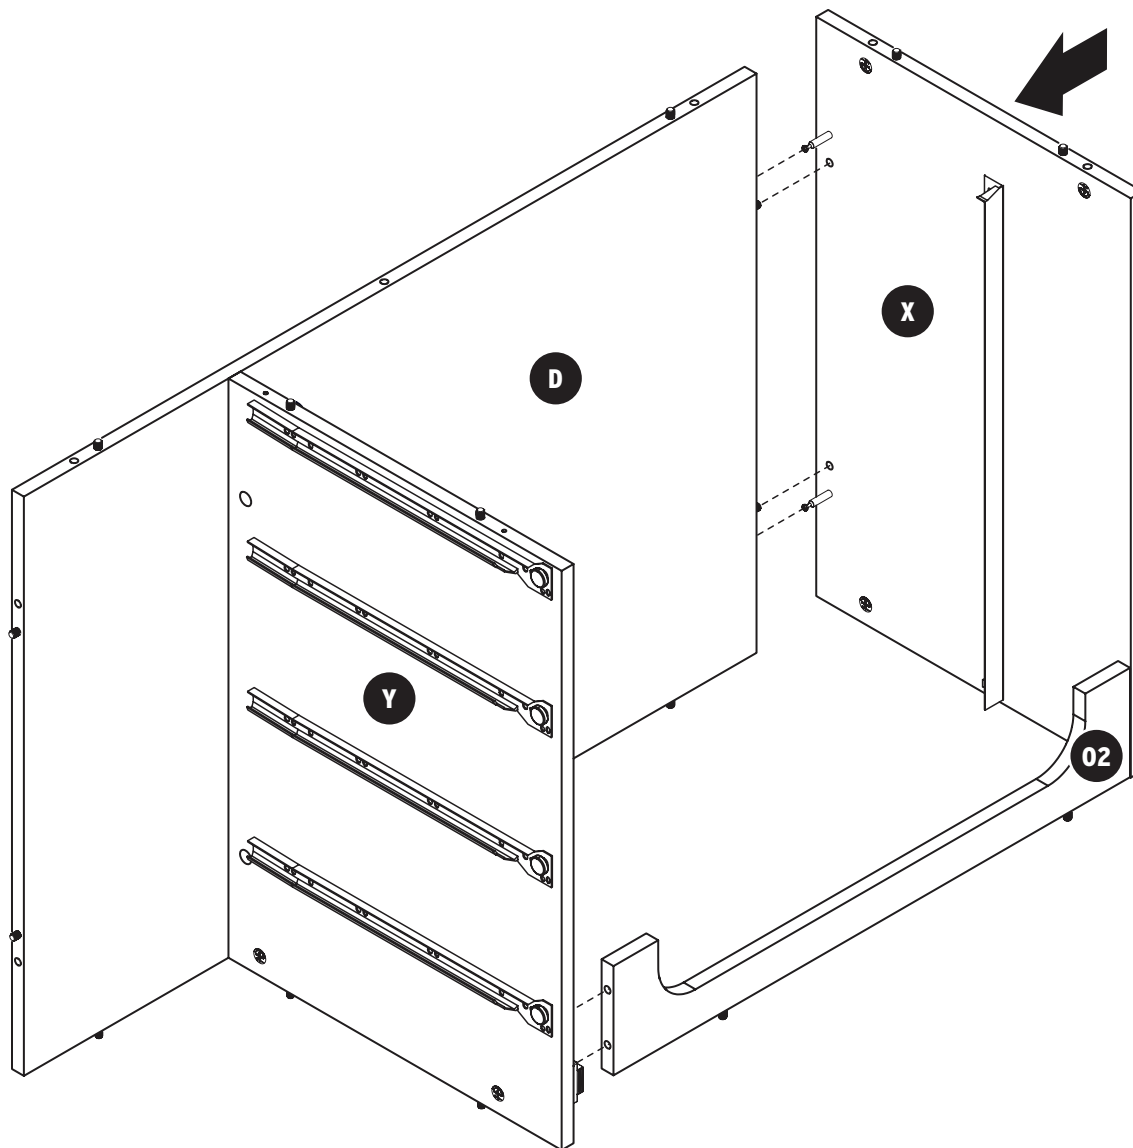


Step 1: Cabinet Shell

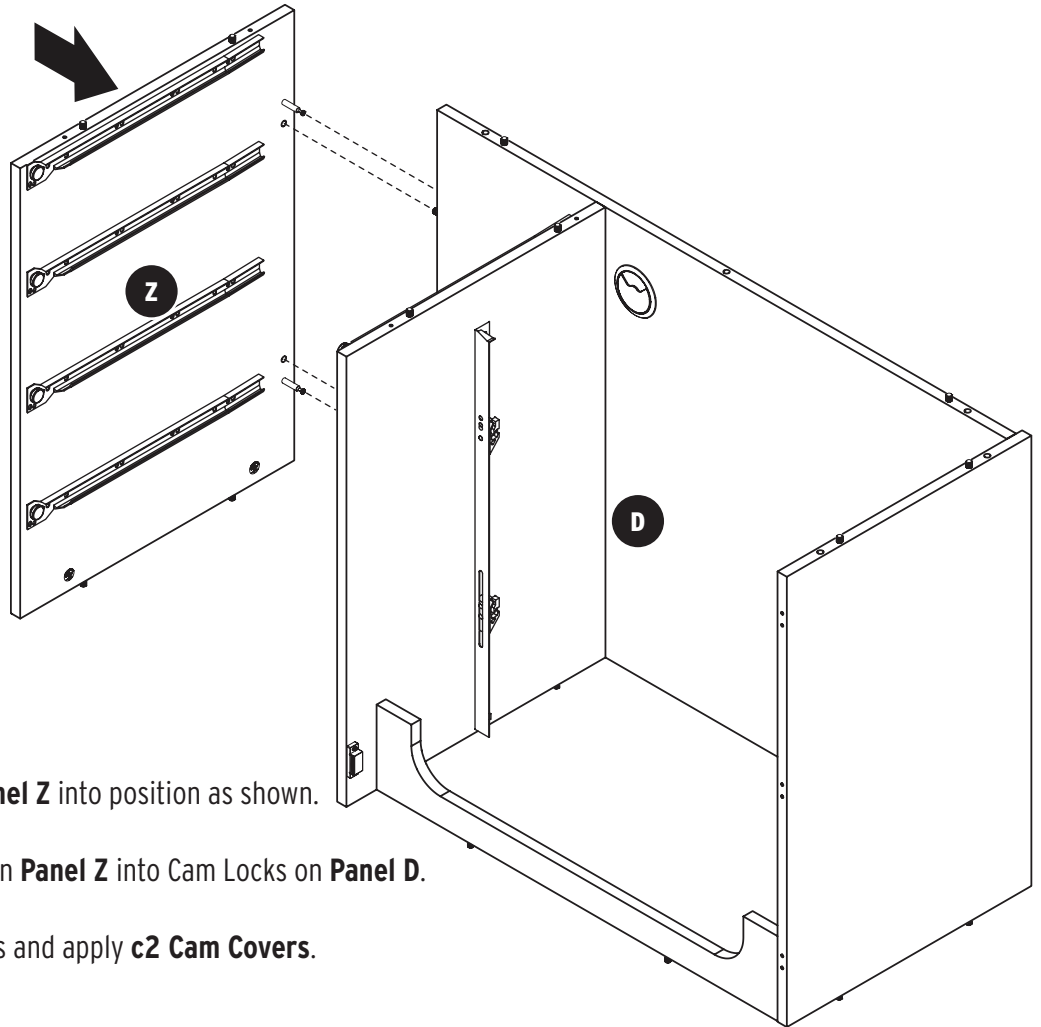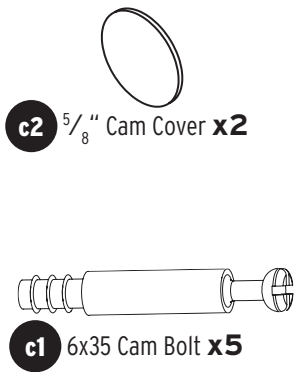

Carefully slide **Panel Z** into position as shown.


Guide Cam Bolts on **Panel Z** into Cam Locks on **Panel D**.

Tighten Cam Locks and apply **c2 Cam Covers**.

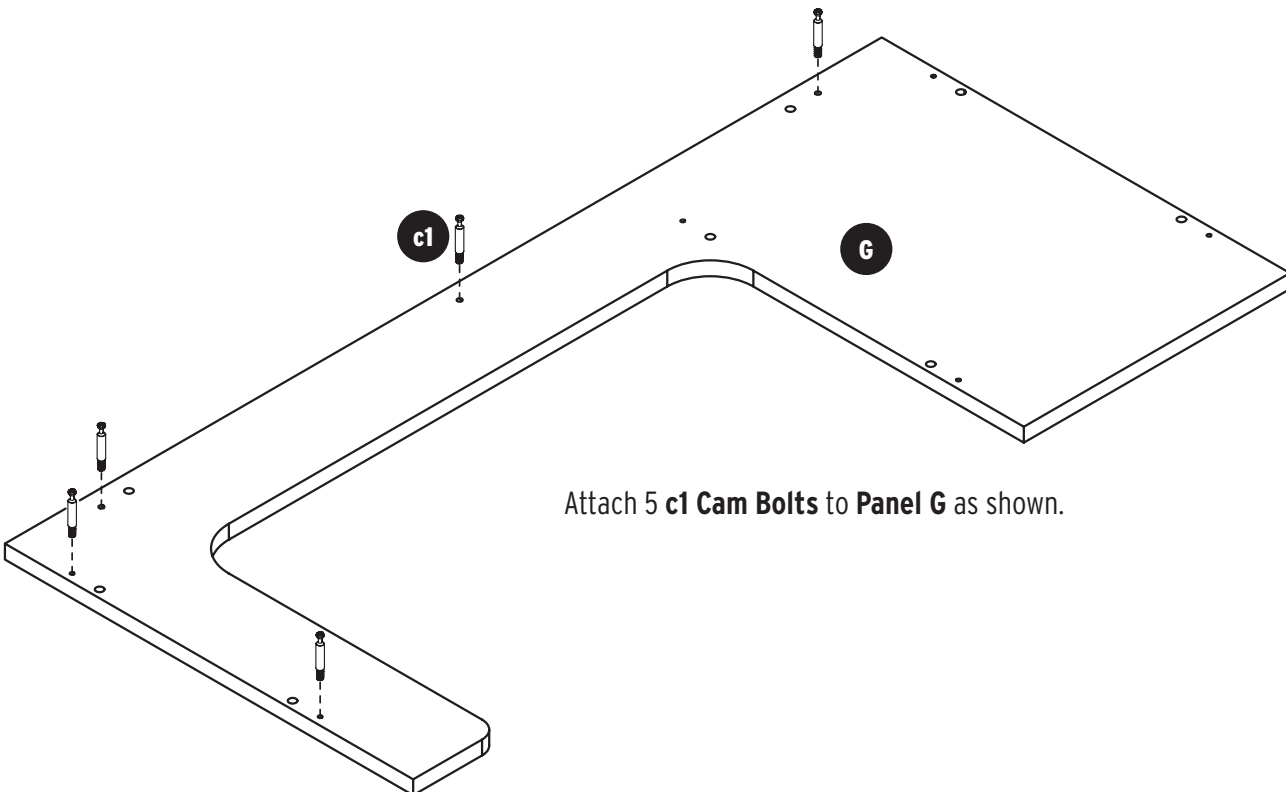

Attach 5 **c1 Cam Bolts** to **Panel G** as shown.

Step 2: Bottom Panel

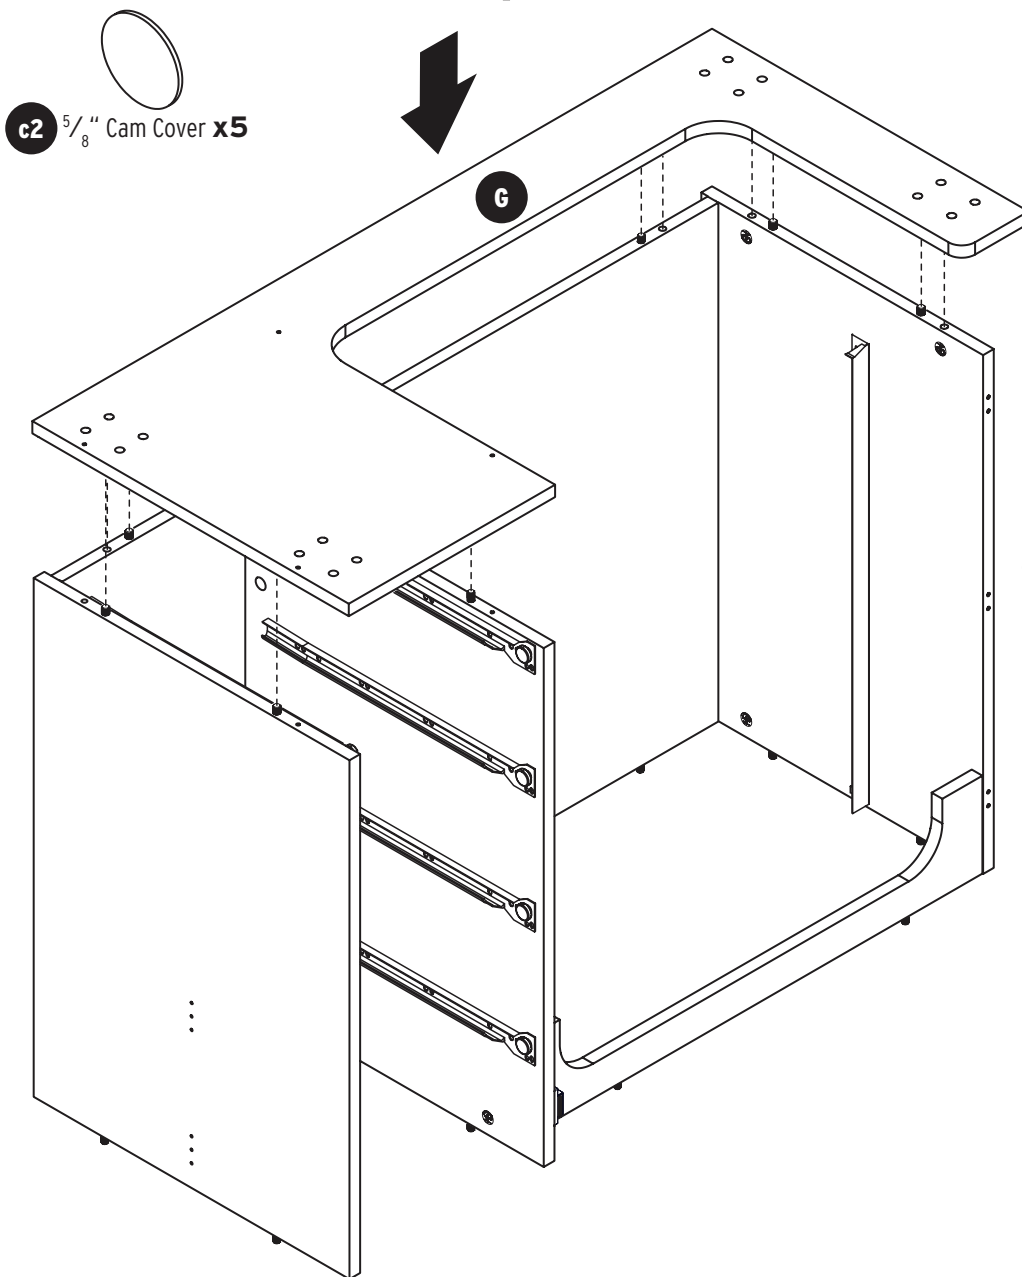

Carefully slide the **Panel G** into position as shown.

Guide Cam Bolts on **Panel G** into Cam Locks on panels X and D.


Tighten Cam Locks and apply **c2 Cam Covers**.

Step 2: Bottom Panel




s7 Screw **x4**


Finish securing **Panel G** to the cabinet
with 4 **s7** Screws.

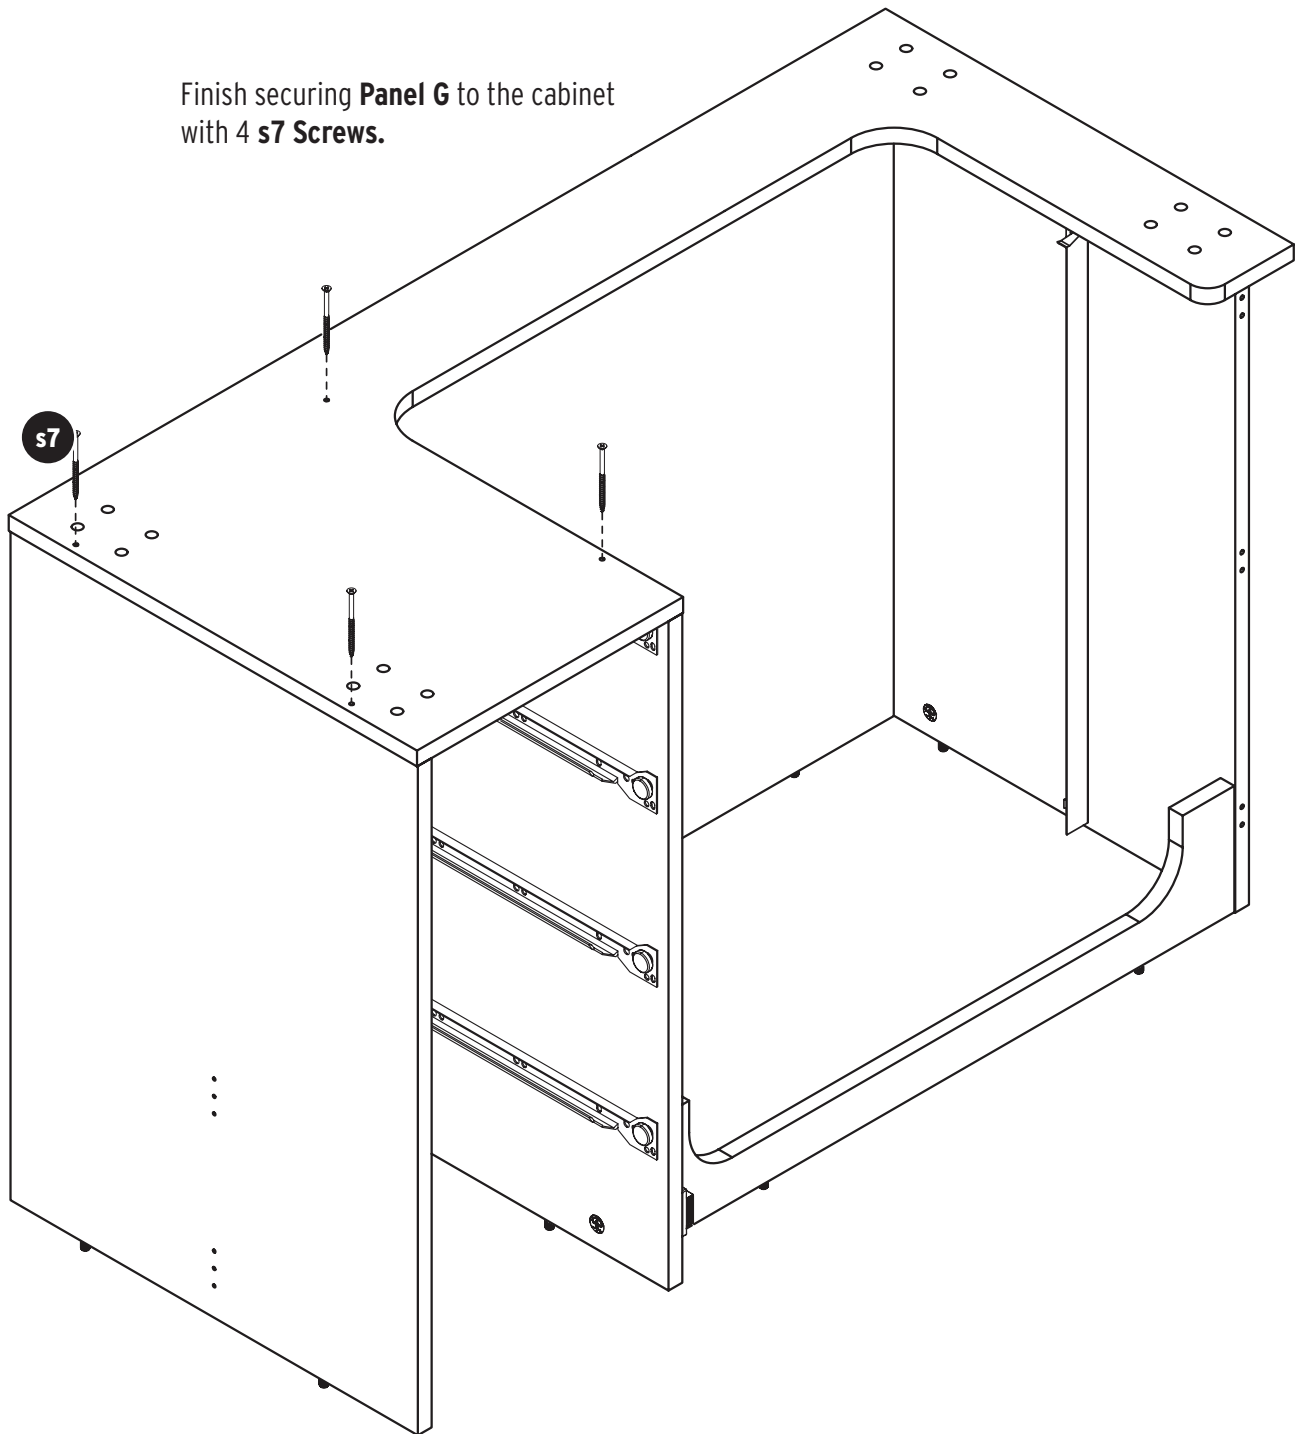


Step 2: Bottom Panel

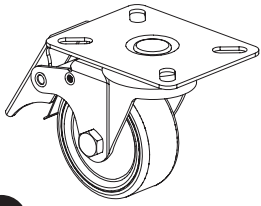

t1 Locking Plate Caster **x2**

 

b1 8x16 Fix Bolt **16**

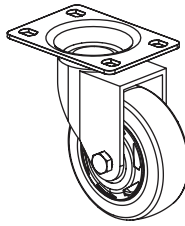

t3 Non-Locking Plate Caster **x2**





a Allen Wrench **x1**

Attach **t1** Locking Plate Casters into the front edge of **Panel G**.


Attach **t3** Non-Locking Plate Casters into the back edge of **Panel G**.

Secure with **c1** Fix Bolts.

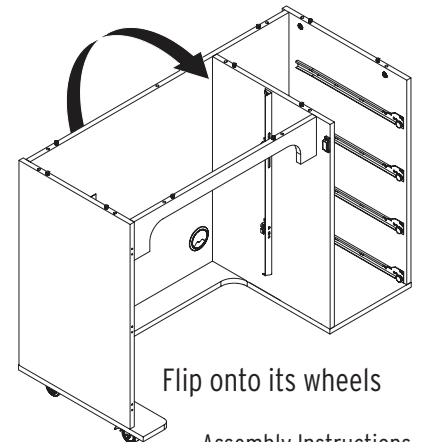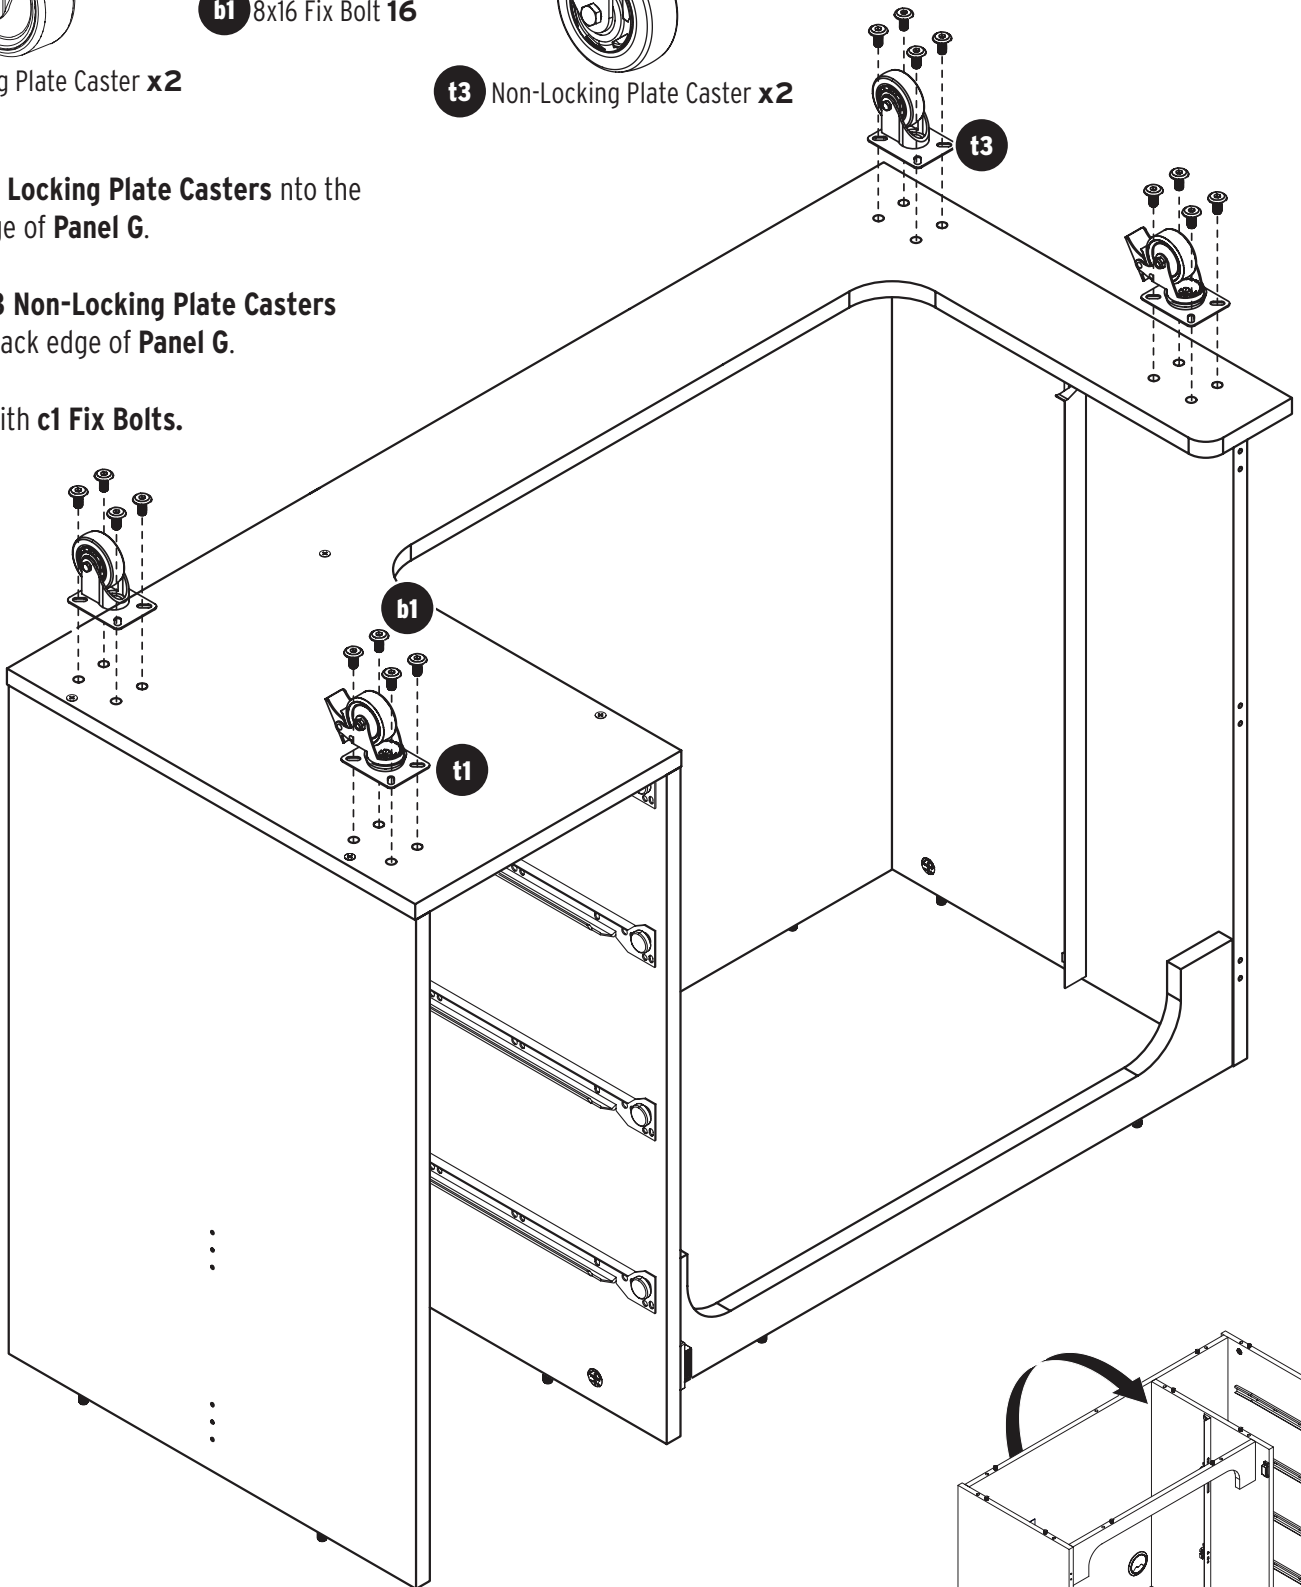

Flip onto its wheels

 Step 3: Leaf Support




h1 Hinge **x2**





s1 3.5x14 Screw **x12**



pp 3M Adhesive Panel Protector **x1**

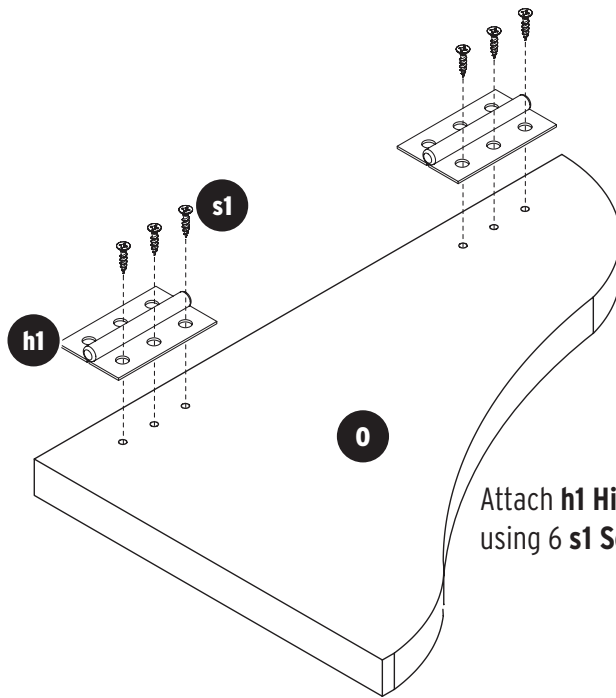

Attach **h1** Hinges to **Panel 0** using 6 **s1** Screws.

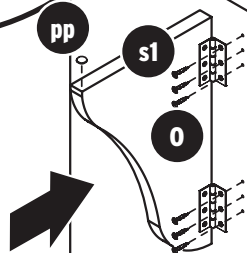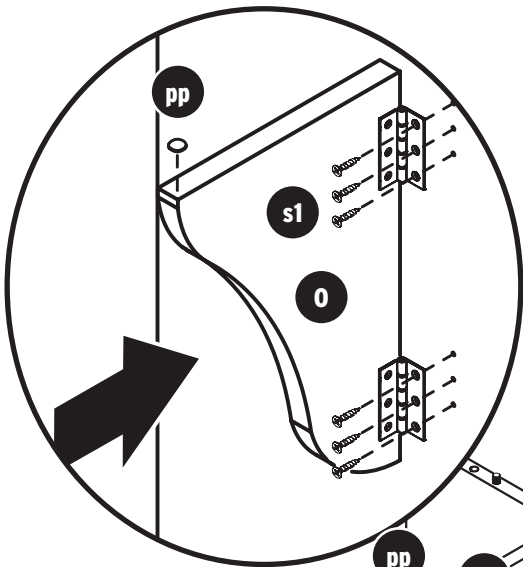


Attach **Panel 0** to **Panel Z** through the **h1** Hinges using 6 **s1** Screws.

Add **pp** Panel Protector to the top edge of **Panel 0**.

Step 4: Door


s2 3x14Screw **x12**

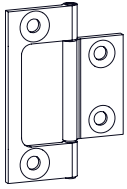


h2 Flush Hinge **x3**



 c3 12mm Cam Lock **x3**




d1 8x30 Dowel Pin **x2**

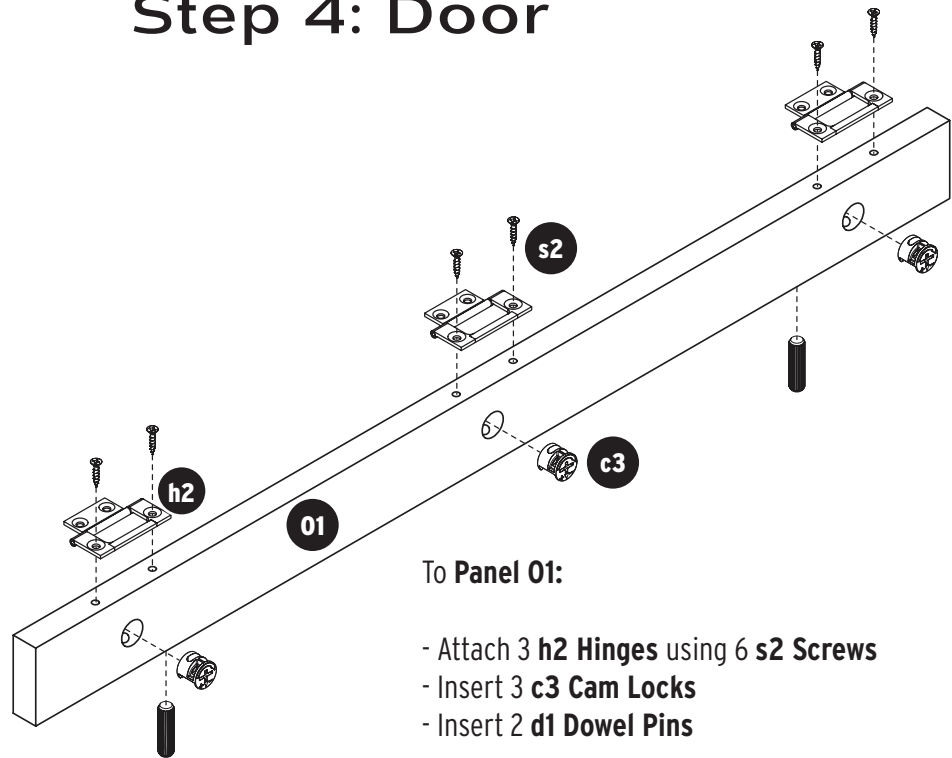

To **Panel 01**:

- Attach 3 **h2** Hinges using 6 **s2** Screws
- Insert 3 **c3** Cam Locks
- Insert 2 **d1** Dowel Pins

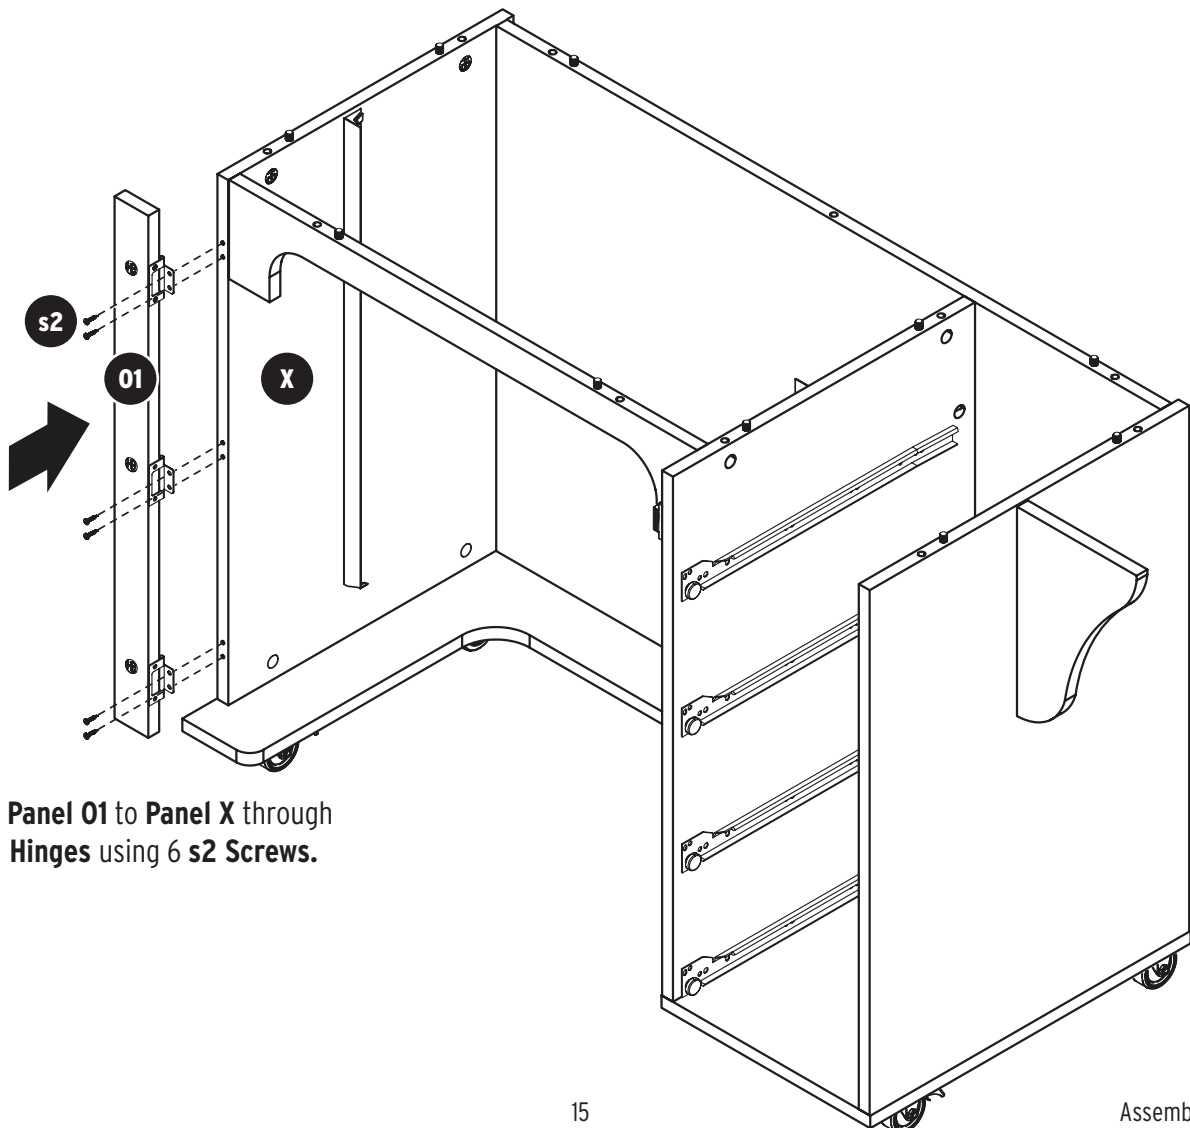

Attach **Panel 01** to **Panel X** through the **h2** Hinges using 6 **s2** Screws.



Step 4: Door

c2 $\frac{5}{8}$ " Cam Cover **x9**

c1 6x35 Cam Bolt **x9**

c4 10mm Cam Lock **x14**

Insert 4 **c4** Cam Locks and 2 **c1** Cam Bolts into each **Panel 05**.

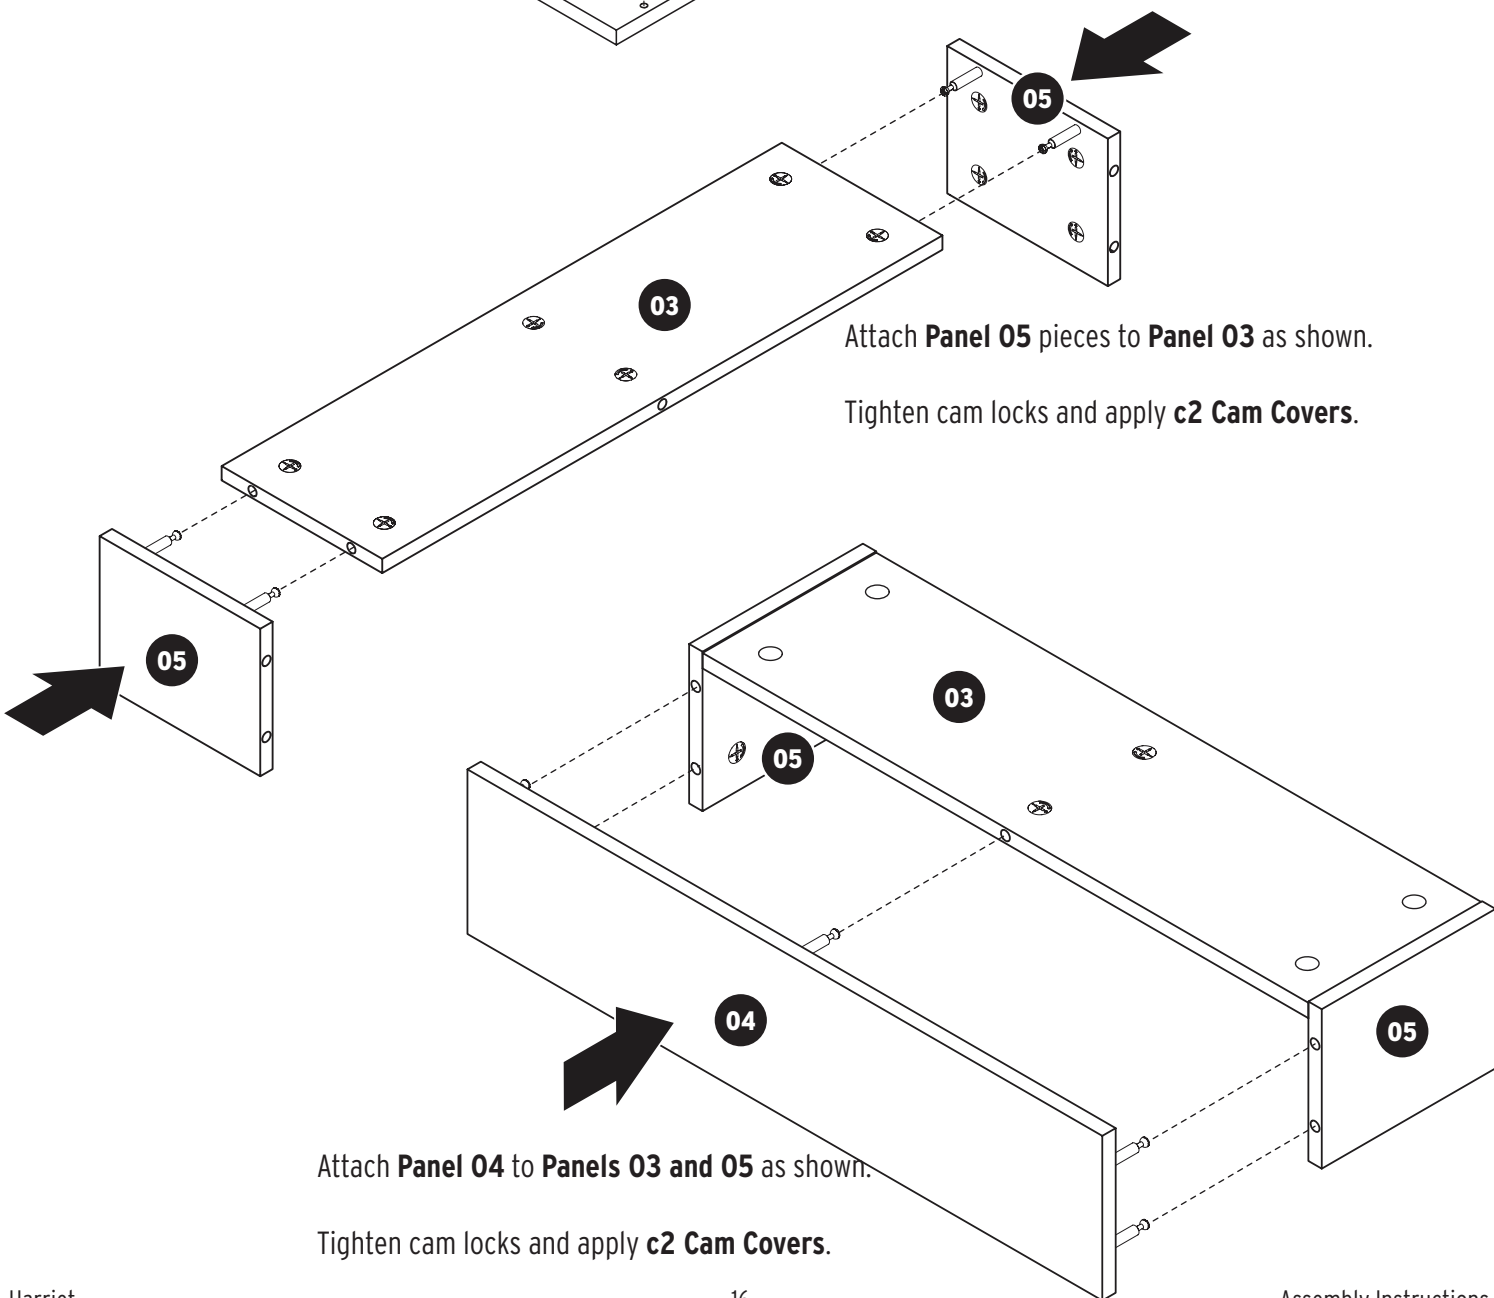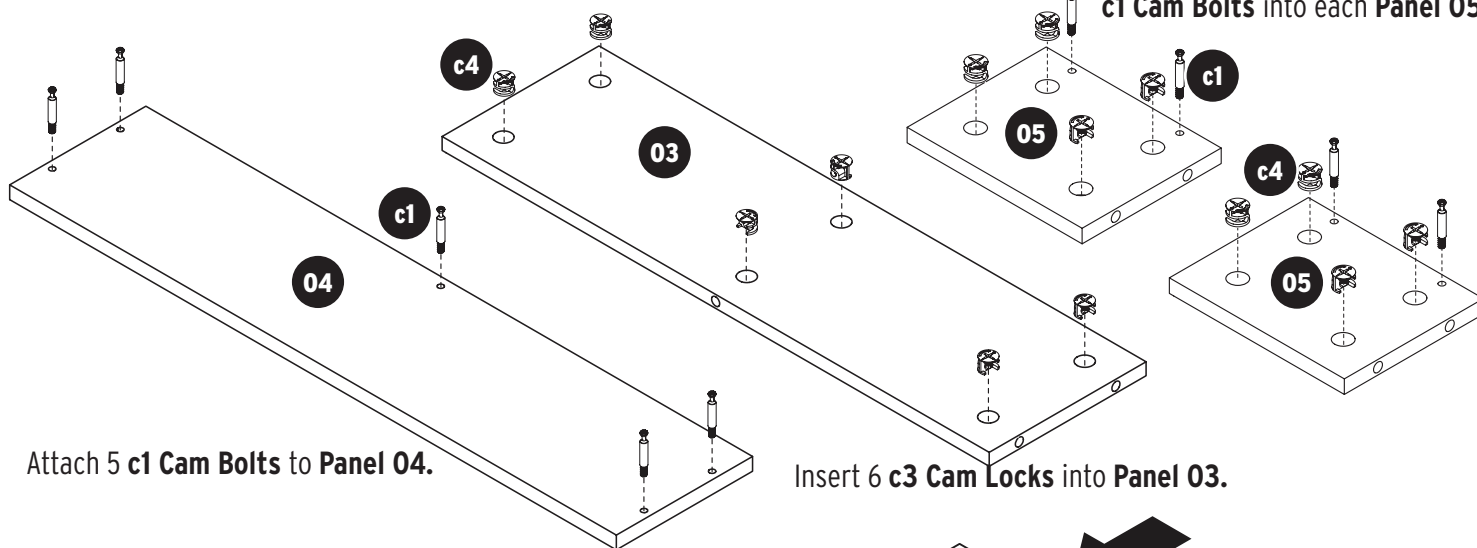

Step 4: Door




c1 6x35 Cam Bolt **x8**




s1 3.5x14 Screw **x8**




s2 3x14 Screw **x2**

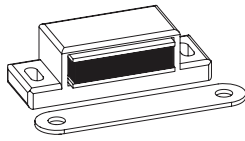

m Magnet Plate **x1**

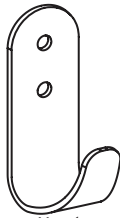


h3 Door Hooks **x4**

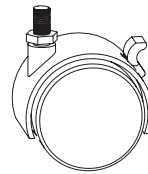

t2 Locking Stem Caster **x1**



r3 14mm Wrench **x1**

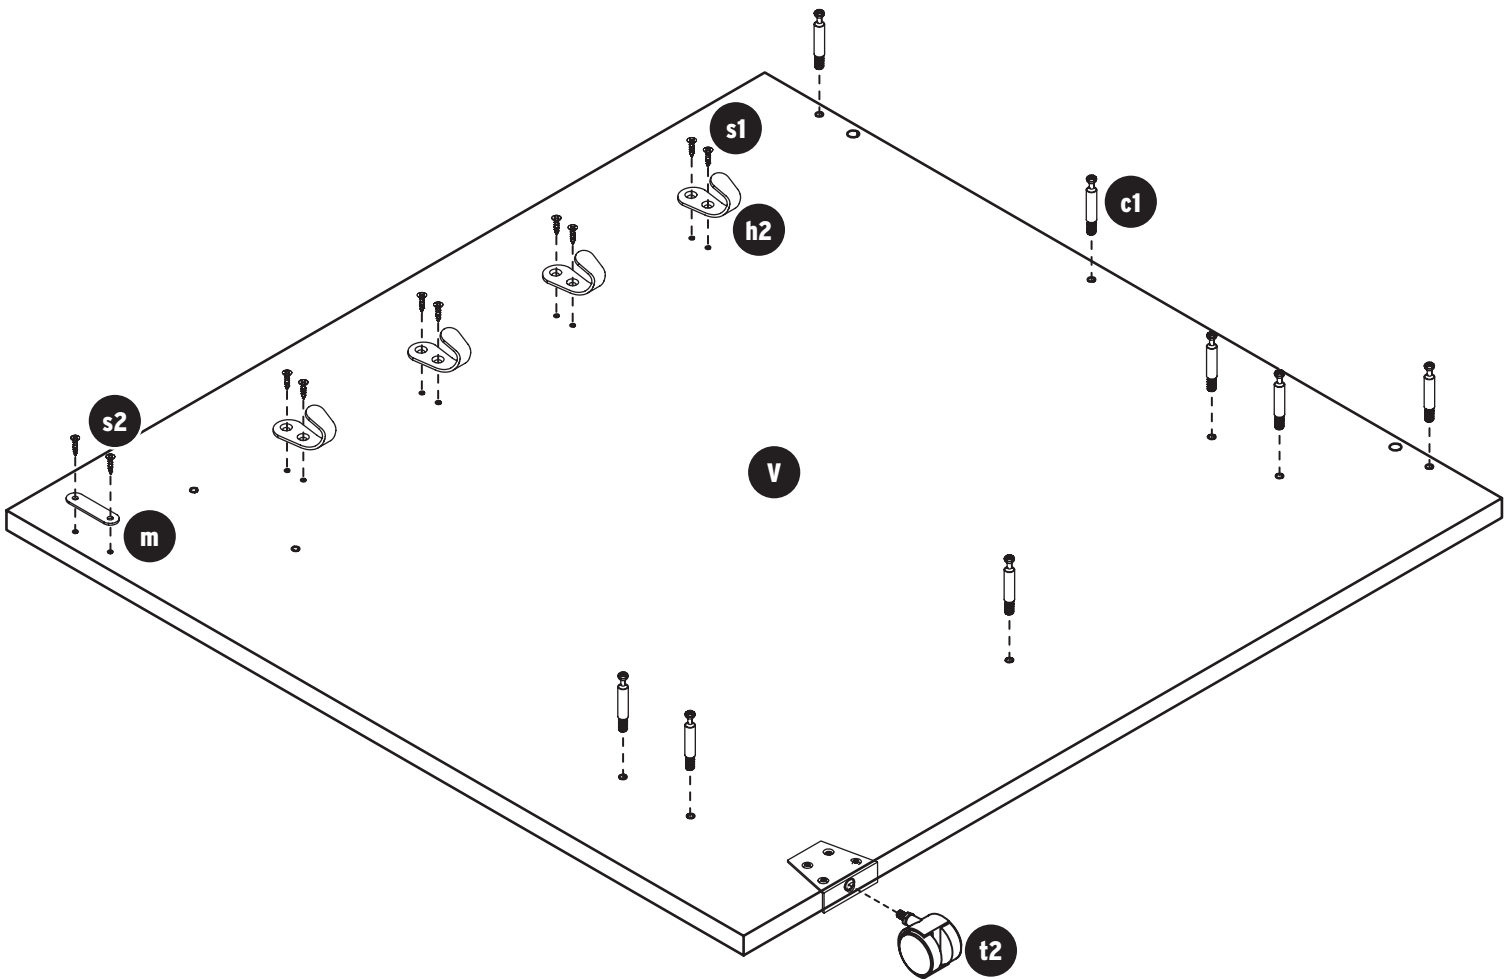

To **Panel V**:

- Attach 8 **c1** Cam Bolts
- Attach **m** Magnet Plate using 2 **s2** Screws.
- Attach 4 **h4** Hooks using 2 **s1** Screws per hook (8 **s1** Screws)
- Attach **b3** Caster Bracket using 4 **s1** Screws.
- Insert **t2** Locking Stem Caster into caster bracket and tighten with **r3** Wrench

Step 4: Door



h Handle **x1**




b2 4x20 Fix Bolt **x2**



pp 3M Adhesive Panel Protector **x4**




c2 $\frac{5}{8}$ " Cam Cover **x8**

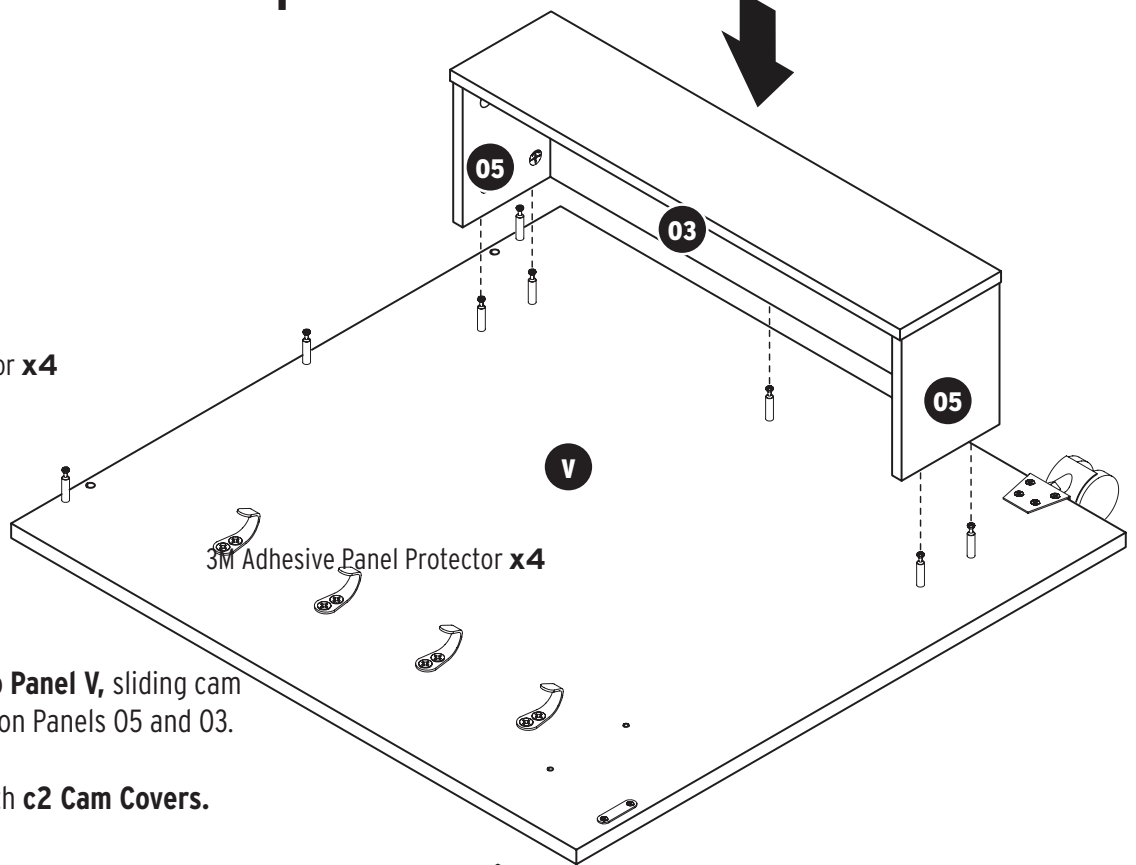

Attach the Door Bin Assembly to **Panel V**, sliding cam bolts on Panel V into cam locks on Panels 05 and 03.

Tighten cam locks and cover with **c2 Cam Covers**.

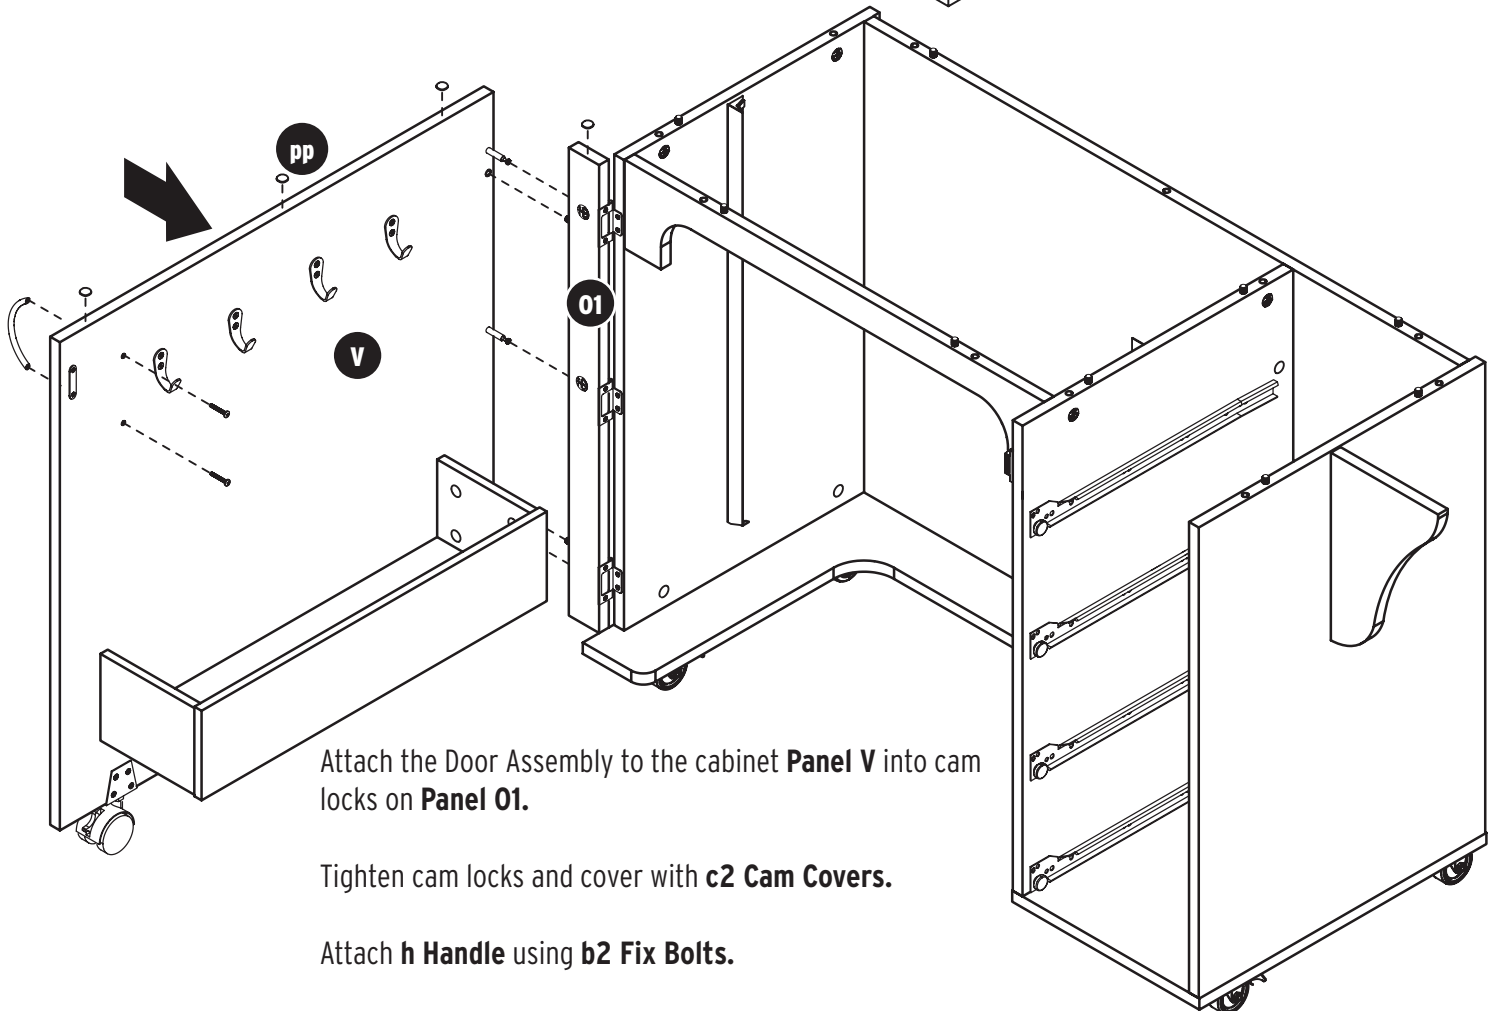

Attach the Door Assembly to the cabinet **Panel V** into cam locks on **Panel 01**.

Tighten cam locks and cover with **c2 Cam Covers**.

Attach **h Handle** using **b2 Fix Bolts**.

Evenly space **pp Panel Protectors** as shown.



Step 5: Hydraulic Lift Installation

HYDRAULIC LIFT INSTALLATION WARNING:

DO NOT remove the small wooden block from the Lift until assembly is complete. If the block is removed or falls out before lift assembly is complete, the cables will retract, making installation more difficult. If the block falls out before complete assembly, please call Customer Service at 1-800-533-7347, ext. 1 for assistance, or visit www.arrowsewing.com/assembly and find the "Alternate Sewing Lift Installation" video.


For video instructions, please visit www.arrowsewing.com/assembly and find the "How to Install Your Hydraulic Lift" video.

This illustration shows the back view of the **Lift**. Notice the wooden block, red ribbon, and zip ties; the wooden block holds the piston in place so that the cables can be easily handled and inserted into the **Lift Rails** installed on your cabinet. Do not pull on the red ribbon or remove the zip ties just yet!

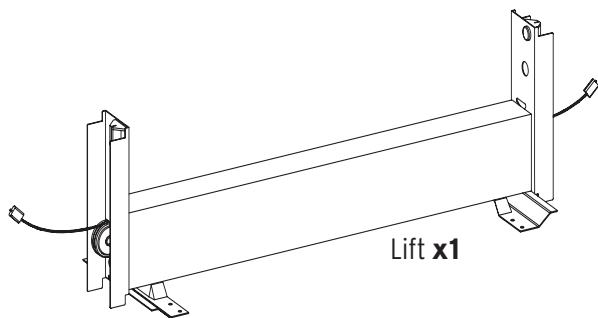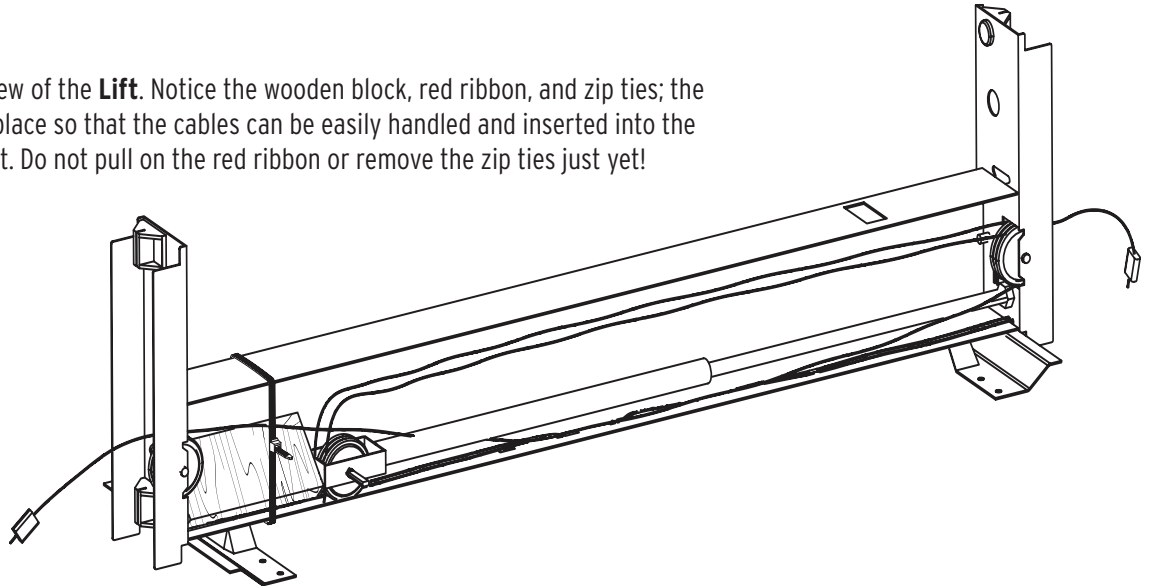


s1 3.5x14 Screw **x4**

Attach the **Lift** to **Panel A3** using **s1** Screws.

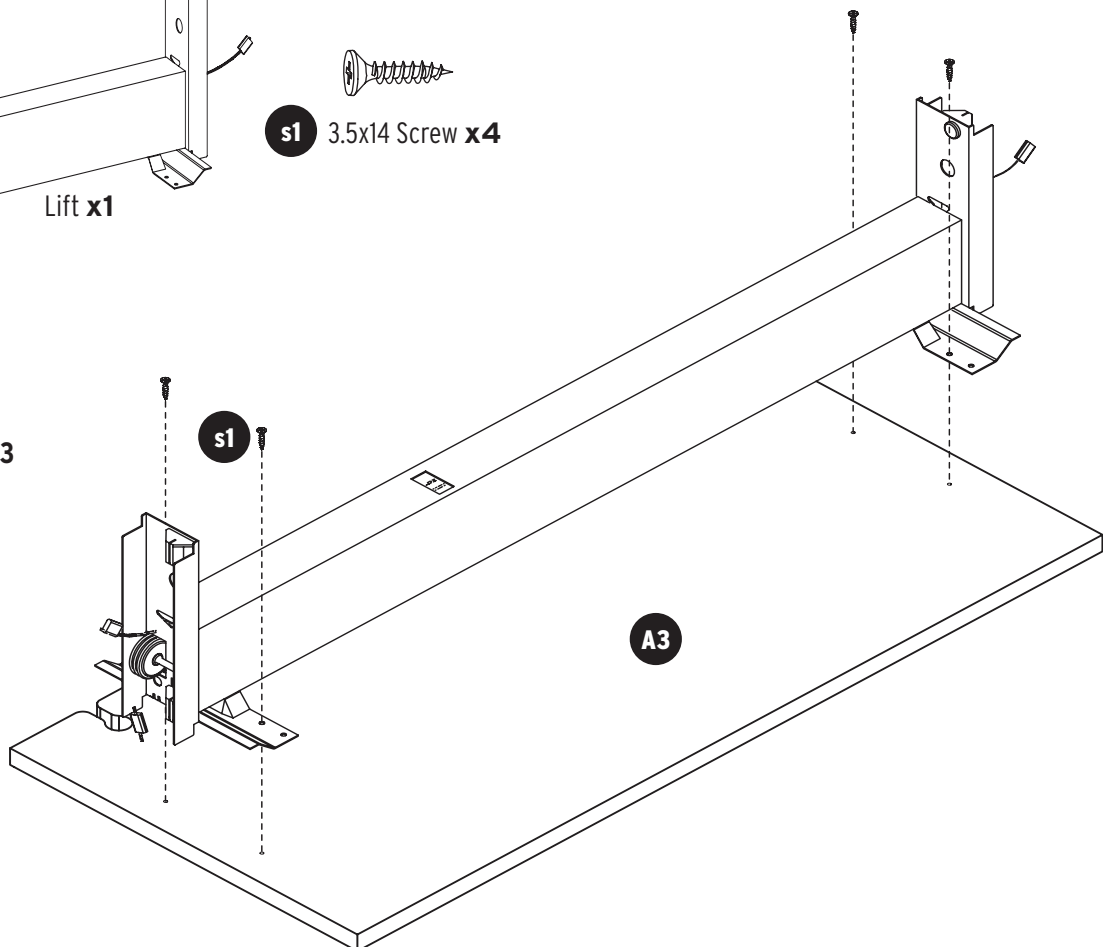

Step 5: Hydraulic Lift Installation

For video lift installation instructions, visit www.arrowsewing.com/assembly and find the "Installing Your Hydraulic Lift" video.

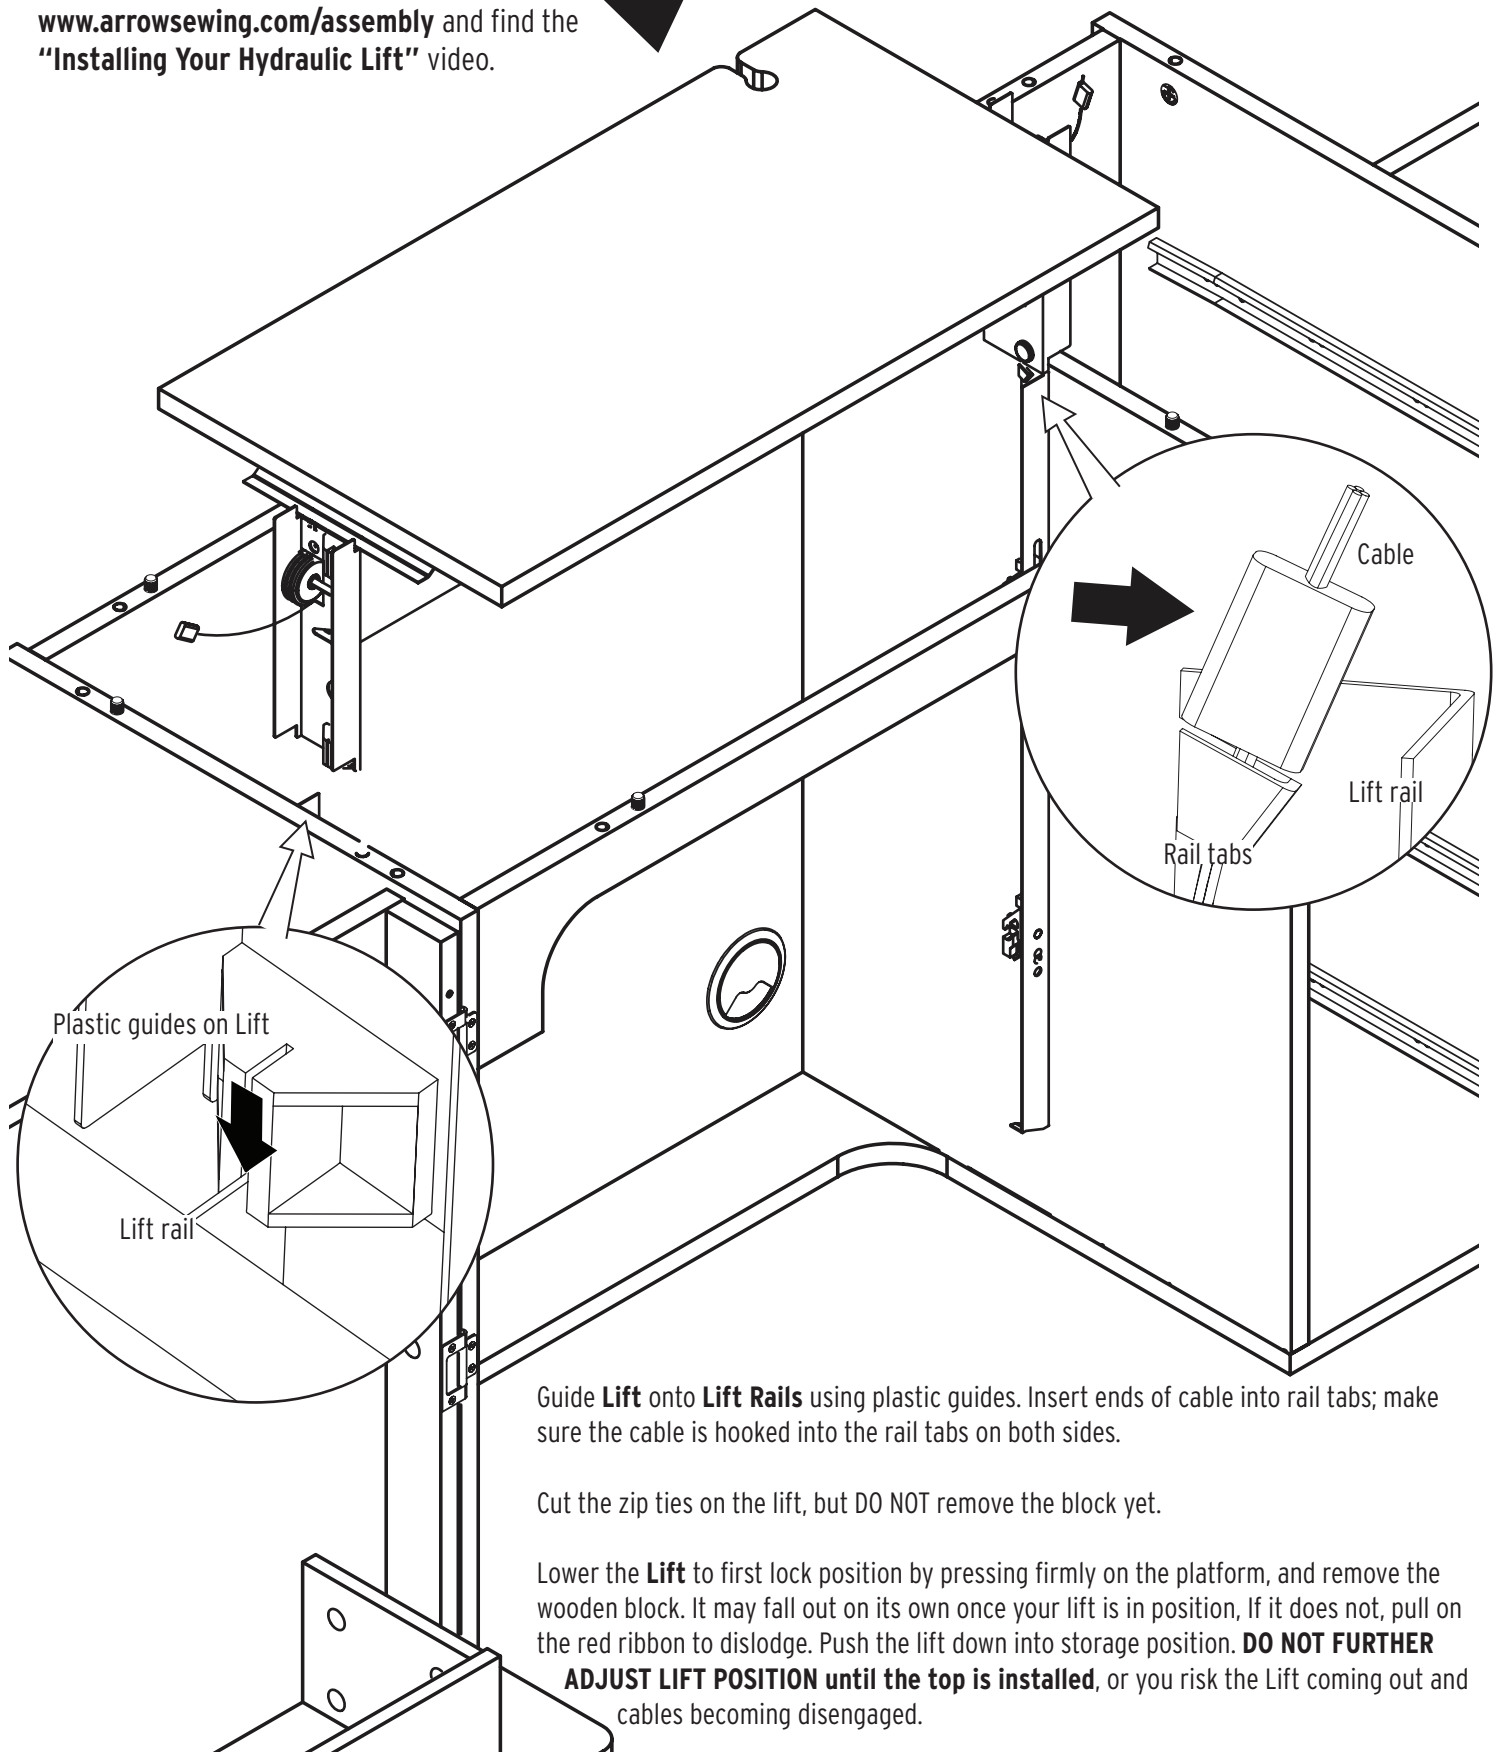

Guide **Lift** onto **Lift Rails** using plastic guides. Insert ends of cable into rail tabs; make sure the cable is hooked into the rail tabs on both sides.


Cut the zip ties on the lift, but **DO NOT** remove the block yet.

Lower the **Lift** to first lock position by pressing firmly on the platform, and remove the wooden block. It may fall out on its own once your lift is in position. If it does not, pull on the red ribbon to dislodge. Push the lift down into storage position. **DO NOT FURTHER ADJUST LIFT POSITION until the top is installed**, or you risk the Lift coming out and cables becoming disengaged.

Step 6: Cabinet Top



c1 6x35 Cam Bolt **x11**

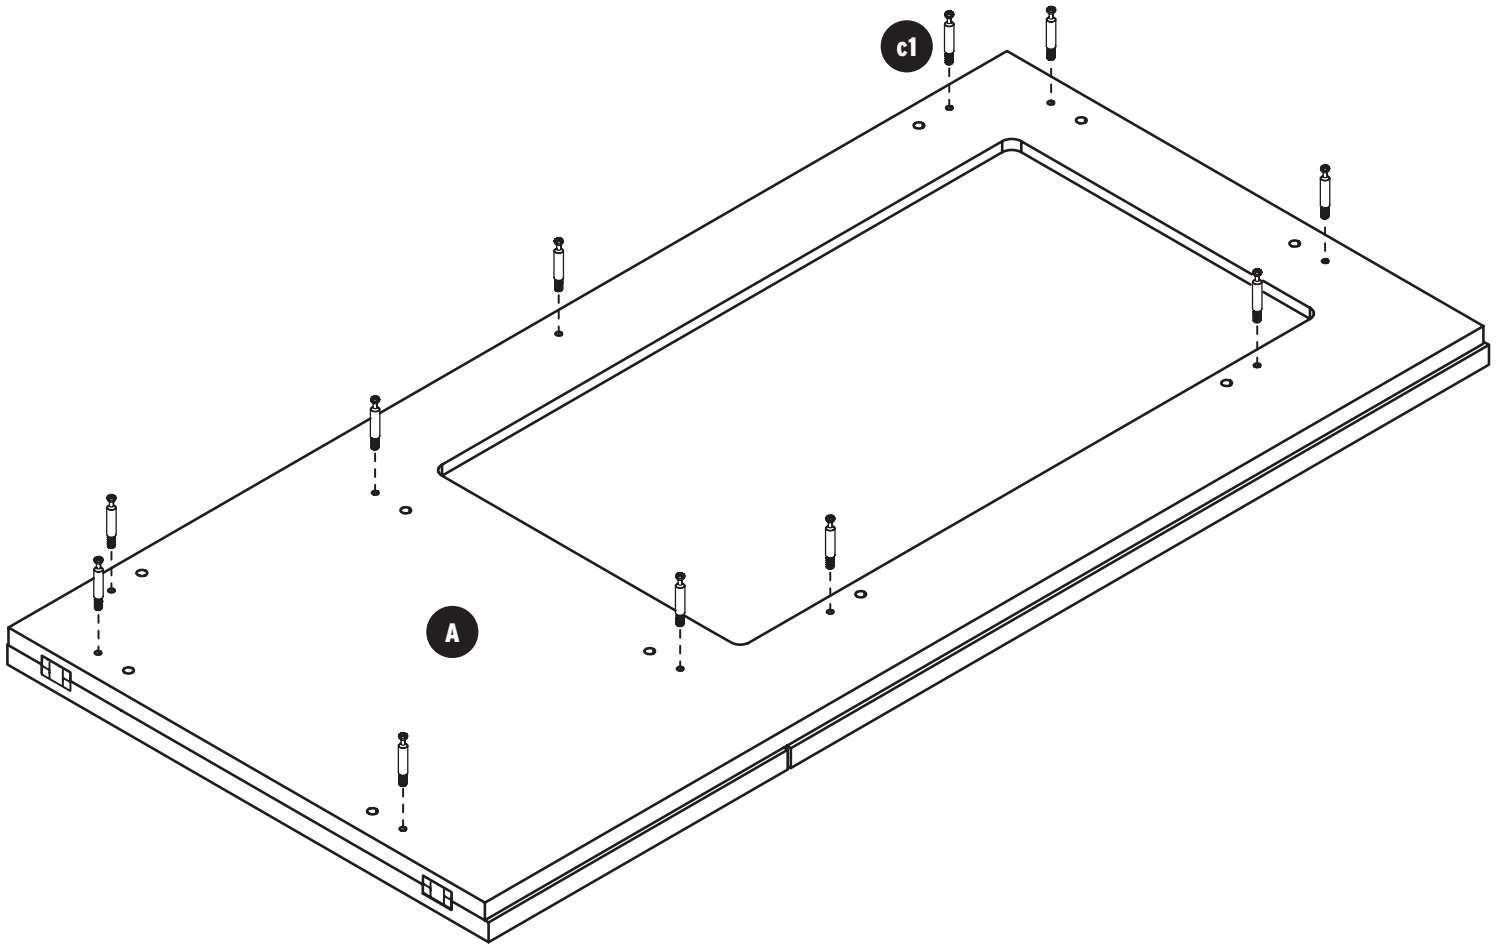

Attach 11 **c1 Cam Bolts** to **Panel A** as shown.


Step 6: Cabinet Top



c2 $\frac{5}{8}$ " Cam Cover **x11**

With the lift platform (**Panel A3**) lowered into Storage Position, carefully lower the cabinet top (pre-assembled **Panels A/A1/A2**) onto the cabinet assembly, guiding cam bolts on the cabinet top into cam locks on the cabinet shell.

Tighten cam locks and apply **c2 Cam Covers**.

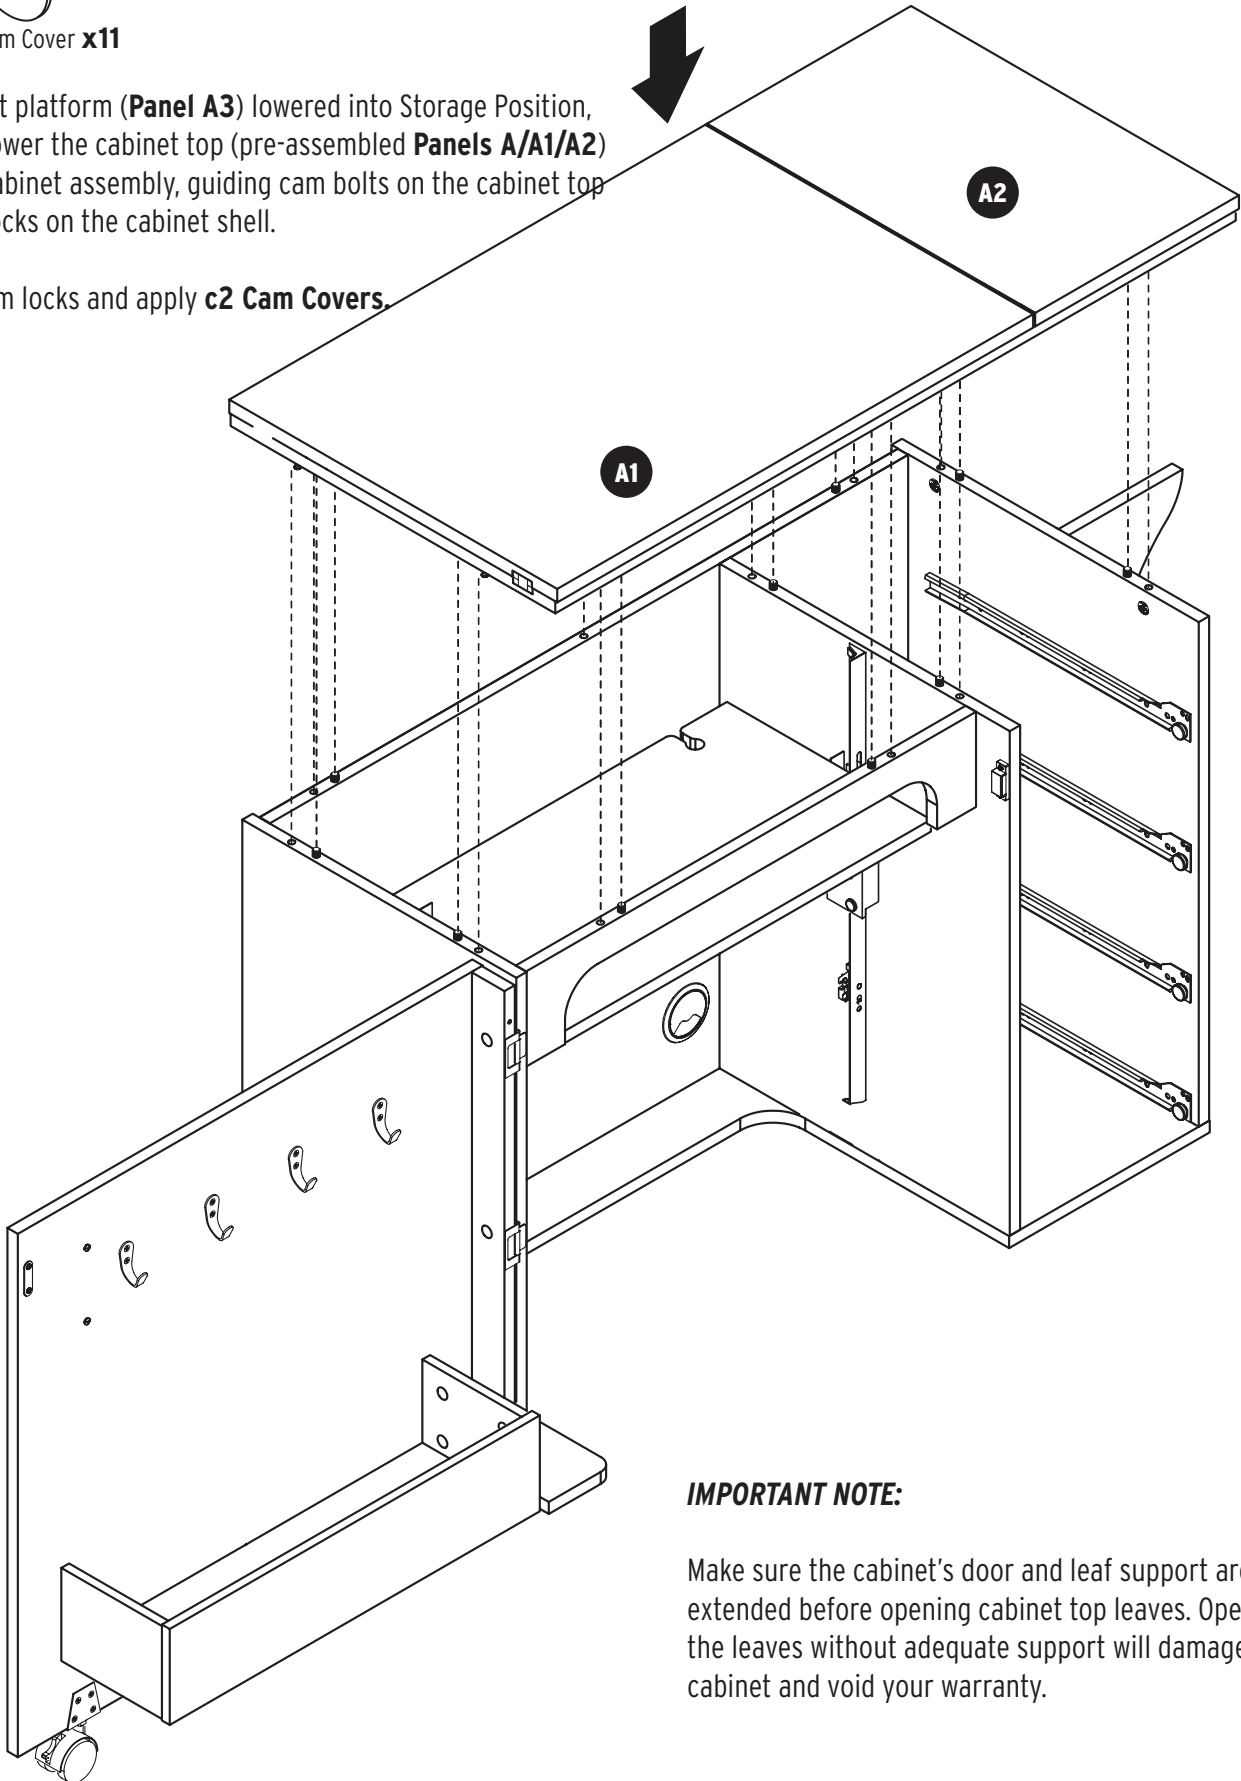

IMPORTANT NOTE:

Make sure the cabinet's door and leaf support are extended before opening cabinet top leaves. Opening the leaves without adequate support will damage your cabinet and void your warranty.


Step 7: Drawers




c1 6x35 Cam Bolt **x16**



c4 10mm Cam Lock **x16**

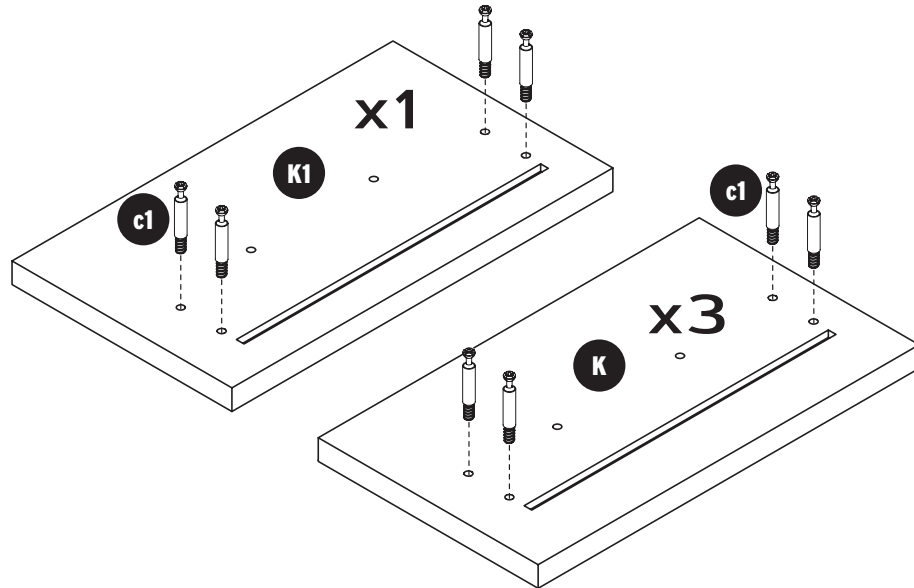



Insert 4 **c1 Cam Bolts** to each **Drawer Front (Panels K1 (x1) and K (x3) - 16 cam bolts total.**

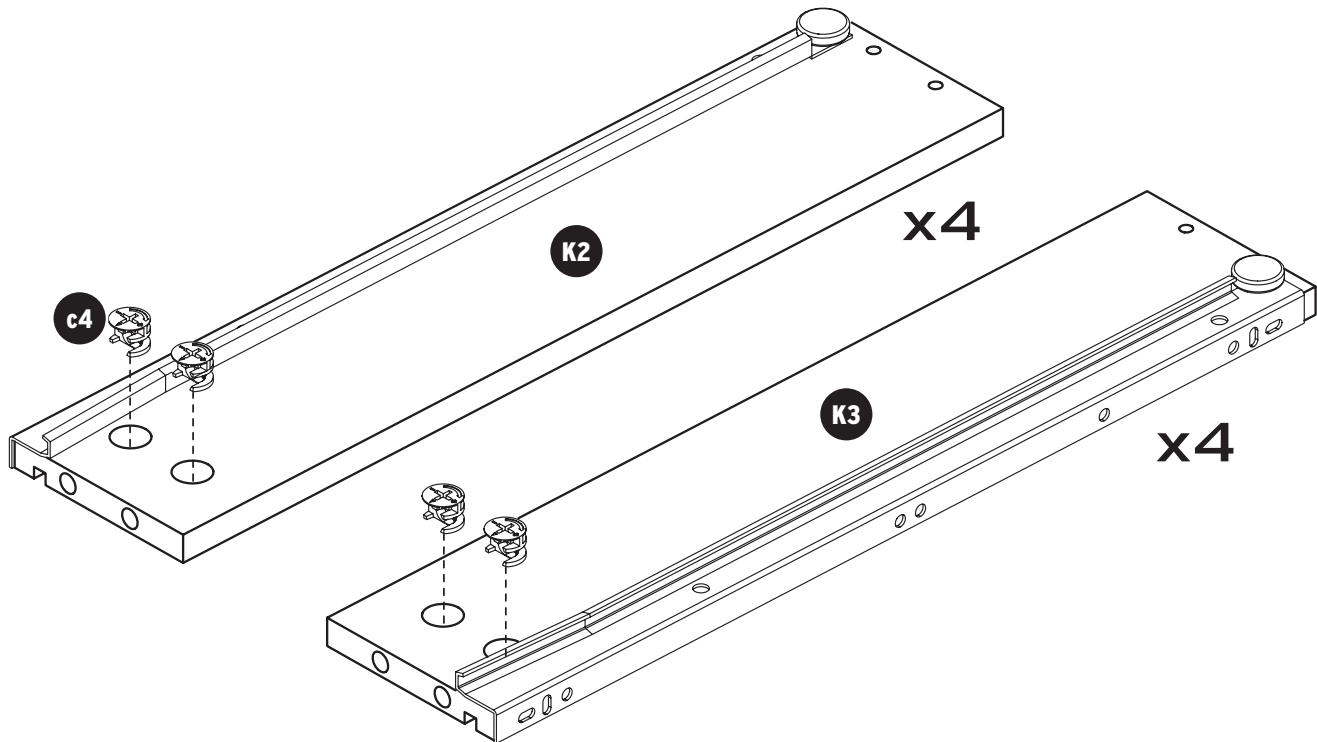

Insert 2 **c4 Cam Locks** to each **Drawer Side (Panels K2 (x4) and K3 (x4) - 16 cam locks total.**

Step 7: Drawers


 **c2** $\frac{5}{8}$ " Cam Cover **x16**

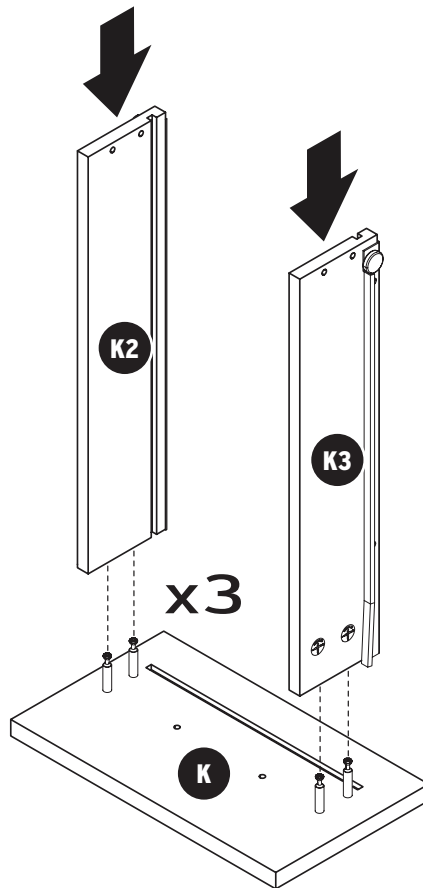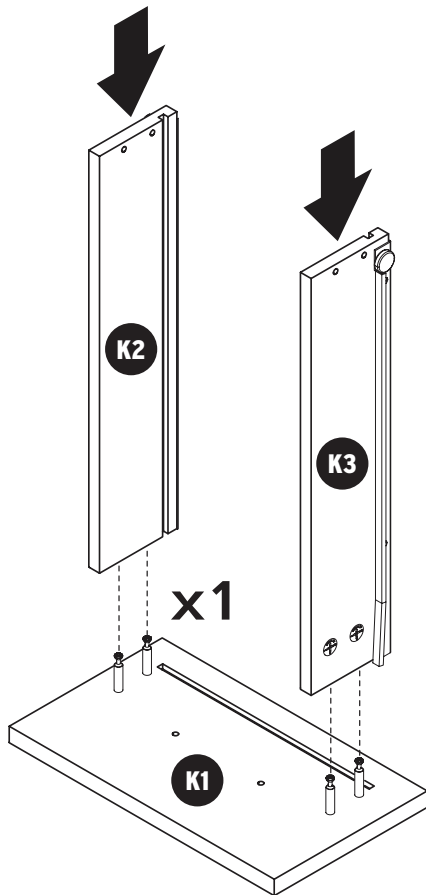



Attach **Drawer Sides** to **Drawer Fronts**, guiding cam bolts on **Panels K1** (x1) and **K** (x3) into cam locks on **Panels K2** (x4) and **K3** (x4).

Tighten cam locks and cover with **c2 Cam Covers**.


Slide **Drawer Bottoms (Panel K5)** into the routed grooves on **Drawer Sides** and **Drawer Fronts** as shown.

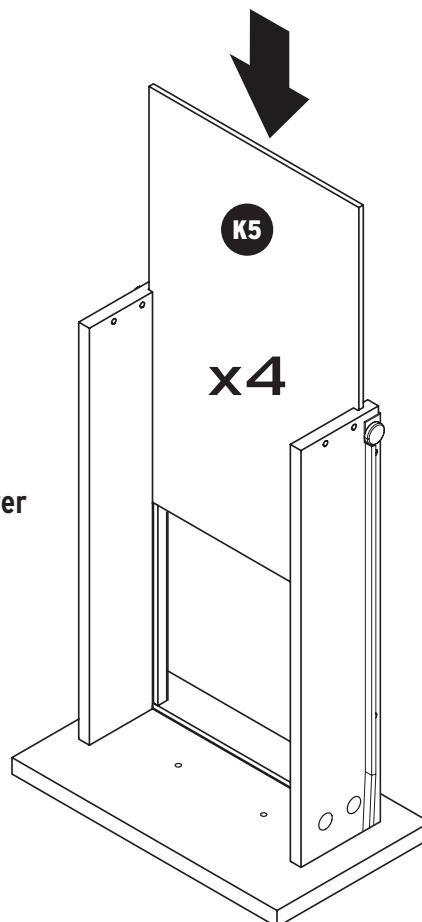

 Step 7: Drawers

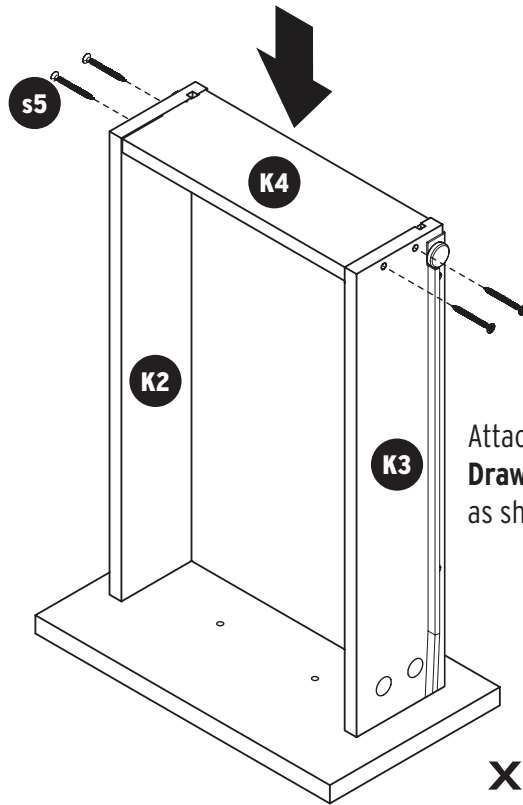


Attach **Drawer Backs (Panel K4)** to **Drawer Sides (Panels K2 and K3)** as shown, securing with **s5 Screws**.

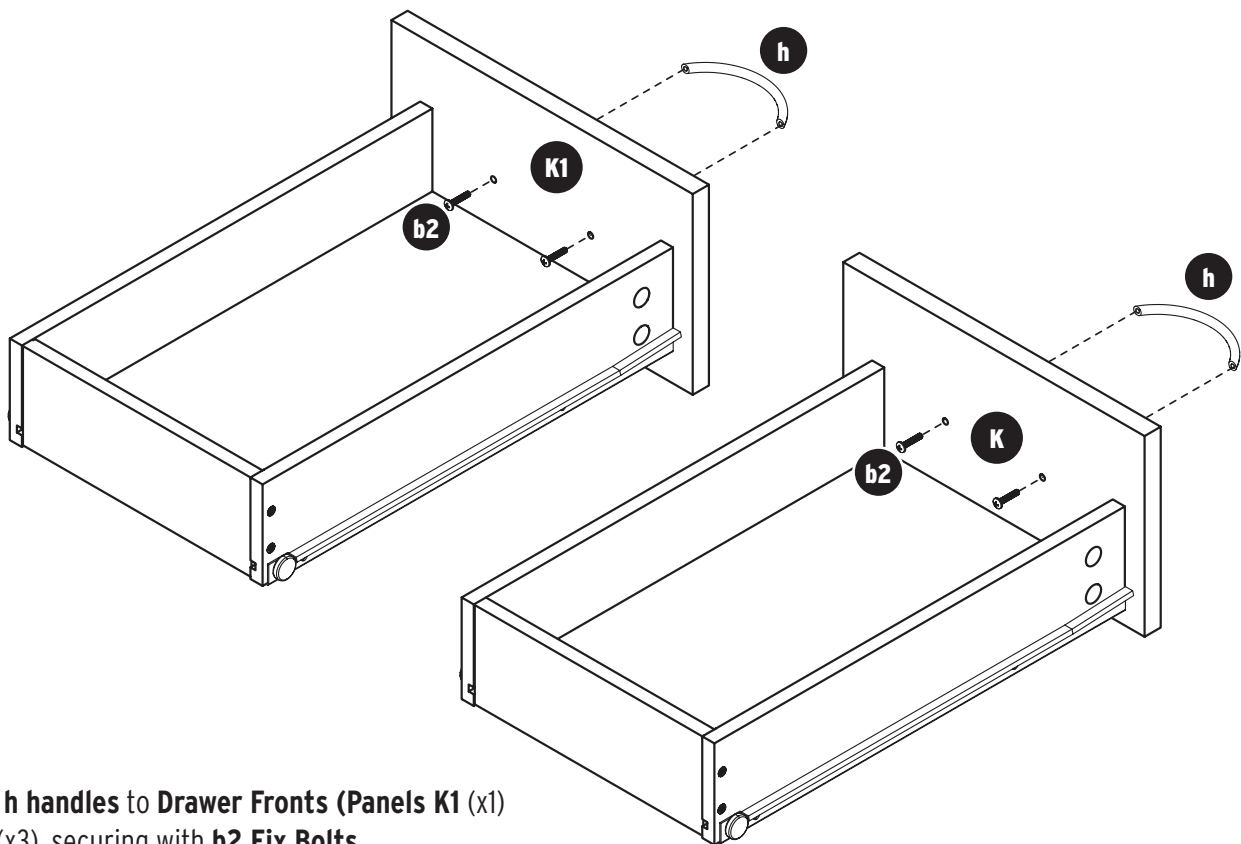

Attach **h handles** to **Drawer Fronts (Panels K1 (x1) and K (x3))**, securing with **b2 Fix Bolts**.

Completed Harriet Sewing Cabinet

Carefully slide drawers into the cabinet as shown.

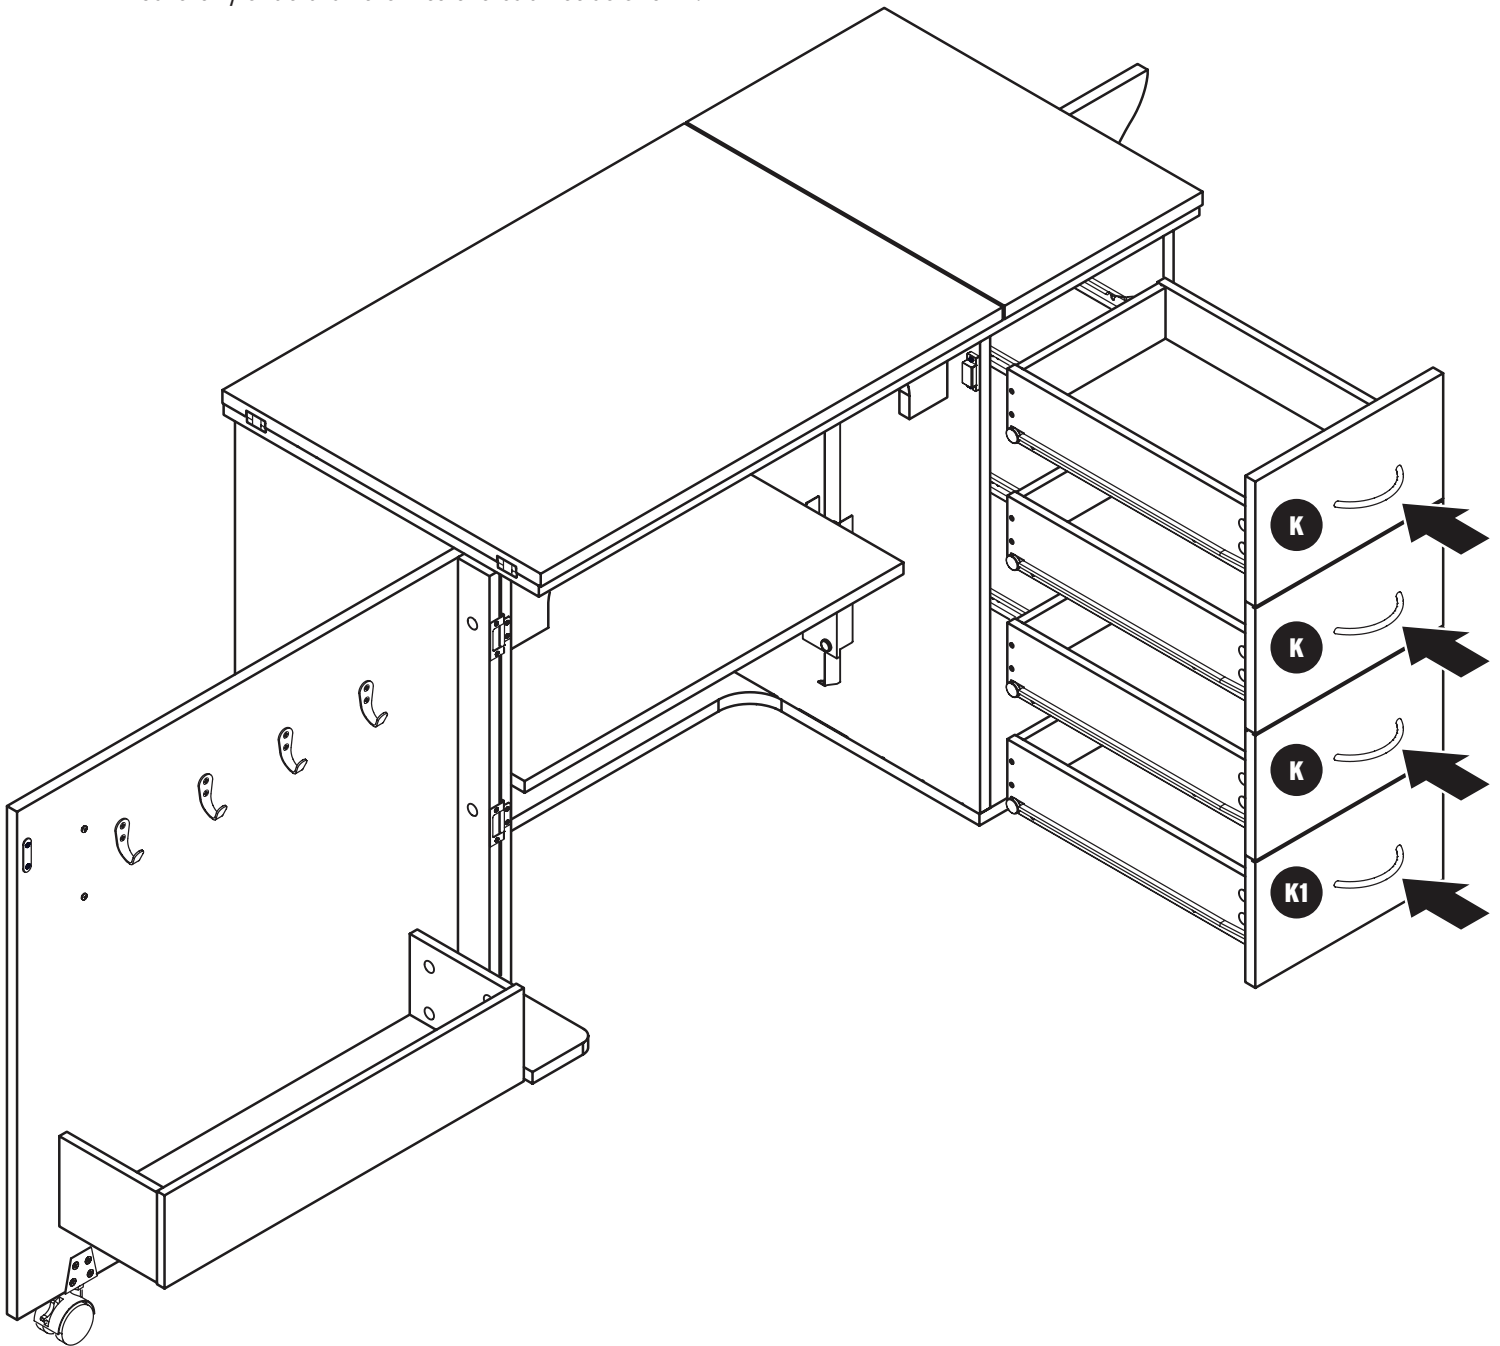

Congratulations! A better sewing experience awaits!

Visit arrowsewing.com/assembly for helpful video tutorials on hydraulic lift adjustment and operation.



LIMITED WARRANTY

Arrow Classic Sewing Furniture 10-Year Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC (Arrow) provides limited warranty coverage to the original purchaser of this product against defects in materials or workmanship of Arrow furniture components for a period of ten years from the date of purchase. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow Companies, LLC and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a warranty claim, customer may receive brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the following: Failure to follow product assembly instructions, information or warnings; misuse or abuse; intentional damage; fire, flood, alteration or modification of the product; use of the product in a manner inconsistent with its intended use; any condition resulting from incorrect or inadequate maintenance, cleaning, care or neglect; cuts or scratches; caster damage as a result of moving furniture fully loaded or with locked casters; damage resulting from electrical surge or lightning; or use in commercial or education environments. Arrow Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited warranty gives you specific legal rights. This limited warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/warranty.




COMPLETE YOUR SEWING STUDIO!

Elevate your sewing experience with Arrow's Best-Selling Accessories!

Custom Sewing Inserts


Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

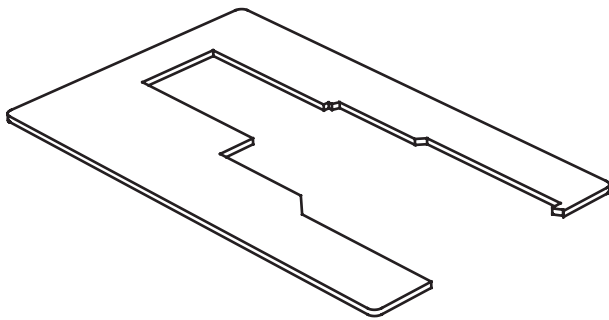

Custom Sewing Insert

Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360° swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!

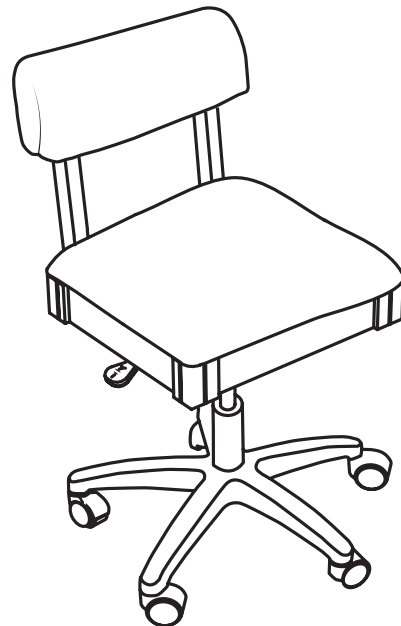

Height Adjustable Sewing Chair



P.O BOX 410 Elkhorn, WI 53121
1-800-533-7347 Ext. 1
cs@arrowsewing.com
arrowsewing.com