


ASSEMBLY INSTRUCTIONS Sydney / Sydney Lite

ITEM NO.: **SYDNEY SYDNEY LITE** K4705FI Teak Electric Lift K4705NDELRTA Lite Teak Electric Lift K4705XL Teak Hydraulic Lift K4705NDXL Lite Teak Hydraulic Lift Gray Electric Lift Lite Gray Electric Lift K4707EL K4707NDELRTA Gray Hydraulic Lift Lite Gray Hydraulic Lift K4707XL K4707NDXL K4711EL Ash White Electric Lift K4711NDELRTA Lite Ash White Electric Lift Ash White Hydraulic Lift Lite Ash White Hydraulic Lift K4711XL K4711NDXL

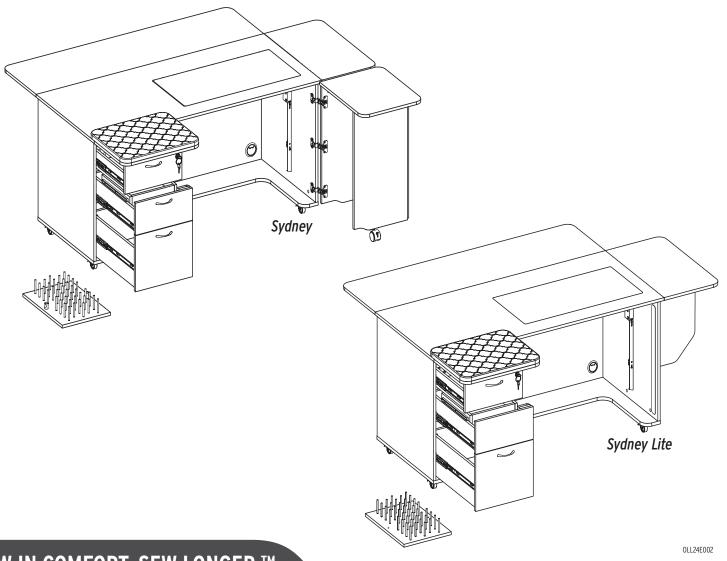

General Assembly Guidelines

1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.


2. Tools Required







3. Understanding How the Cam Fastener Works

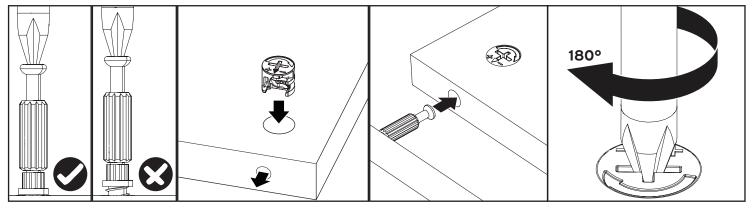

Screw cam bolts flush as illustrated.

surface. The arrow direction must be in the direction of the hole.

Press cam into hole until flush with Insert bolt through pre-drilled Turn clockwise to lock cam with bolt. hole in edge of panel.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better.




4. Glue provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.

Use and Care Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

Cleaning - To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. DO NOT use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.

Electrical and Hydraulic Lifts - Require annual lubrication with WD-40 or similar lubricant.

Parts List: Sydney* Panels

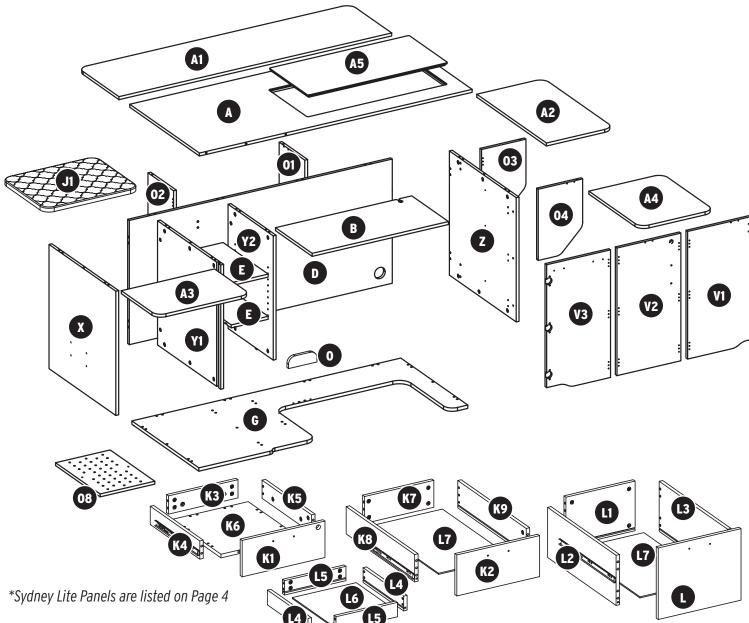


ITEM	DESCRIPTION	QTY.	вох
	Hardware Box	1	1 of 5
	Cover Plate (Sydney Lite Only)	1	1 of 5
Х	Left Panel	1	1 of 5
Y1	Left Center Panel	1	1 of 5
K1	Top Drawer Front	1	1 of 5
K2	Middle Drawer Front	1	1 of 5
К3	Top Drawer Back	1	1 of 5
K4	Top Drawer Left Side	1	1 of 5
K5	Top Drawer Right Side	1	1 of 5
K6	Top Drawer Bottom Panel	1	1 of 5
К7	Middle Drawer Back	1	1 of 5
К8	Middle Drawer Left Side	1	1 of 5
К9	Middle Drawer Right Side	1	1 of 5
L	Bottom Drawer Front	1	1 of 5
L1	Bottom Drawer Back	1	1 of 5

ITEM	DESCRIPTION	QTY.	вох
L2	Bottom Drawer Left Side	1	1 of 5
L3	Bottom Drawer Right Side	1	1 of 5
PR	Plastic Drawer Runners	2	1 of 5
A2	Right Side Leaf	1	2 of 5
G	Bottom Panel	1	2 of 5
D	Back Panel	1	2 of 5
0	Insert/Accessory Holder	1	2 of 5
В	Lift Platform	1	3 of 5
01	Right Rear Quilt Leaf Support	1	3 of 5
02	Left Rear Quilt Leaf Support	1	3 of 5
L4	Drawer Bin Side Panels	2	3 of 5
L5	Drawer Bin Front/Back Panels	2	3 of 5
L6	Drawer Bin Bottom	1	3 of 5
L7	Middle/Bottom Drawer Bottoms	2	3 of 5
A3	Drawer Cover Panel	1	3 of 5

ITEM	DESCRIPTION	QTY.	ВОХ
E	Shelf Panels	2	3 of 5
03	Right SIde Leaf Support	1	3 of 5
04	Right Side Leaf Support	1	3 of 5
08	Thread Spool Holder Panel	1	3 of 5
J1	Ironing Board	1	3 of 5
A	Top Panel	1	4 of 5
A1	Rear Quilt Leaf	1	4 of 5
MP1*	Metal Support Bar*	1	4 of 5
A5	Sewing Well Cover Panel	1	4 of 5
Z	Right Panel	1	4 of 5
Y2	Right Center Panel	1	4 of 5
V1	Door Panel 1	1	5 of 5
V2	Door Panel 2	1	5 of 5
V3	Door Panel 3	1	5 of 5
A4	Door Tabletop Panel	1	5 of 5
	Door Hardware Package	1	5 of 5

Parts List: Sydney Lite* Panels

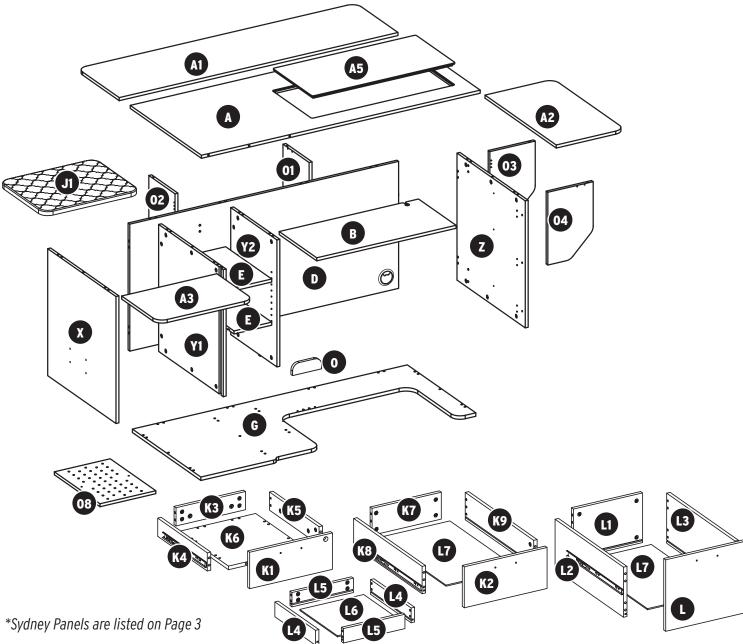


ITEM	DESCRIPTION	QTY.	вох
	Hardware Box	1	1 of 5
	Cover Plate (Sydney Lite Only)	1	1 of 5
X	Left Panel	1	1 of 5
Y1	Left Center Panel	1	1 of 5
K1	Top Drawer Front	1	1 of 5
K2	Middle Drawer Front	1	1 of 5
К3	Top Drawer Back	1	1 of 5
K4	Top Drawer Left Side	1	1 of 5
K5	Top Drawer Right Side	1	1 of 5
K6	Top Drawer Bottom Panel	1	1 of 5
К7	Middle Drawer Back	1	1 of 5
К8	Middle Drawer Left Side	1	1 of 5
К9	Middle Drawer Right Side	1	1 of 5
L	Bottom Drawer Front	1	1 of 5
L1	Bottom Drawer Back	1	1 of 5

ITEM	DESCRIPTION	QTY.	вох
L2	Bottom Drawer Left Side	1	1 of 5
L3	Bottom Drawer Right Side	1	1 of 5
PR	Plastic Drawer Runners	2	1 of 5
A2	Right Side Leaf	1	2 of 5
G	Bottom Panel	1	2 of 5
D	Back Panel	1	2 of 5
0	Insert/Accessory Holder	1	2 of 5
В	Lift Platform	1	3 of 5
01	Right Rear Quilt Leaf Support	1	3 of 5
02	Left Rear Quilt Leaf Support	1	3 of 5
L4	Drawer Bin Side Panels	2	3 of 5
L5	Drawer Bin Front/Back Panels	2	3 of 5
L6	Drawer Bin Bottom	1	3 of 5
L7	Middle/Bottom Drawer Bottoms	2	3 of 5
А3	Drawer Cover Panel	1	3 of 5

ITEM	DESCRIPTION	QTY.	BOX
E	Shelf Panels	2	3 of 5
03	Right SIde Leaf Support	1	3 of 5
04	Right Side Leaf Support	1	3 of 5
08	Thread Spool Holder Panel	1	3 of 5
J1	Ironing Board	1	3 of 5
A	Top Panel	1	4 of 5
A1	Rear Quilt Leaf	1	4 of 5
MP1*	Metal Support Bar*	1	4 of 5
A5	Sewing Well Cover Panel	1	4 of 5
Z	Right Panel	1	4 of 5
Y2	Right Center Panel	1	4 of 5
	BOX 5 IS NOT INCLUDED		


Parts List: Sydney* Hardware

TIP: Keep all the parts in their individually labeled bags. This will make finding parts easier as you assemble your cabinet.

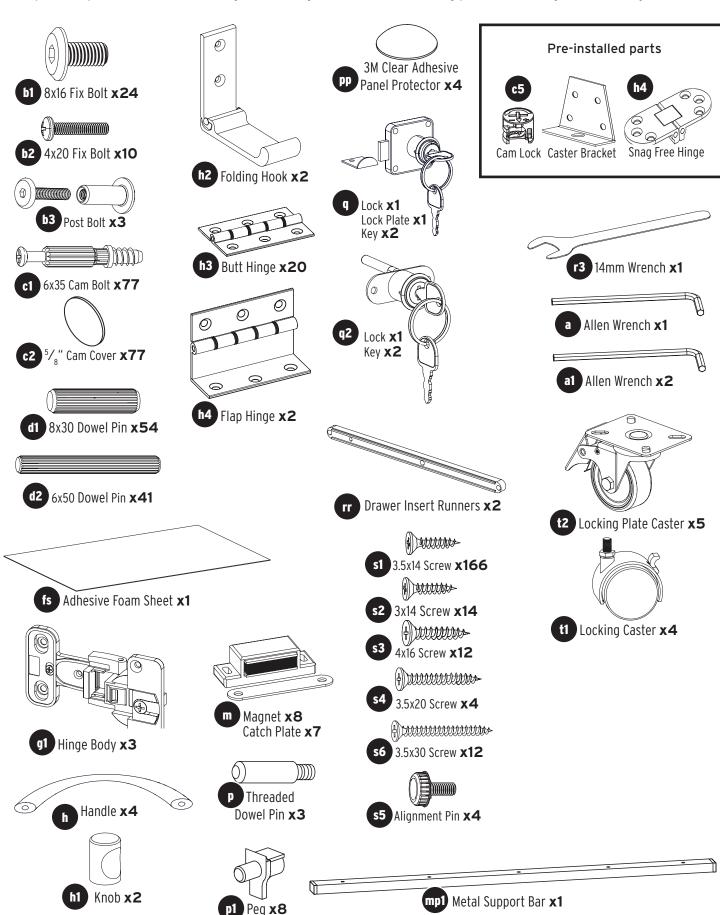



Parts List: Sydney Lite* Hardware

TIP: Keep all the parts in their individually labeled bags. This will make finding parts easier as you assemble your cabinet.

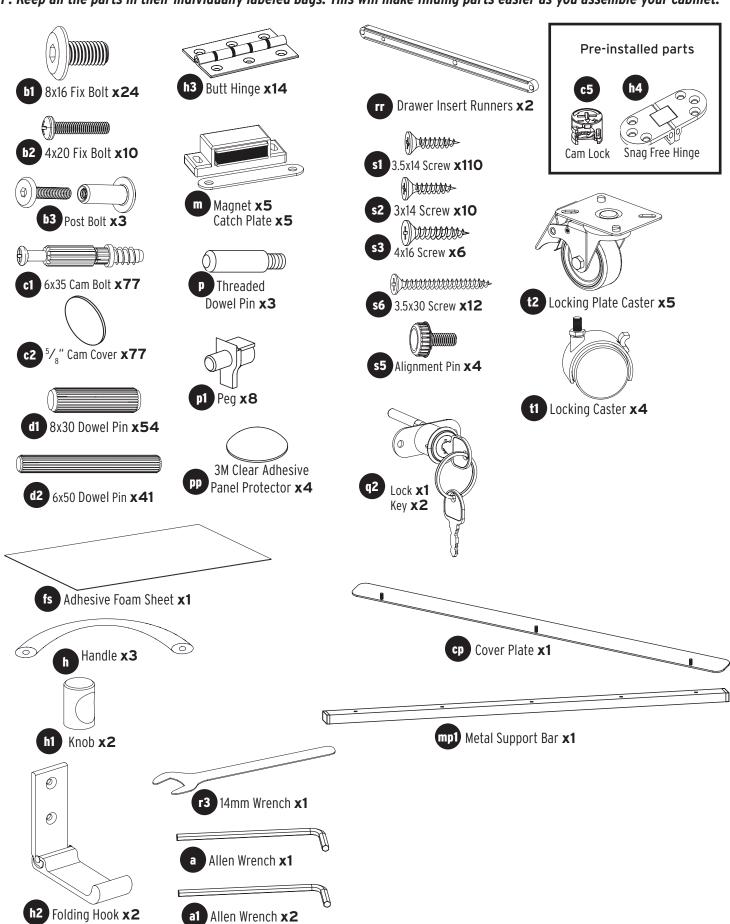

Parts List: Lifts

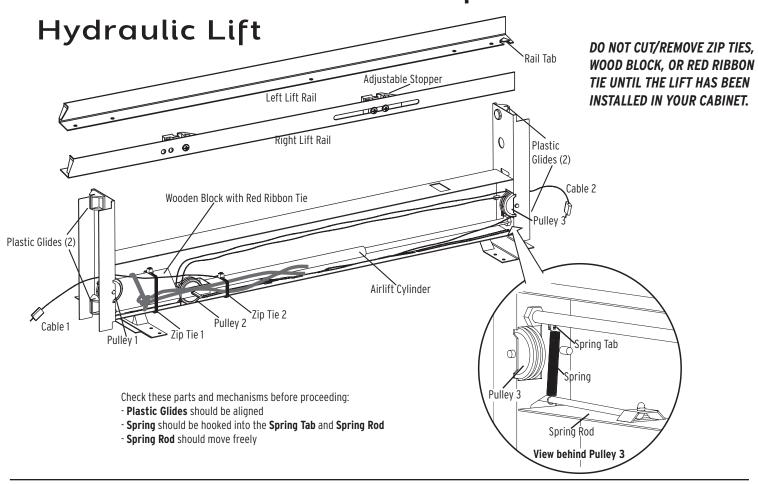


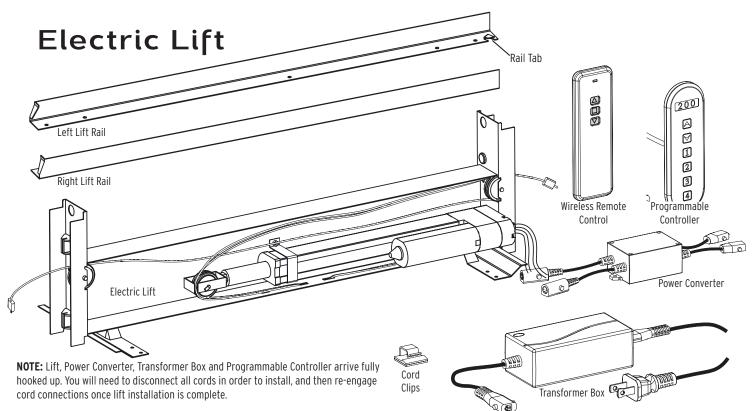


Lift Rails should be lubricated with WD-40 or a similar lubricant before assembly. Spray a small amount of lubricant on a paper towel or other lint-free cloth and wipe the rails down. Re-lubricate your lift rails annually.


Step 1: Cabinet Shell 2 Locking Plate Caster x5 11 8x16 Fix Bolt x20 Attach t2 Plate Casters to the underside of Panel G with b1 Fix Bolts. Tighten with provided Allen Wrench.

 Lock the Casters and flip Panel G over.

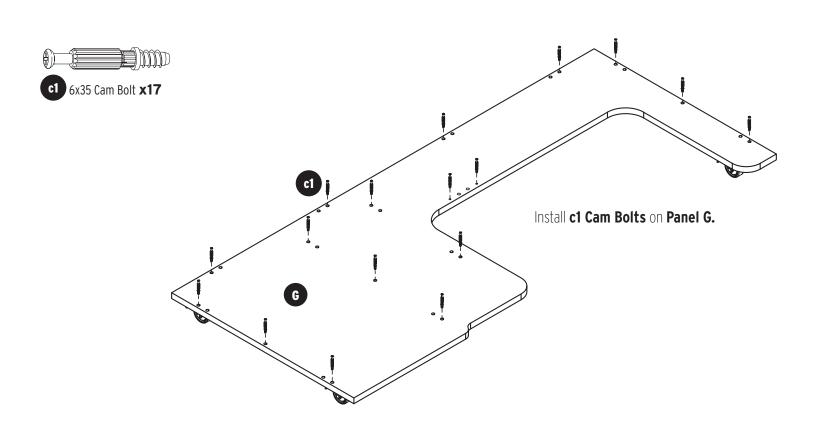








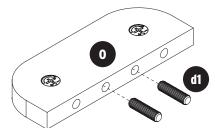

Insert 2 d1 dowel pins into the bottom edge of Panel O.

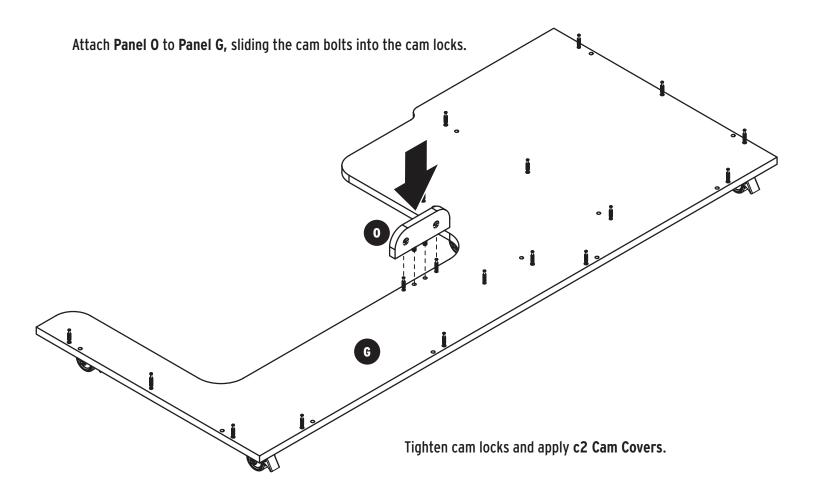

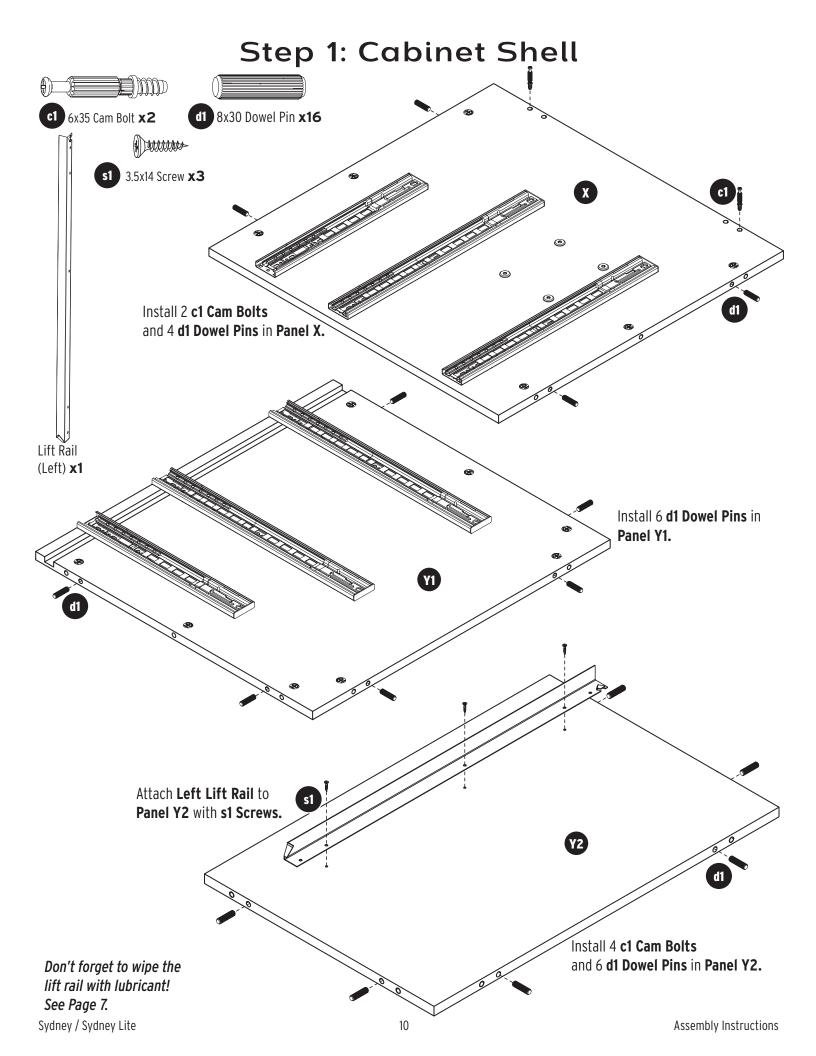


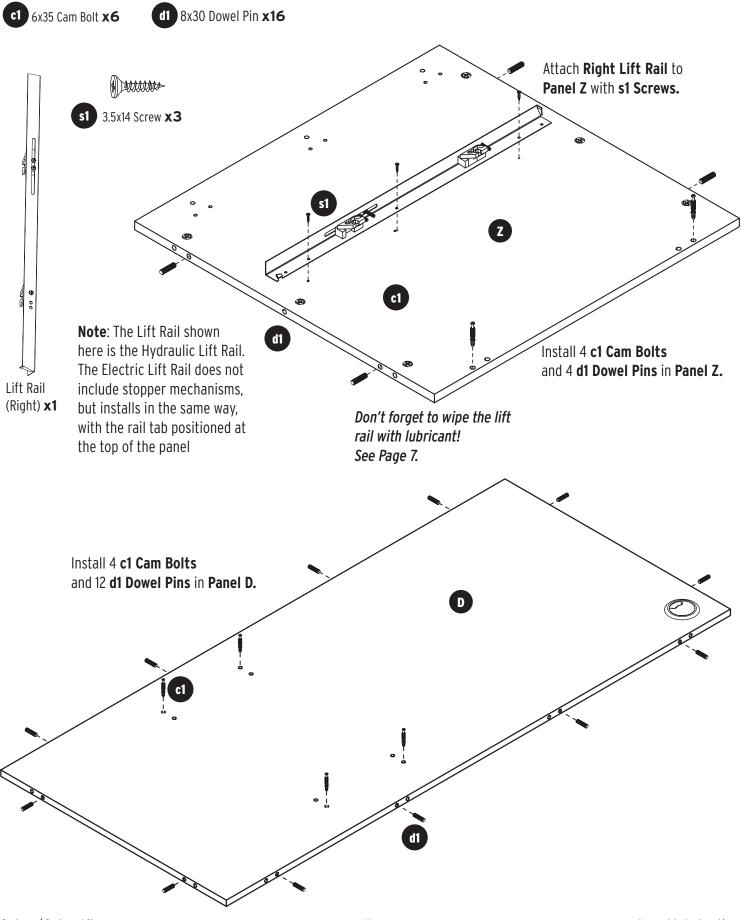





NOTE: The illustrations shown here depict upside down assembly. Assembling these panels upside down will make attaching the bottom (**Panel G)** easier.

Once the bottom is attached, you will flip the cabinet over.

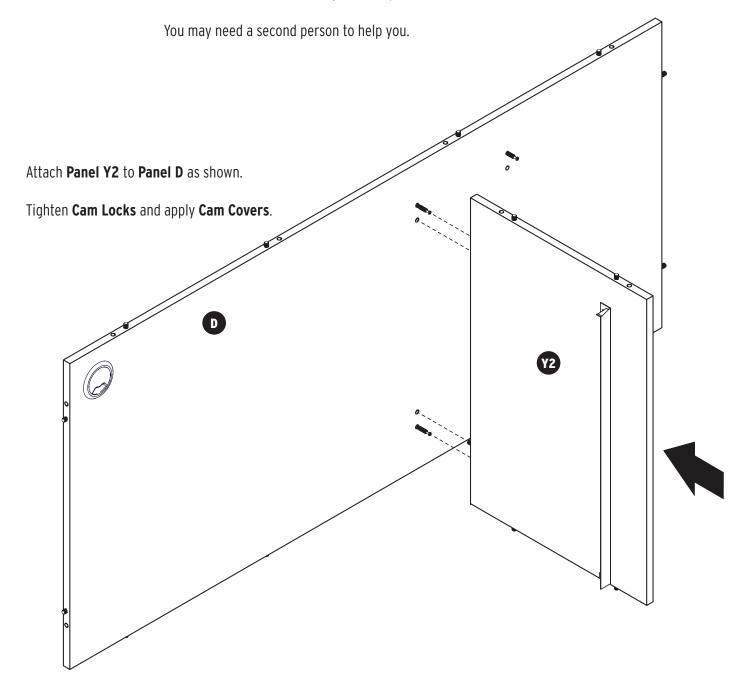

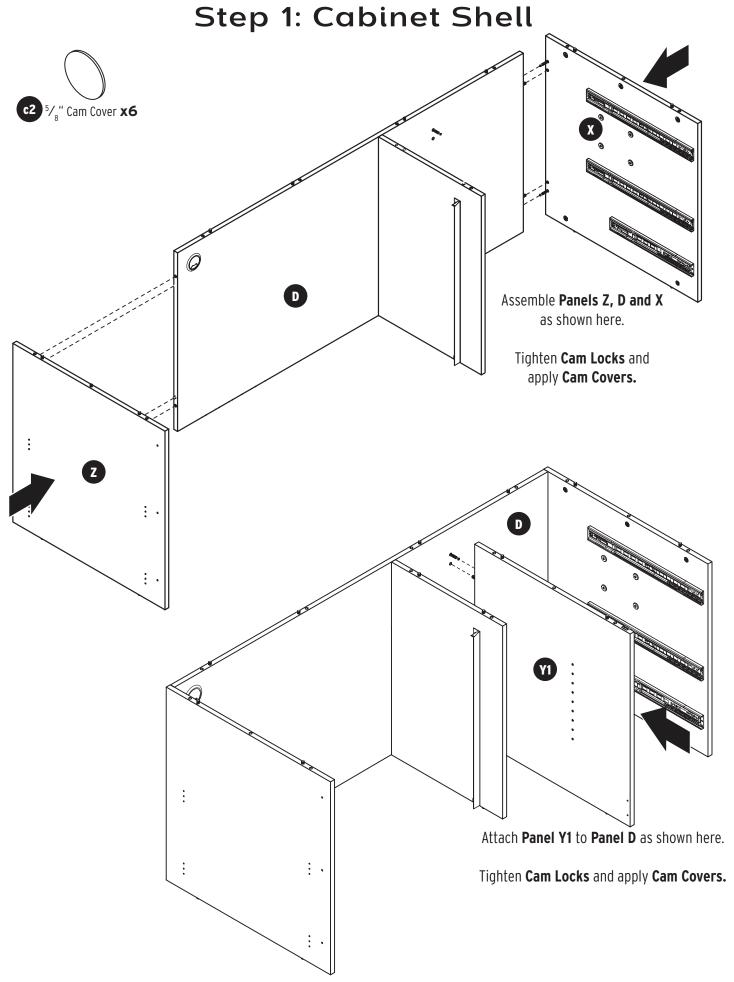

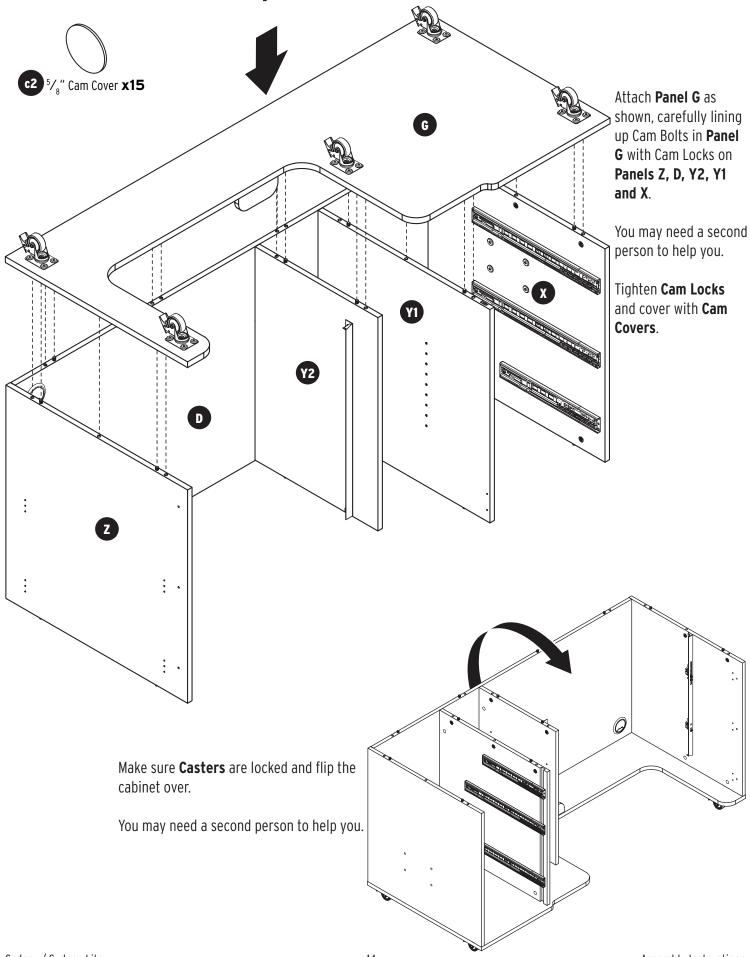

Step 2: Lift Installation

Hydraulic Lift Installation: Page 16


Electric Lift Installation: Page 18

Step 2a: Hydraulic Lift Installation

HYDRAULIC LIFT INSTALLATION WARNING:

DO NOT remove the small wooden block from the Lift until assembly is complete. If the block is removed or falls out before lift assembly is complete, the cables will retract, making installation more difficult. If the block falls out before complete assembly, please call Customer Service at 1-800-533-7347, ext. 1 for assistance, or visit www.arrowsewing. com/assembly and find the "Alternate Sewing Lift Installation" video.


For video instructions, please visit www.arrowsewing.com/assembly and find the "How to Install Your Hydraulic Lift" video.

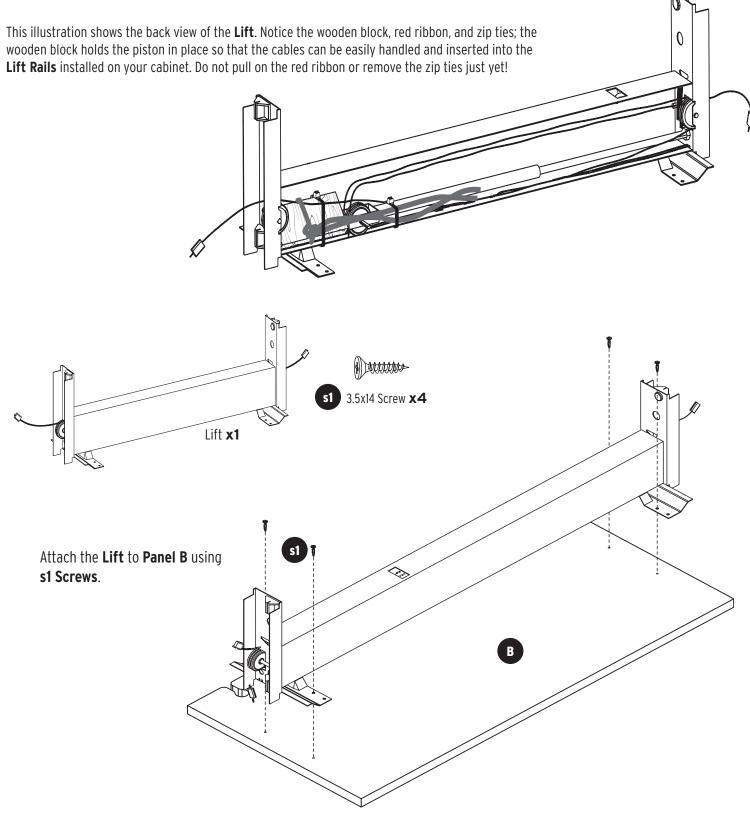

Step 2a: Hydraulic Lift Installation


Guide **Lift** onto **Lift Rails** using plastic guides. Insert ends of cable into rail tabs; make sure the cable is hooked into the rail tabs on both sides.

Cut the zip ties on the lift, but DO NOT remove the block yet.

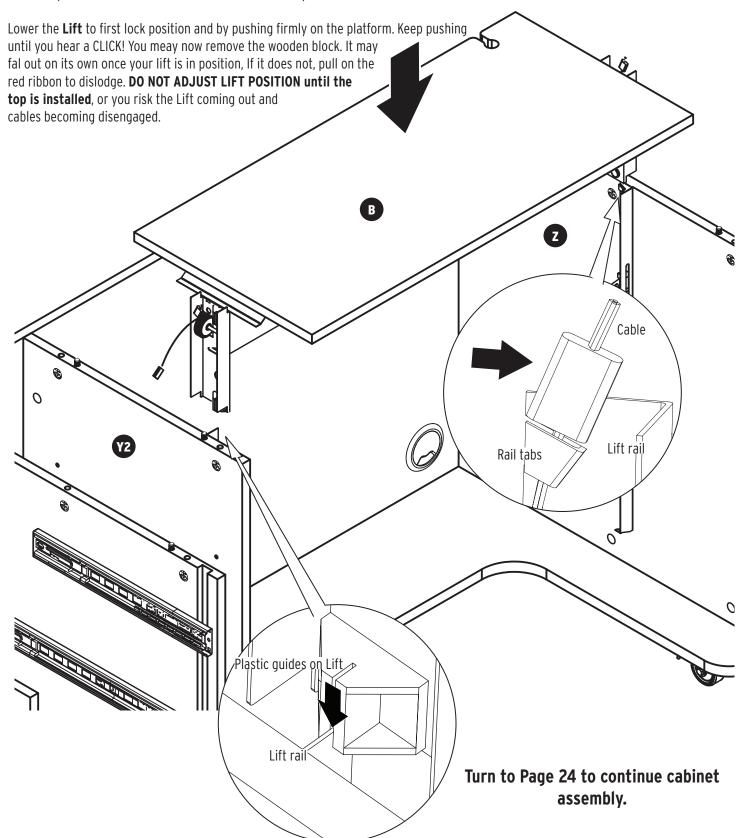


REMINDER: Our Customer Service Team is available for any assembly related questions. Please call 1-800-533-7347, ext. 1 to speak with an Assembly Expert.

Step 2b: Electric Lift Installation

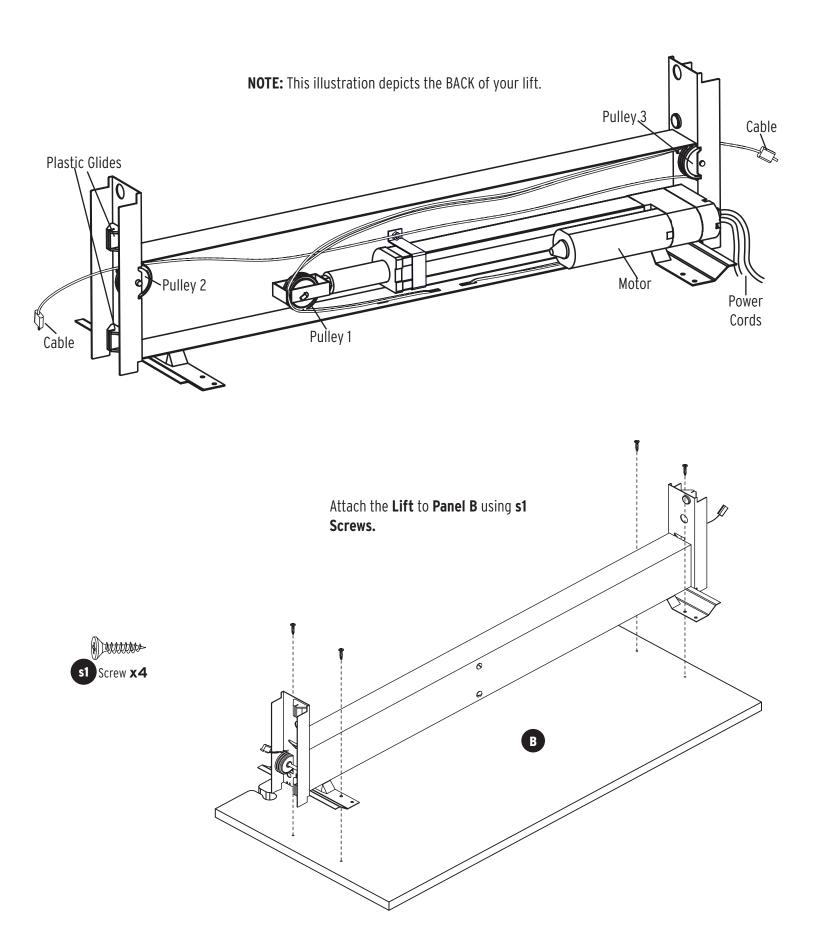

Step 2b: Electric Lift Installation

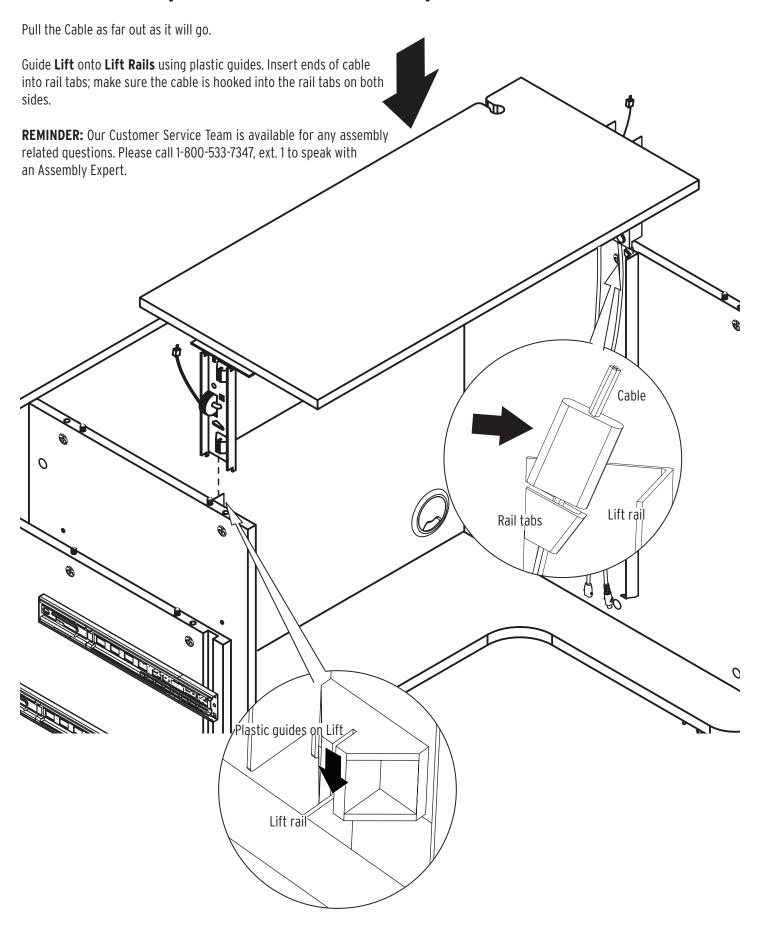

Step 2c: Electric Lift Cord Management


To control the cords coming from your electric lift, twist them together and feed them through the cord port in your cabinet's lower right back corner. DO NOT USE Cord Clips on the cords coming from the Electric Lift.

Attach the Programmable Controller with the screws provided. Scan this QR code for a printable template:

OPTIONAL: You may use Cord Clips on the wire coming from the Programmable Controller, as shown below.




NOTE: When securing cords with Cord Clips, be careful to keep cords from crossing over the lift rails.

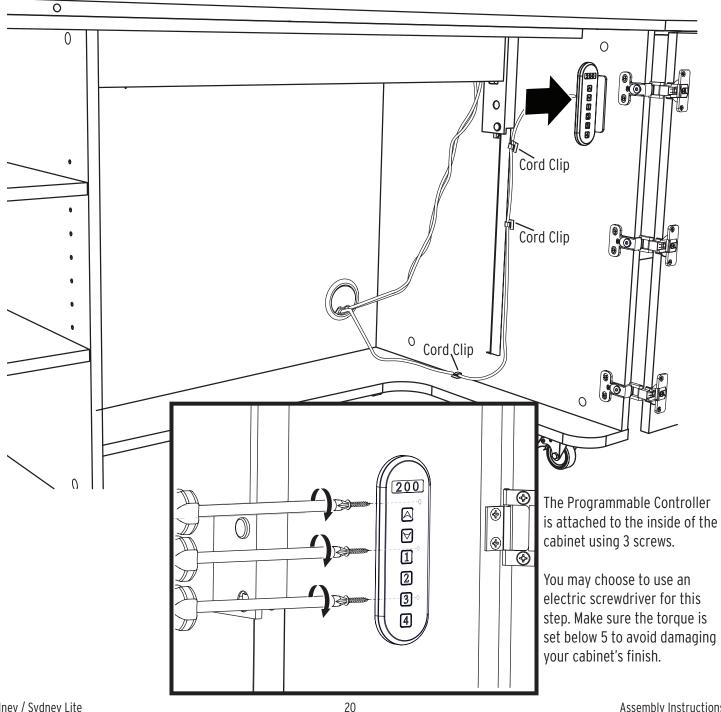


Step 2c: Electric Lift Cord Management

Carefully feed the twisted cords from the Electric Lift and the Programmable Controller through the Cord Port and plug them in to the Power Converter.

NOTE: Each cord and cord receptacle has a different pin pattern, making it easy to match the cords to the Power Converter.

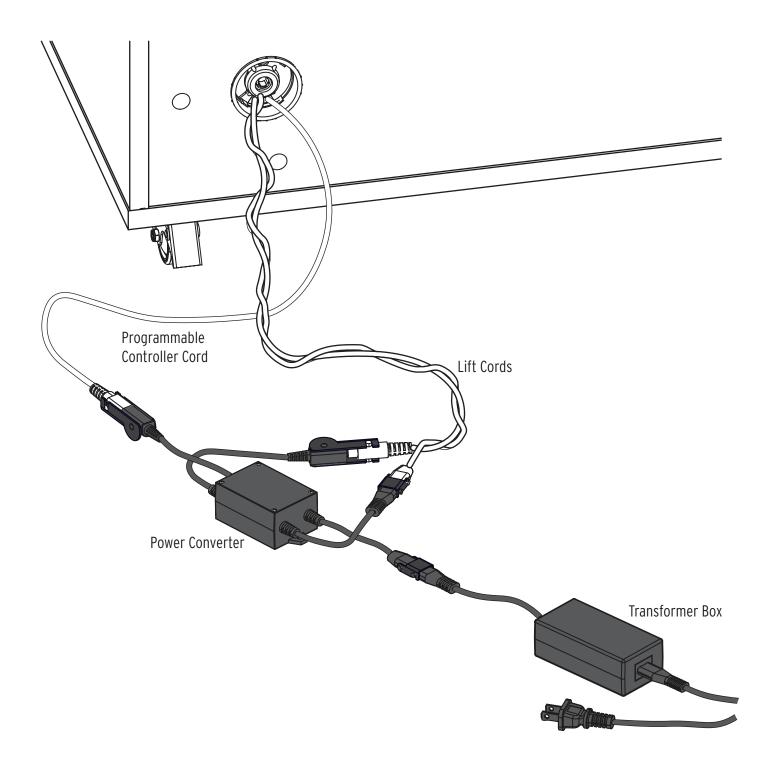


Step 2d: Electric Lift Programming and Use

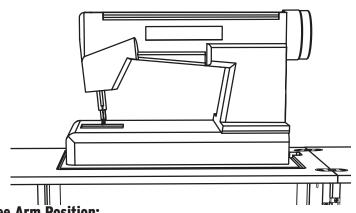


Free Arm Position:

 Also known as "tabletop sewing," this is the favored sewing position to use for hems, cuffs, and other small, curved pieces.




Press and hold the UP button on your controller to position your lift platform in the uppermost position. Press and hold the preset position of your choice for 5 seconds. Free Arm Position is now pre-set.

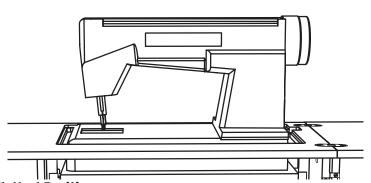


Flatbed Position:

 
Flatbed Position is perfect for sewing larger, heavier projects and is the most comfortable way to sew. Add a custom acrylic insert for a custom fit to your specific machine and cabinet to experience a truly ergonomic sewing session.



Press and hold the DOWN button on your controller until the throat plate on your machine is level with the tabletop. Press and hold the preset position of your choice for 5 seconds. Flat Bed Position is now pre-set.

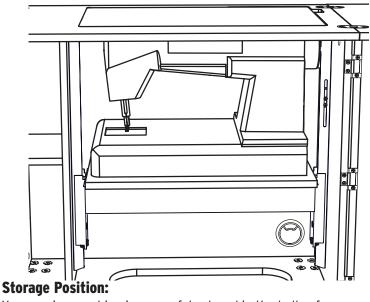

 
Your sewing machine is now safely stored in the belly of your sewing cabinet! If your cabinet includes a sewing well cover, you may place that over your sewing well and use your cabinet as a desk.



Press and hold the DOWN button on your controller until the platform is completely lowered. Press and hold the preset position of your choice for 5 seconds. Storage Position is now pre-set.


NOTE: Use your preset functions your own way! You can set Flatbed Position for multiple machines or preset positions for Storage or Free Arm positions. The choice is yours!

Step 2d: Electric Lift Programming and Use

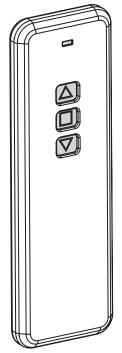


Use your Remote Control to move your machine up and down from across the room! Press the UP or DOWN button to move the lift, and the center STOP button to stop.


Using the control pad or the remote control, move the lift back into the flatbed position. Check to make sure that your machine is now sitting at the right height for comfortable, ergonomic flatbed sewing and adjust as necessary.

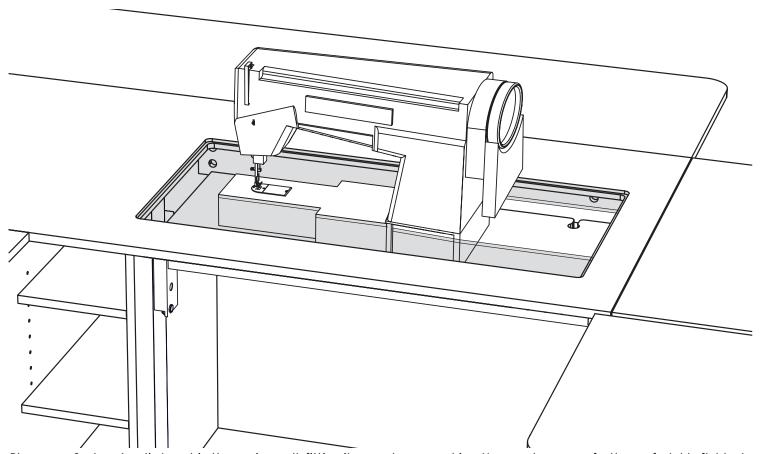



Place your Custom Acrylic Insert in the sewing well, fitting it around your machine. You now have a perfectly comfortable flat bed sewing cabinet! Say goodbye to hunched shoulders, tired wrists, and an aching back and hello to HAPPY SEWING!


To place an order for your own Custom Acrylic Insert, visit us online at ArrowSewing.com, or contact Arrow Sewing Customer Service at 1-800-533-7347 ext 1 during normal business hours.

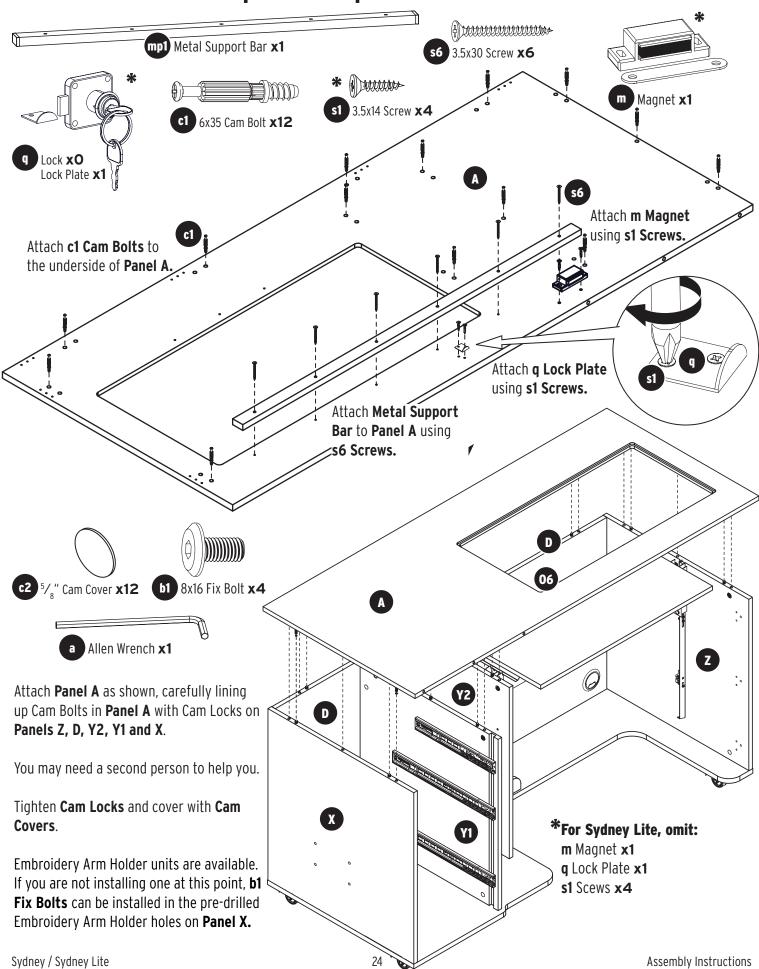

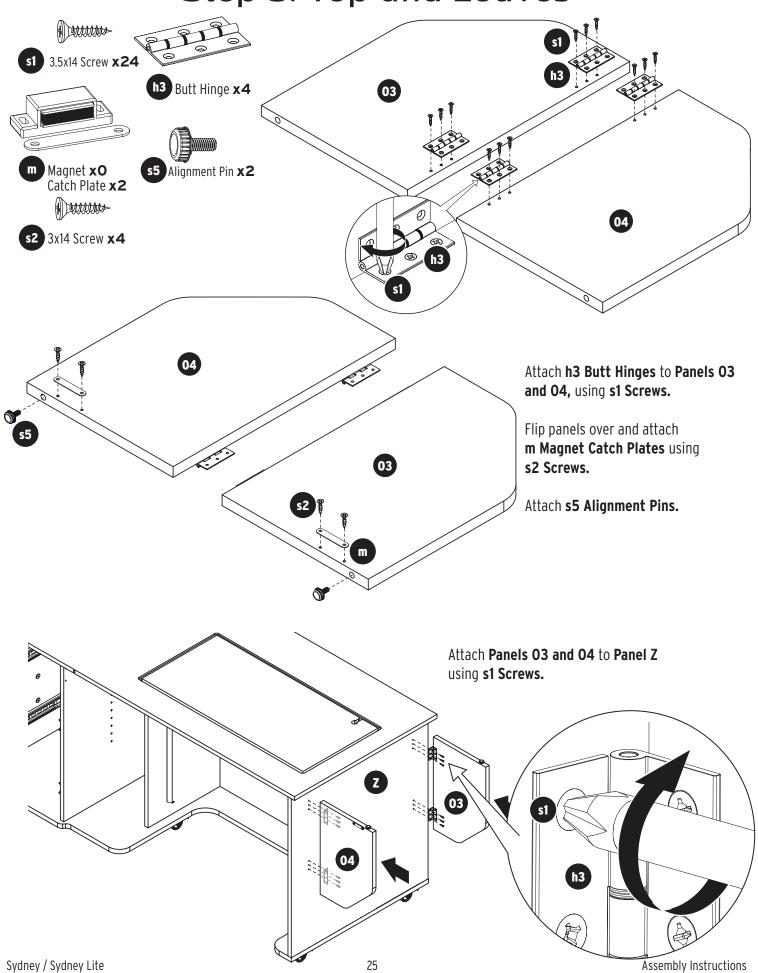


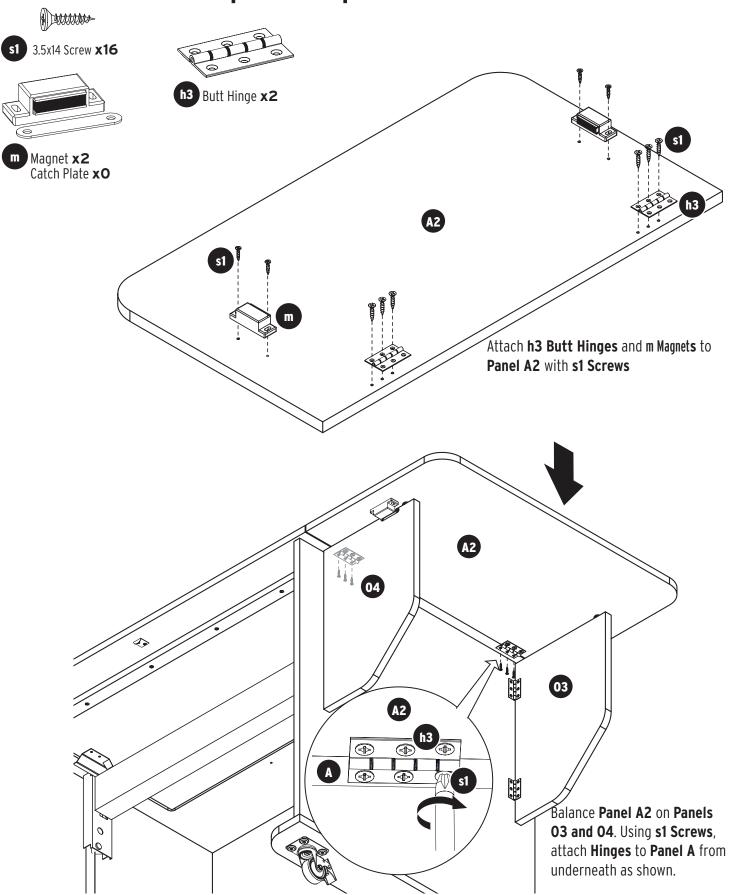

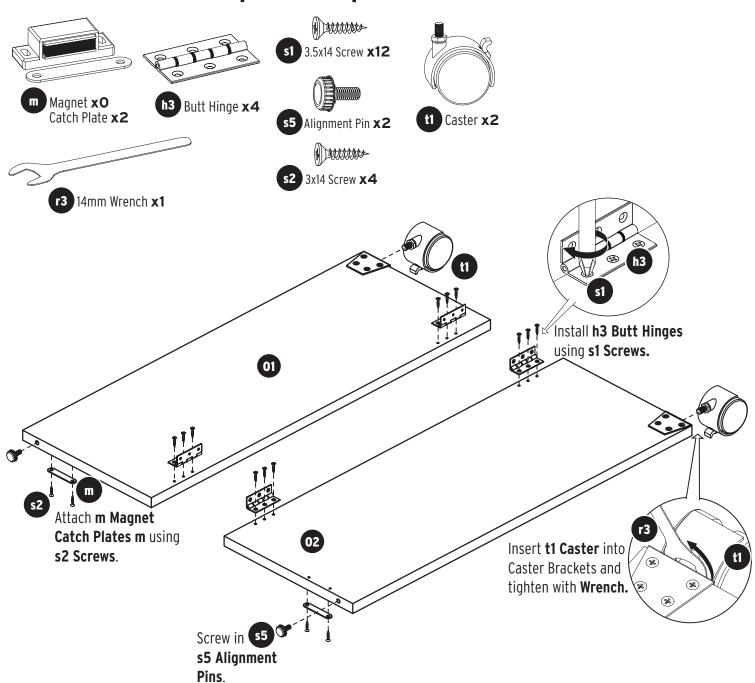

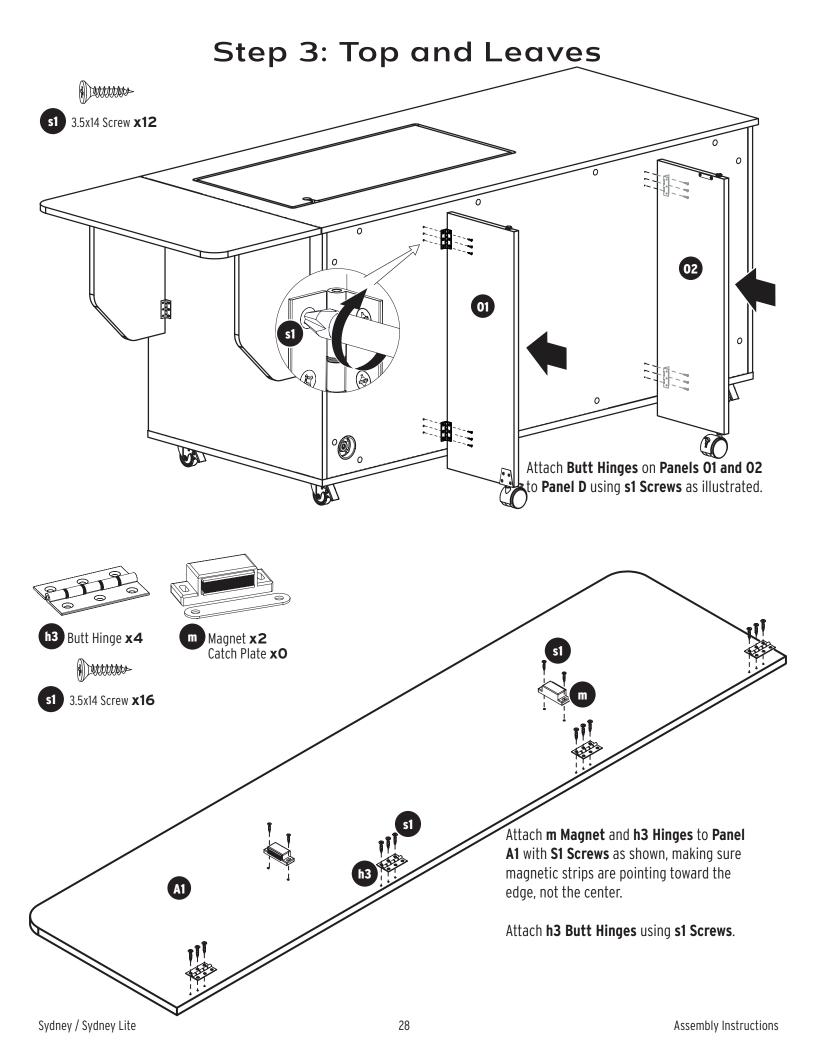



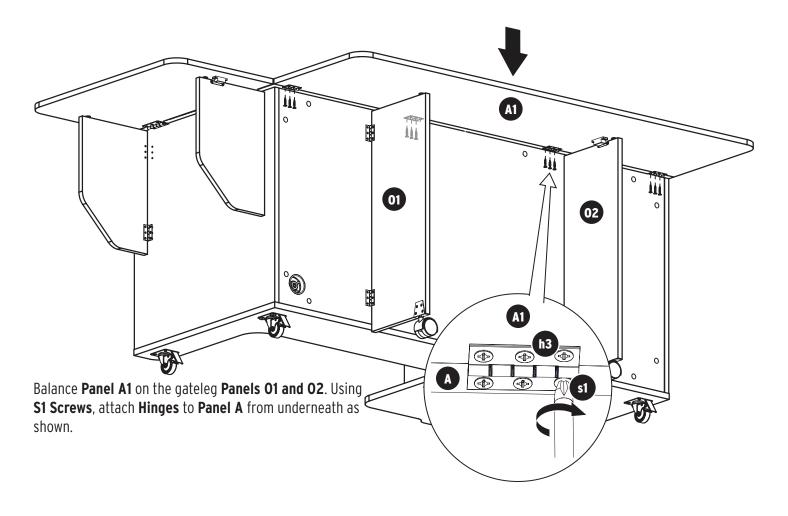



Sydney: Continue to Page 30 for Door Assembly

Sydney Lite: Turn to Page 34 for Cover Panel Installation


Step 4a: Sydney Tabletop Doors 3.5x14 Screw **x36 \$2** 3x14 Screw **x4** 4x16 Screw **x6** Lock **x1**Lock Plate **xO**Key **xO** t1 Caster x2 Magnet **xO** 3.5x20 Screw **x4** Catch Plate x2 Hinge Body x3 h3 Butt Hinge x6 Attach Panels V1, V2, and V3 by attaching h3 Butt Hinges with s1 Screws. r3 14mm Wrench x1 Attach **g1 Hinge** Body to Panel V3 using s3 Screws. 0 h3 r3 Insert **t1 Caster** into Caster Bracket and tighten with r3 Wrench. **%** VI Attach q Lock with S4 Screws. Attach **m Magnet** Add trim ring to lock on the Catch Plate using outside of Panel V2. You will s2 Screws. need to press firmly. Sydney / Sydney Lite 30 **Assembly Instructions**

Step 4a: Sydney Tabletop Doors

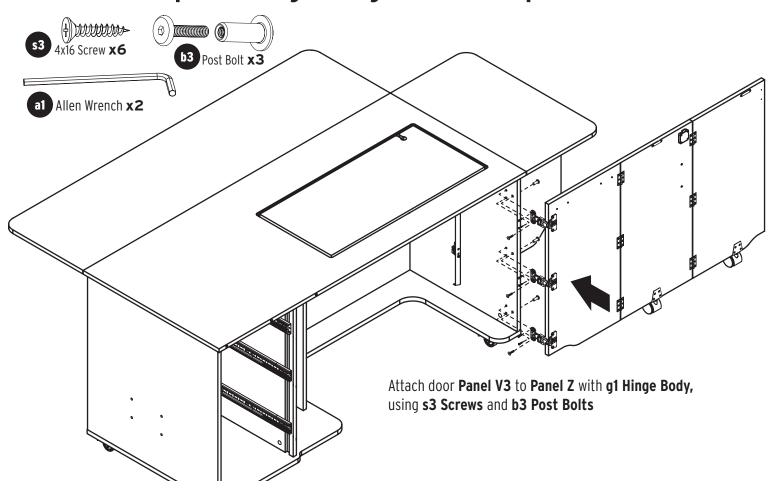

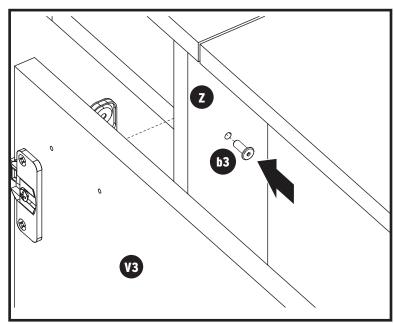

Insert female end of the **b3 Post Bolts** through the pre-drilled hole in **Panel Z**

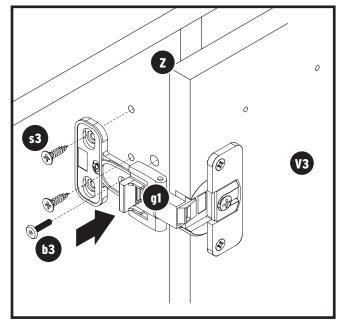


Attach **g1 Hinge Body** to **Panel Z** with 2 **s3 Screws.** Insert male end of the **b3 Post Bolts** through the **g1 Hinge Body** and tighten with one **a1 Allen Key** while holding the female end of the **b3 Post Bolt** stationary with the second **a1 Allen Key**

Step 4a: Sydney Tabletop Doors h Handle **x1 V2** 4x20 Fix Bolt **x2** Attach Handle to Panel V2 and secure with **b2 Fix Bolts**. 3.5x14 Screw **x16** Magnet **x2** Catch Plate **x0** Attach **m Magnets** and Flap Hinges to Panel A4 with s1 Screws as shown. h4 Flap Hinge x2 Balance Panel A4. You may need a second person to help you. Using s1 Screws, attach Flap Hinges to Panel V3 from underneath as shown.

Sydney / Sydney Lite 32 Assembly Instructions

Step 4a: Sydney Tabletop Doors

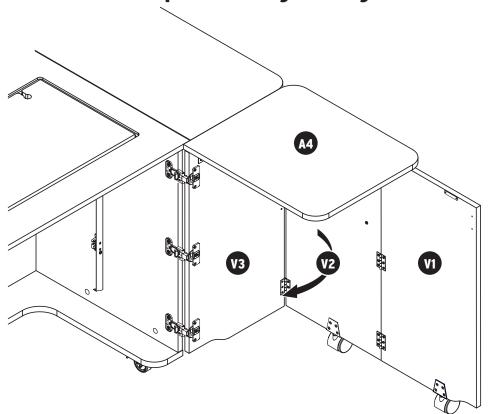

To use your Tabletop Doors:


Open door panels.

Lift **Panel A4.** Swing **Panel V2** forward to create a right angle.

Next, swing **Panel V1** forward to create a right angle with **Panel V2**.


Engage the **magnets** on the bottom of **Panel A4.**

To close the door, hold **Panel A4** steady while you disengage magnets and unfold doors.

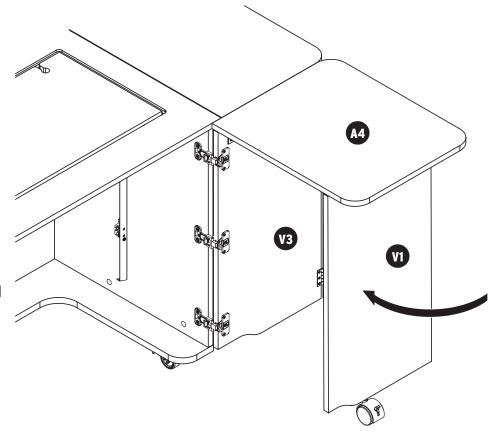


Turn to Page 35 for Drawer Assembly


Step 4b: Sydney Lite Cover Panel

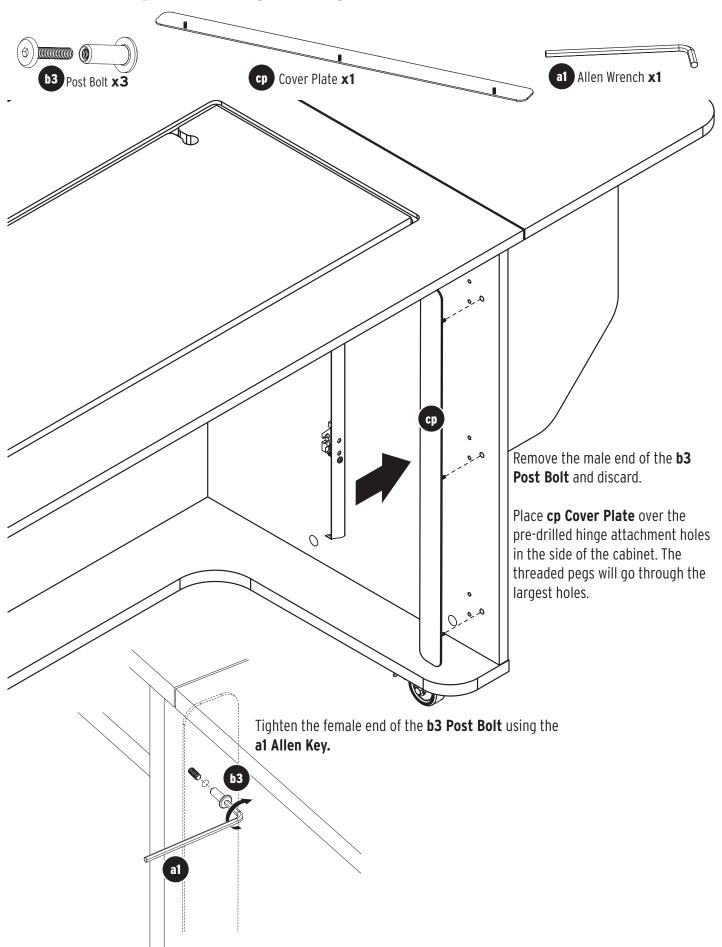



Step 5: Drawers

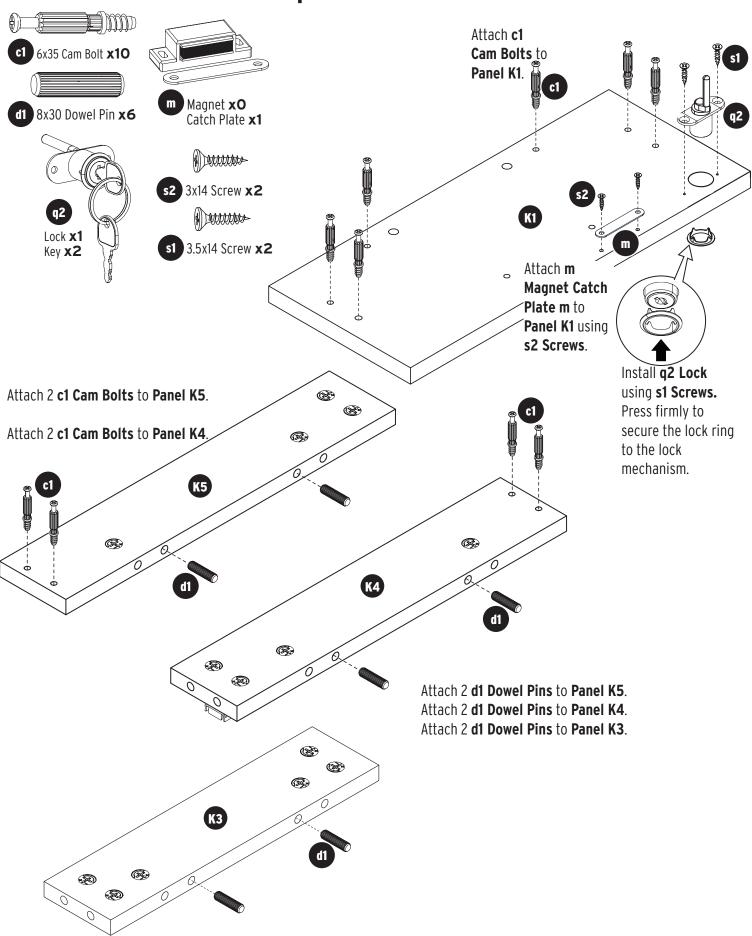

Step 5: Drawers

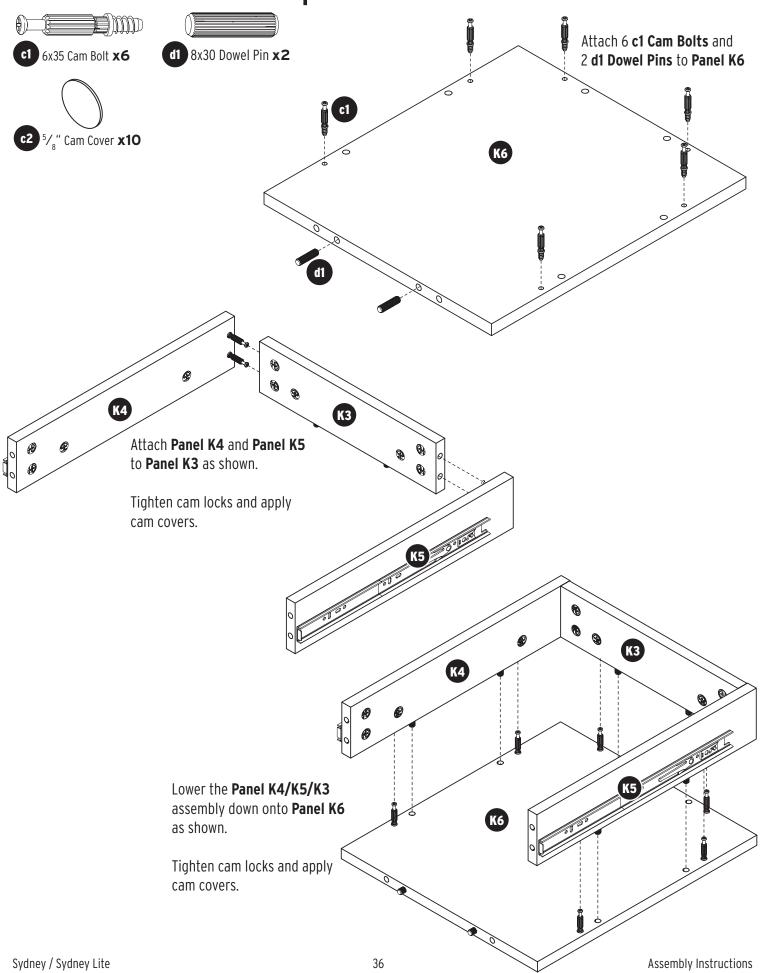


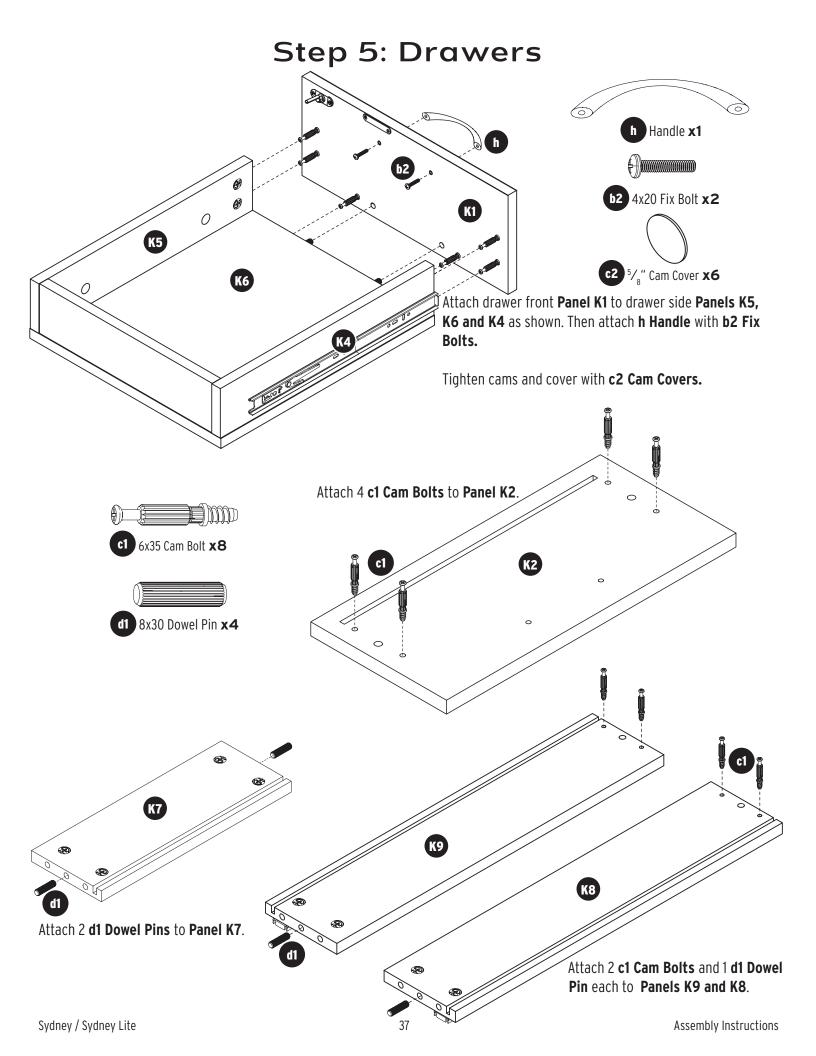

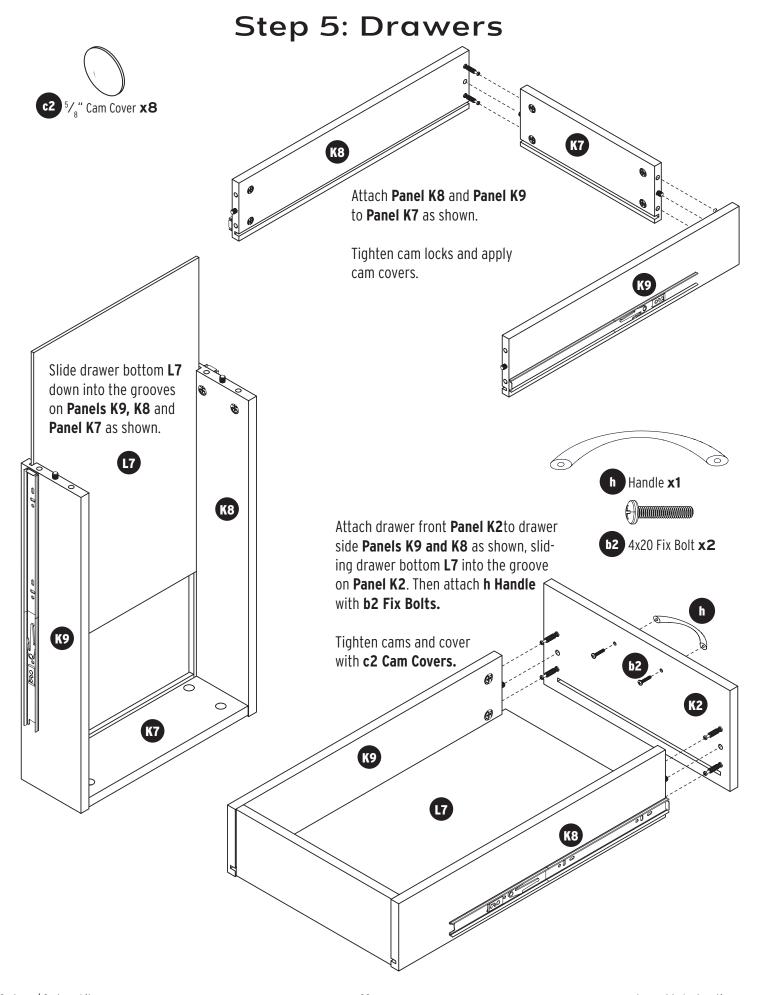


Step 5: Drawers Attach 4 c1 Cam Bolts to Panel L. 6x35 Cam Bolt **x8 d1** 8x30 Dowel Pin **x8 ®** Attach 4 d1 Dowel Pins to Panel L1. Attach 2 c1 Cam Bolts and 2 d1 Dowel Pins each to Panels L3 and L2. L3 [2] Attach Panel L2 and Panel L3 to Panel L1 as shown. **c2** ⁵/₈" Cam Cover **x4** Tighten cam locks and apply cam covers. Sydney / Sydney Lite 39 Assembly Instructions


Step 5: Drawers

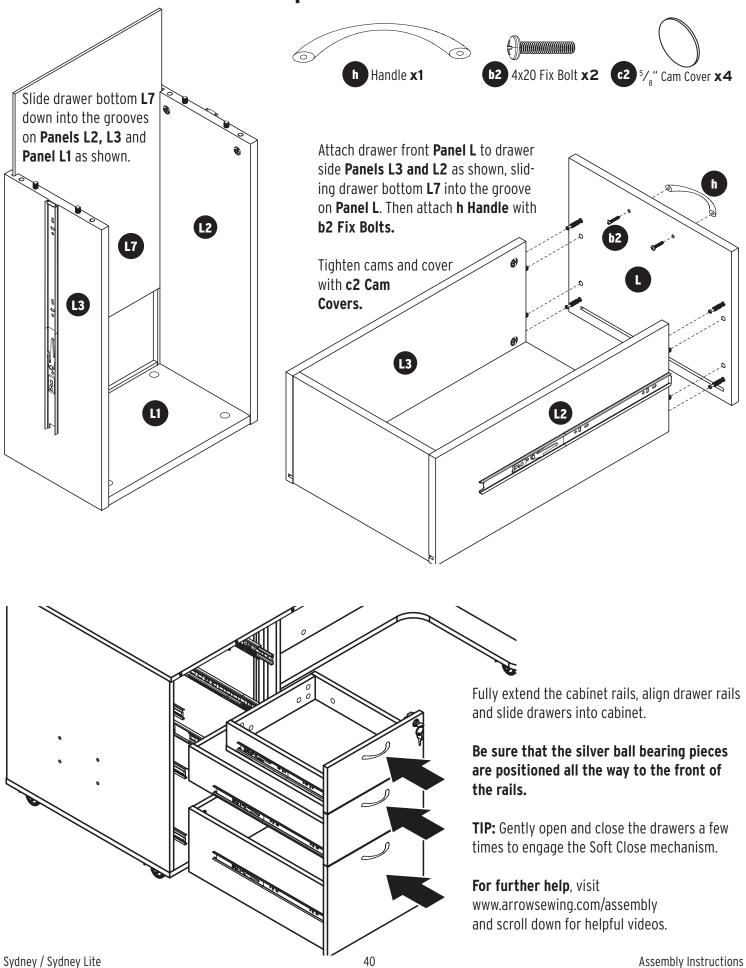


Step 6: Drawer Accessories

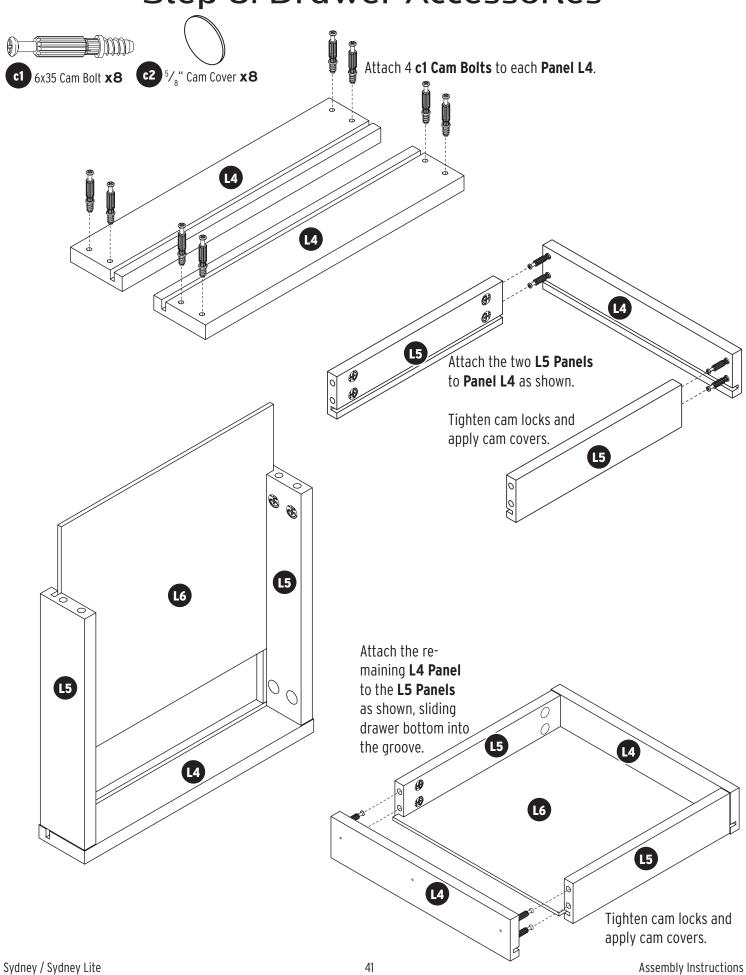


Step 6: Drawer Accessories

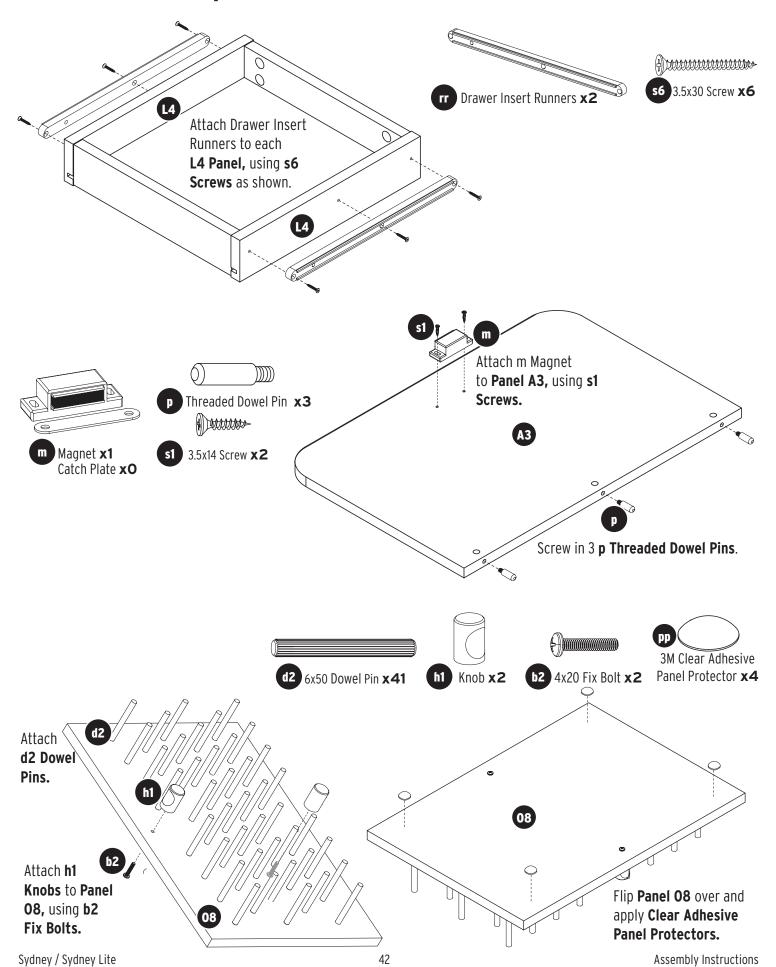


Step 6: Drawer Accessories

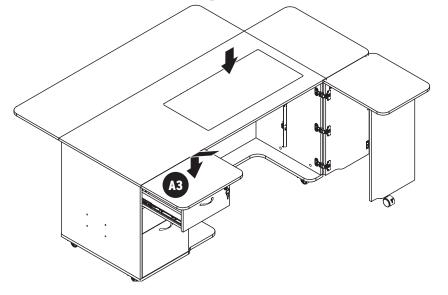

Use drawer cover **Panel A3** with the top drawer of your Sydney Cabinet to create extra workspace.

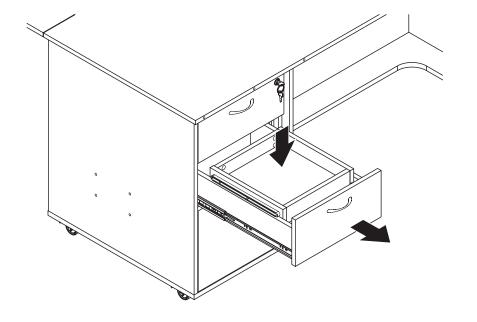


Place drawer insert tray into the middle or top drawer of your Sydney Cabinet to create extra storage space.

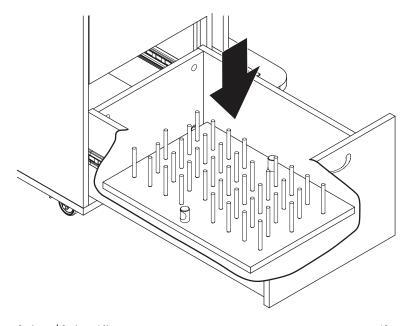


Place thread spool holder tray into the middle or bottom drawer of your Sydney Cabinet for accessible thread storage.


Step 7: Embroidery Arm/Shelf Compartment

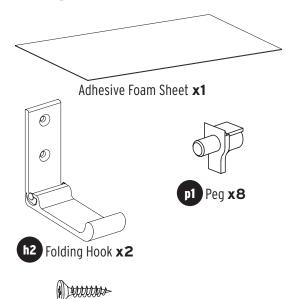

s1 3.5x14 Screw **x4**

Remove the backing from the **Adhesive Foam Sheet** and carefully adhere it to the bottom of the shelf compartment. NOTE: The Adhesive Foam **Sheet**'s adhesive is very strong. Be precise when installing!

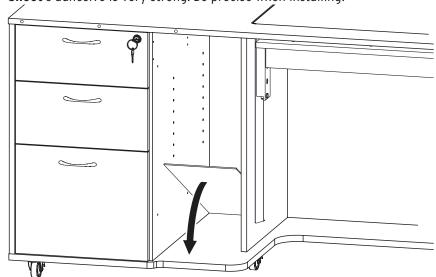

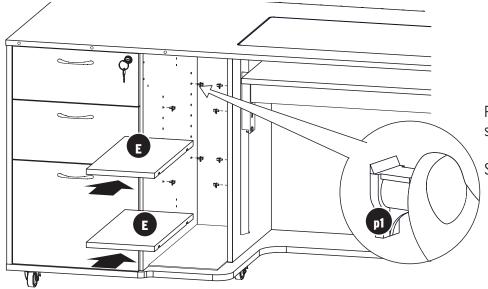


Press **p1 Pegs** into pre-drilled holes as shown, at whatever height you wish.

Slide Panel E Shelves on top of p1 Pegs.


You may choose to use h2 Folding Hooks.

Attach to Panel Y1 using s1 Screws.

Shelves can be used with Folding Hooks.

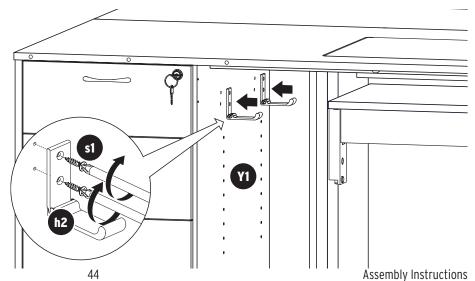

Completed Sydney and Sydney Lite Cabinets

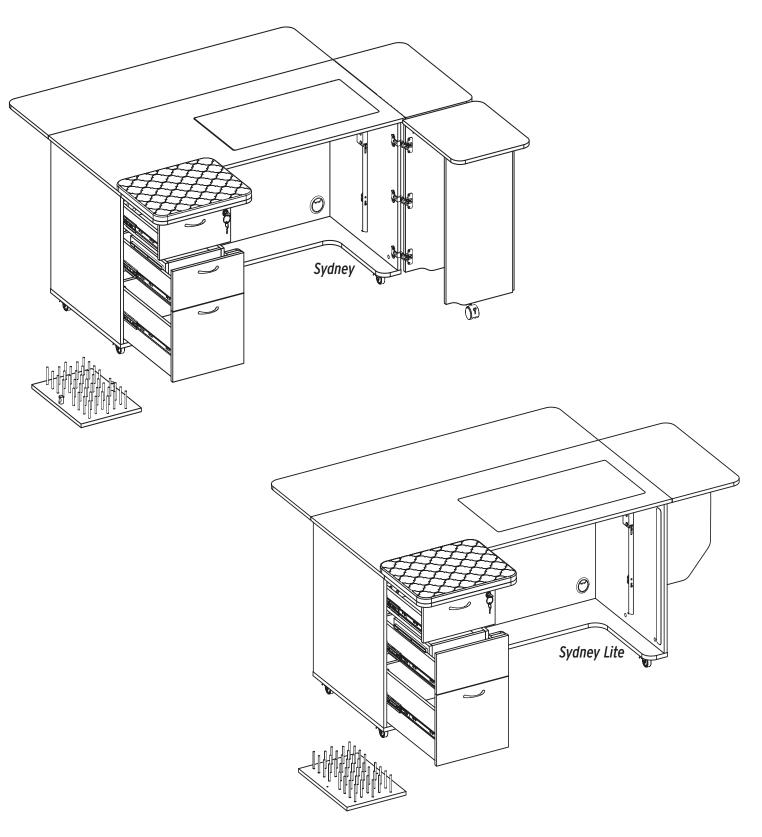



LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC "Arrow" provides a Limited Lifetime Warranty "Warranty" to the original purchaser of this product against defects in materials or workmanship of furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Electrical and mechanical components of furniture are warrantied for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request Warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial Warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a Warranty claim, customer may receive a brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the following: Failure to follow product assembly instructions, information or warnings; misuse or abuse; intentional damage; fire, flood, alteration or modification of the product; use of the product in a manner inconsistent with its intended use; any condition resulting from incorrect or inadequate maintenance, cleaning, care or neglect; cuts or scratches; caster damage as a result of moving furniture fully loaded or with locked casters; damage resulting from electrical surge or lightning; or use in commecial or education environments. Arrow Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS Warranty, such as loss of use, disassembly, transportation, labor, or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.


ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS Warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited Warranty gives you specific legal rights. This limited Warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/Warranty.

Accessories to Complete Your Sewing Studio

Custom Insert

Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

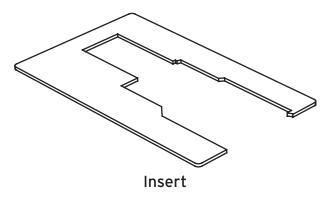

Arrow Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360 swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!



Height Adjustable Sewing Chair

P.O. Box 410 Elkhorn, WI 53121 1-800-533-7347 Ext. 1 CS@ArrowSewing.com www.ArrowSewing.com