




KANGAROO™
sewing furniture

ASSEMBLY INSTRUCTIONS

Dingo

ITEM NO.: K7905 Teak
K7911 Ash White

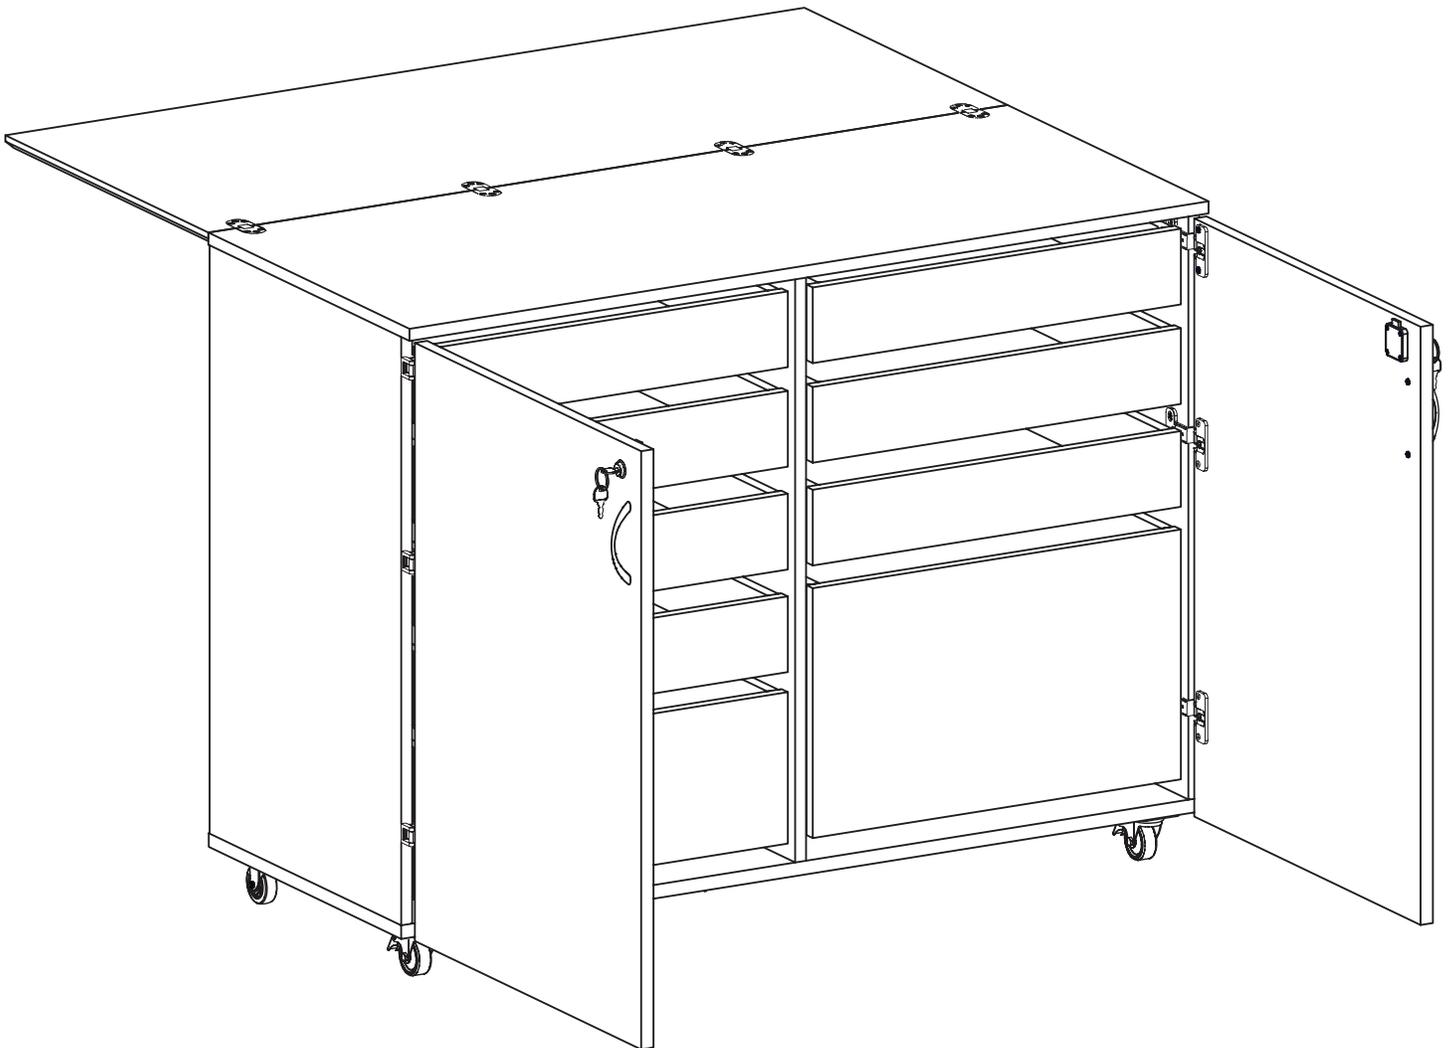

General Assembly Guidelines

1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.

2. Tools Required



Phillips Screwdriver ⊕




Hammer



Electric Screwdriver ⊕
Torque set to 3-5

3. Understanding How the Cam Fastener Works

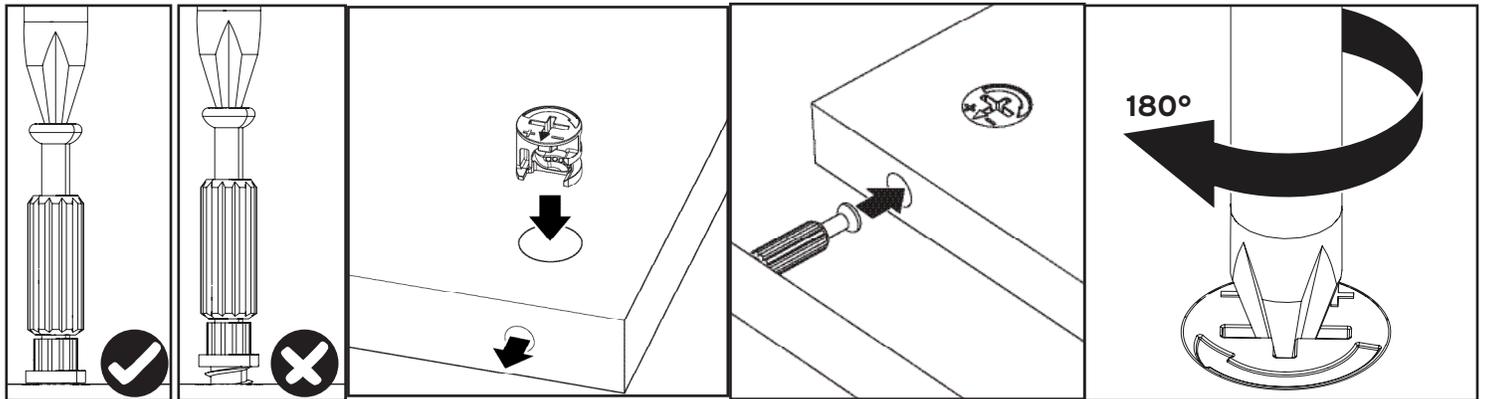


Screw cam bolts flush as illustrated.

Press cam into hole until flush with surface. The arrow direction must be in the direction of the hole.


Insert bolt through pre-drilled hole in edge of panel.

Turn clockwise to lock cam with bolt.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better.

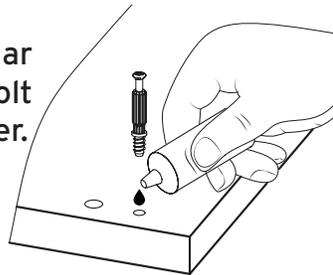

4. **Glue** provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.

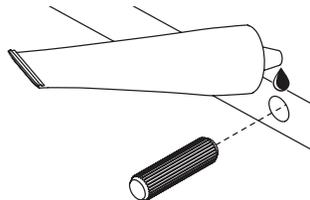


Use and Care

Your cabinet normally requires a minimum amount of maintenance; however, it is worth noting the following for regular cleaning:


To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. **DO NOT** use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.

Parts List: Panels

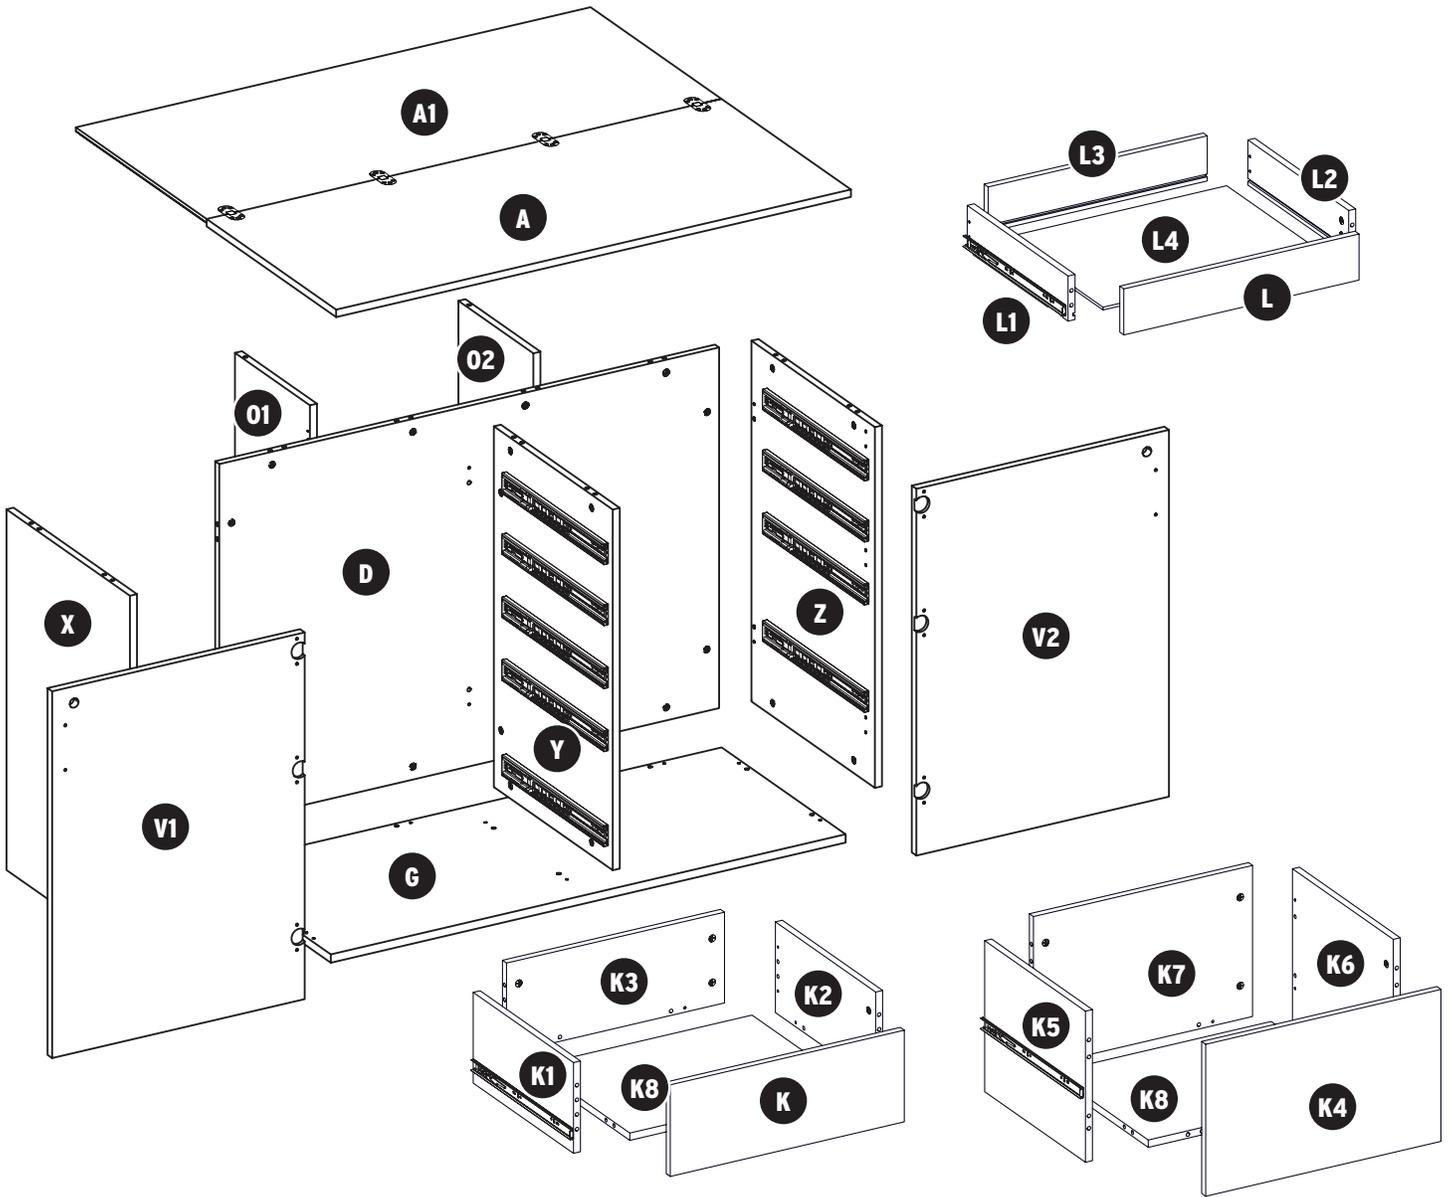

ITEM	DESCRIPTION	QTY.	PACK.	ITEM	DESCRIPTION	QTY.	PACK.
L1	Drawer Left Side	7	1 of 4	V2	Right Door Panel	1	3 of 4
L2	Drawer Right Side	7	1 of 4	O1	Left Gate Leg	1	3 of 4
L4	Drawer Bottom	7	1 of 4	O2	Right Gate Leg	1	3 of 4
K1	Drawer Left Side	1	1 of 4	L3	Drawer Back	7	3 of 4
K2	Drawer Right Side	1	1 of 4	L	Drawer Front	7	3 of 4
K3	Drawer Back	1	1 of 4	K	Drawer Front	1	3 of 4
K5	Drawer Left Side	1	1 of 4	K4	Drawer Front	7	3 of 4
K6	Drawer Right Side	1	1 of 4	G	Bottom	1	4 of 4
D	Back Panel	1	2 of 4	K7	Drawer Back	1	4 of 4
X	Left Side Panel	1	2 of 4	K8	Drawer Bottom	2	4 of 4
Z	Right Side Panel	1	2 of 4	A	Top Panel	1	4 of 4
Y	Partition	1	2 of 4	A1	Top Leaf Panel	1	4 of 4
V1	Left Door Panel	1	3 of 4				

Parts List: Hardware

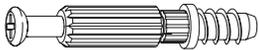

c1 6x35 Cam Bolt **x86**



c2 5/8 Cam Cover **x86**



d1 8x30 Dowel Pin **x58**



b1 8x16 Fix Bolt **x20**



b2 4x24 Fix Bolt **x4**




s1 3.5x14 Screw **x58**



s3 3.5x30 Screw **x28**



s2 3.5x20 Screw **x8**

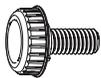

s4 Alignment Pin **x2**




a Allen Wrench **x1**




h Handle **x2**




r3 14mm Wrench **x1**

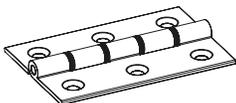


h1 Butt Hinge **x4**

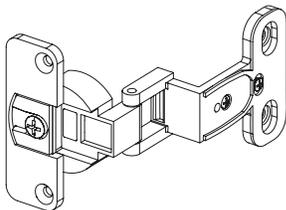


g1 Hinge Body **x6**

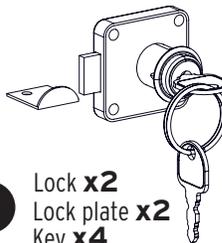


L Lock **x2**
Lock plate **x2**
Key **x4**

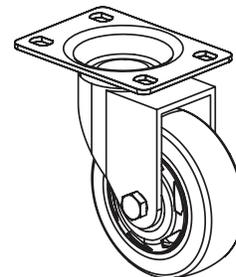

t1 Plate Caster **x3**

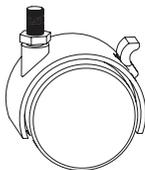

t1 Caster **x2**

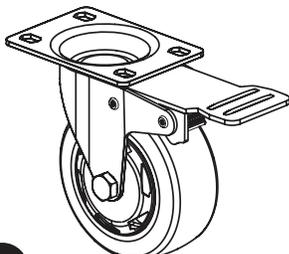


t2 Locking Plate Caster **x2**

Pre-installed parts



c5 Cam

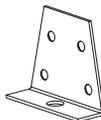


Caster Bracket




Drawer Runners

Part 1: Cabinet Shell

We can't wait to get your brand new Dingo Storage Cabinet up and running. Please contact our Customer Service Team at 1-800-533-7347, ext. 1 during normal business hours with any assembly related questions.

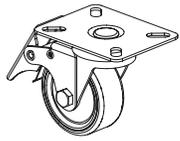

t2 Locking Plate Caster **x2**

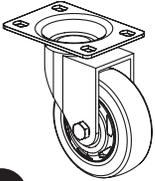


t1 Plate Caster **x3**




a Allen Wrench **x1**



c1 6x35 Cam Bolt **x10**

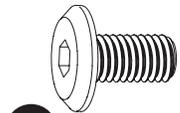

b1 8x16 Fix Bolt **x20**

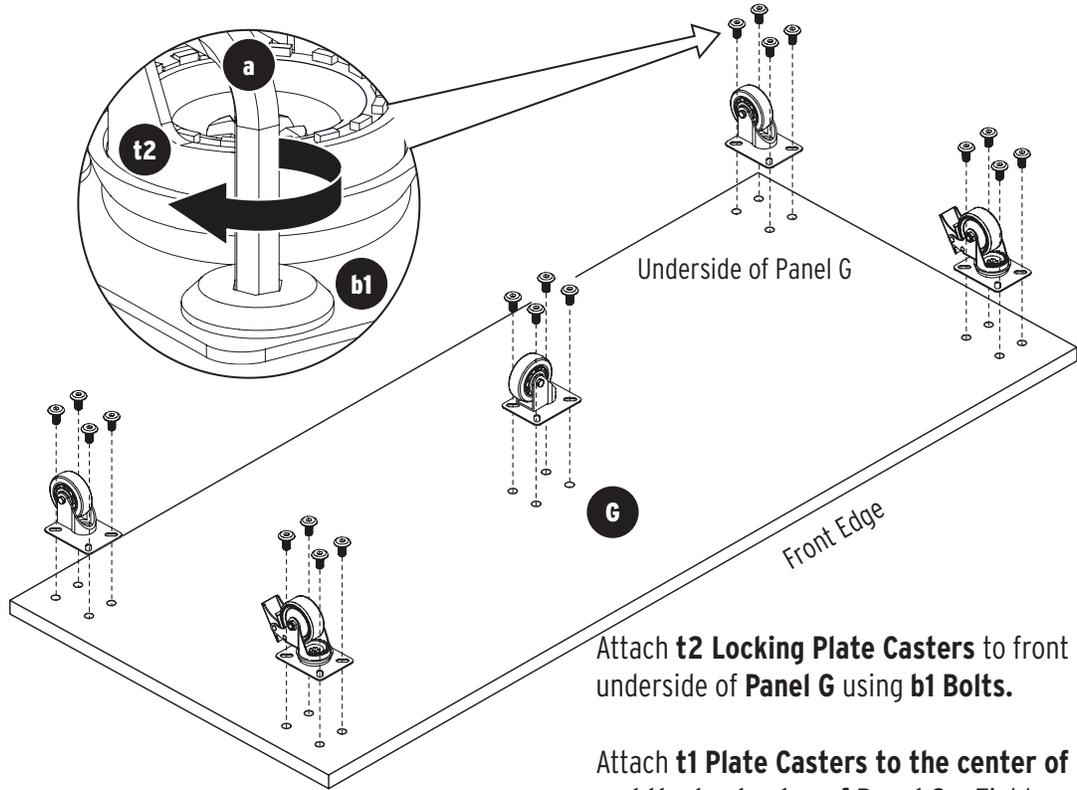


Attach **t2** Locking Plate Casters to front edge of the underside of **Panel G** using **b1** Bolts.

Attach **t1** Plate Casters to the center of **Panel G** and the back edge of **Panel G**. Tighten with **Allen Wrench**.

Lock casters and flip **Panel G** over.

Attach **c1** Cam Bolts to the topside of **Panel G**.


Set **Panel G** aside.

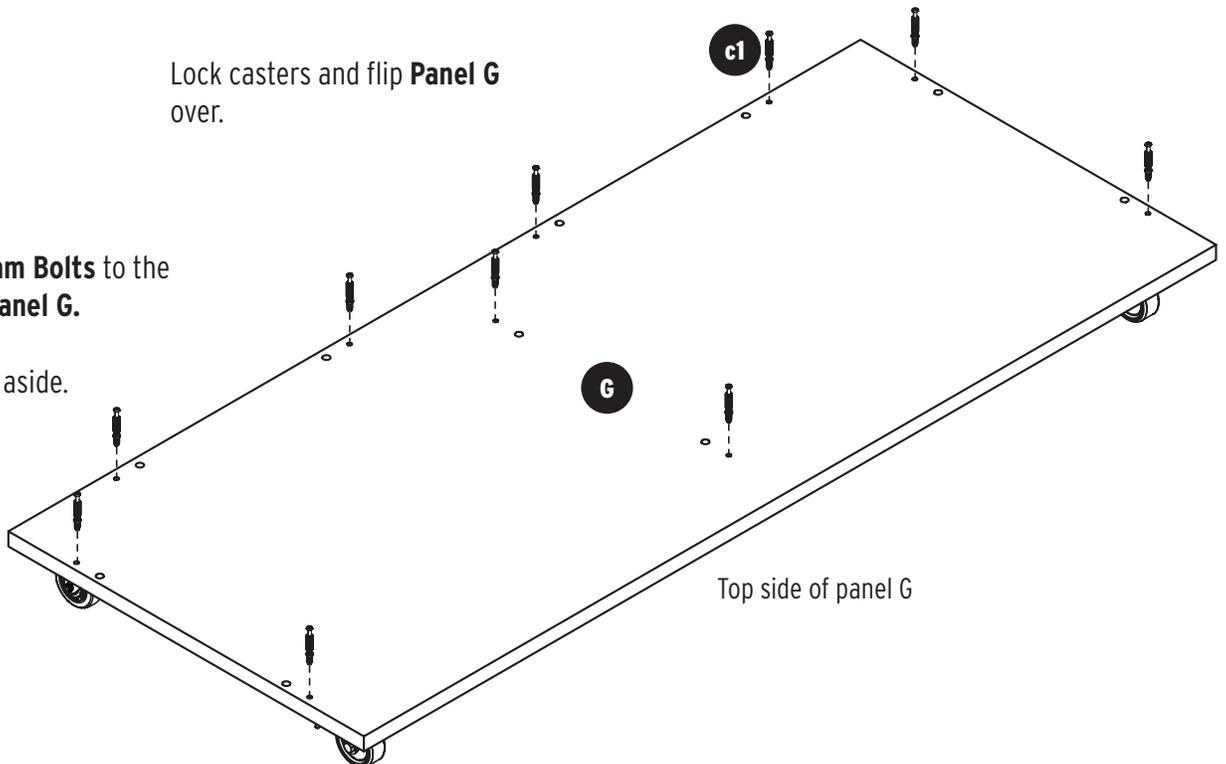

Part 1: Cabinet Shell


c1 6x35 Cam Bolt **x6**

d1 8x30 Dowel Pin **x26**

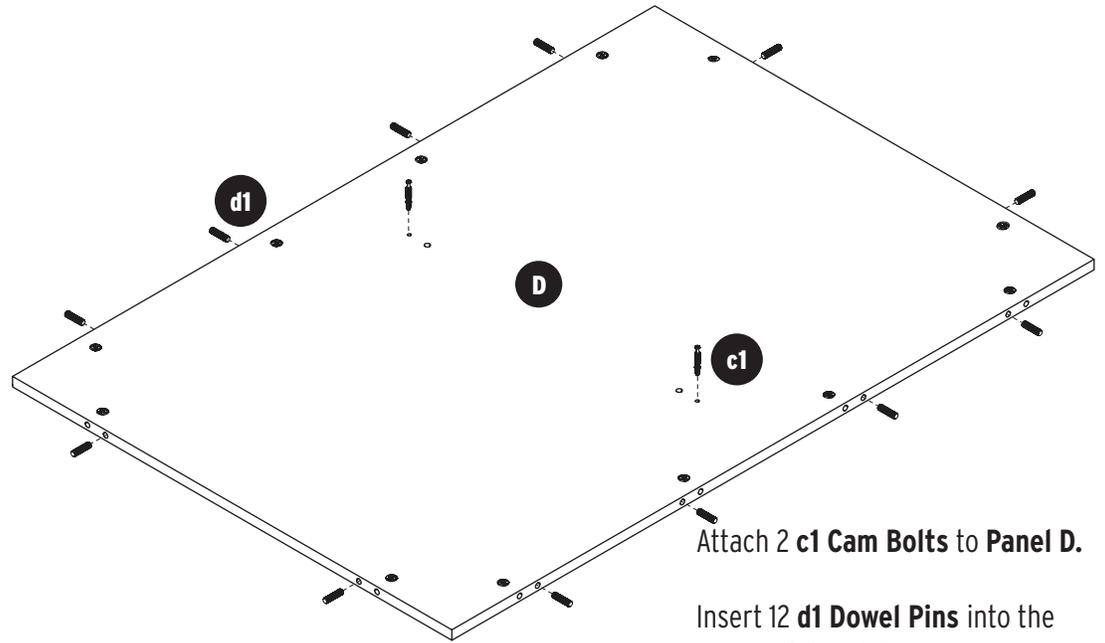


Attach 2 **c1** Cam Bolts to Panel D.

Insert 12 **d1** Dowel Pins into the edges of Panel D.

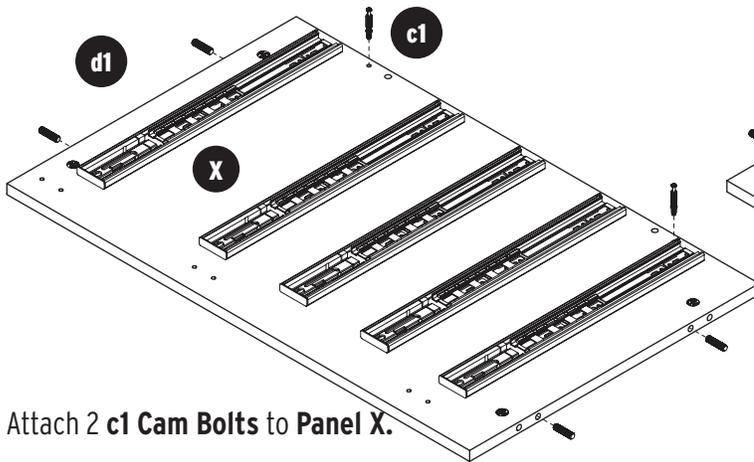


Attach 2 **c1** Cam Bolts to Panel X.

Insert 4 **d1** Dowel Pins into the edges of Panel X.

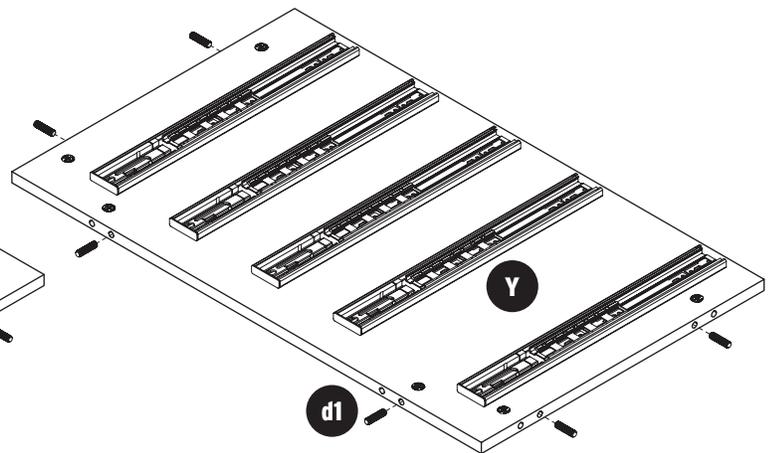

Insert 6 **d1** Dowel Pins into the edges of Panel Y.

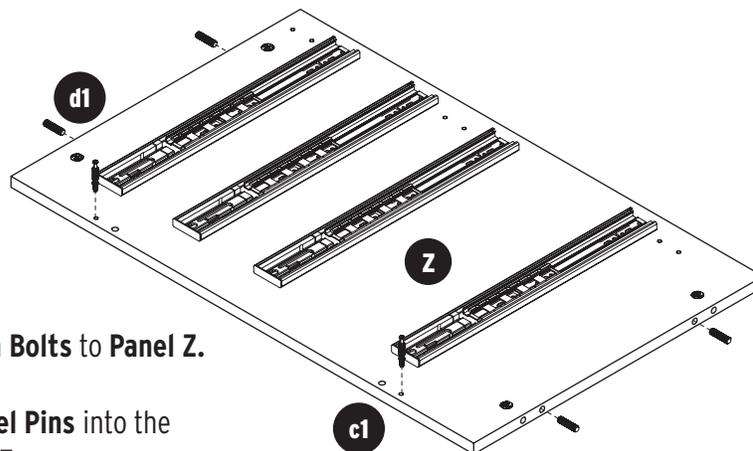


Attach 2 **c1** Cam Bolts to Panel Z.


Insert 4 **d1** Dowel Pins into the edges of Panel Z.

Part 1: Cabinet Shell



c2 $\frac{5}{8}$ " Cam Cover **x10**

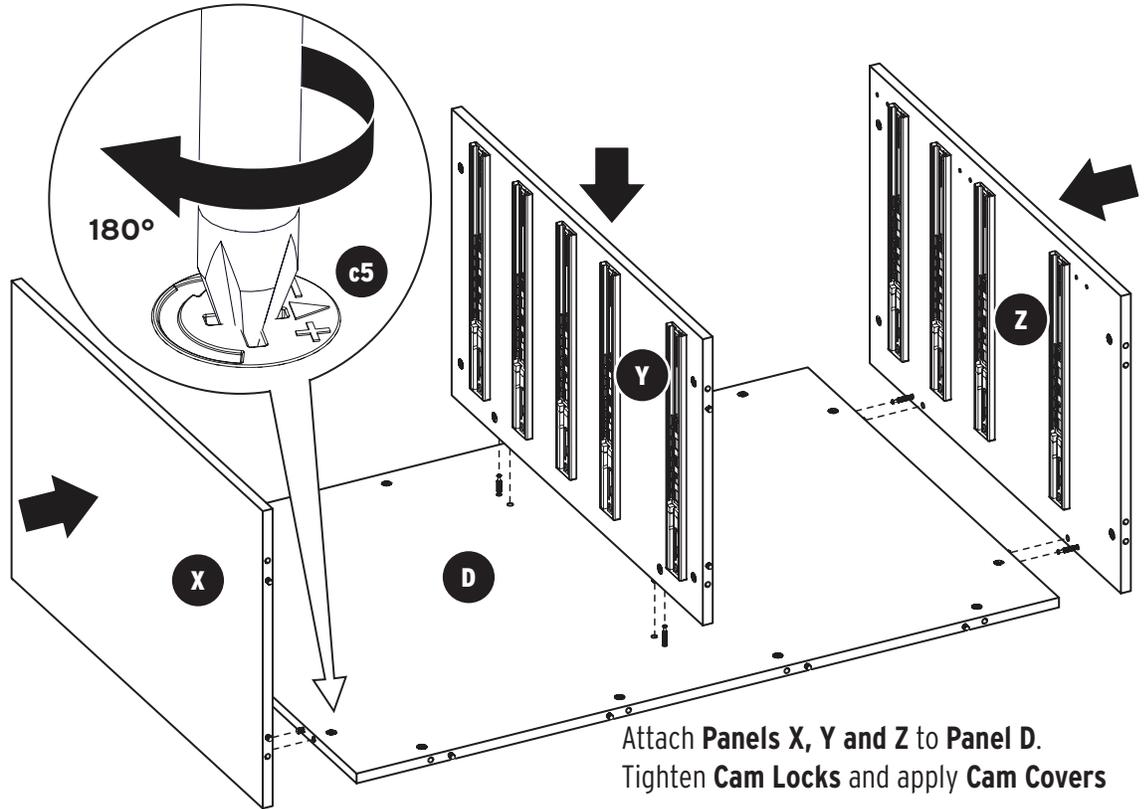



Attach **Panel G to Panels D, X, Y and Z** as shown. Tighten cam locks and apply **c2 Cam Covers**.

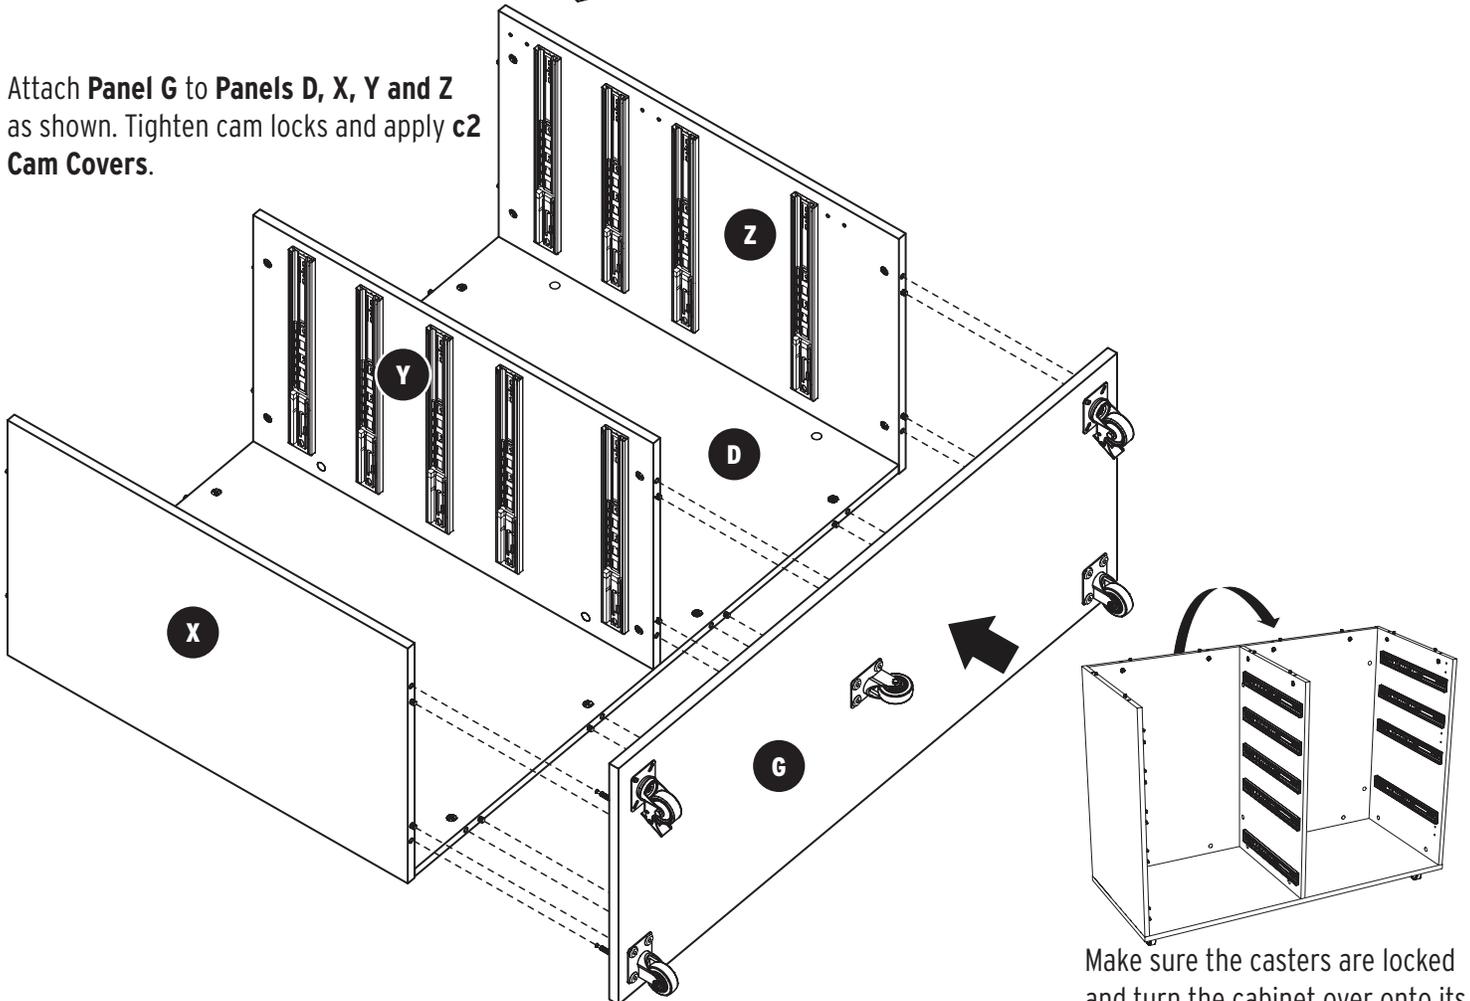

Part 1: Cabinet Shell

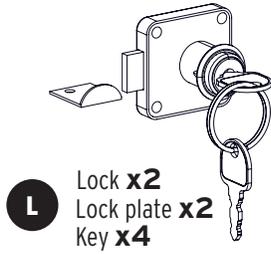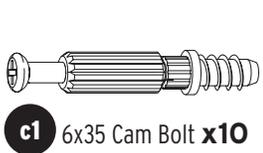


Attach **L Lock Plates** to **Panel A** with **s1 Screws**. Set aside the rest of the lock and keys

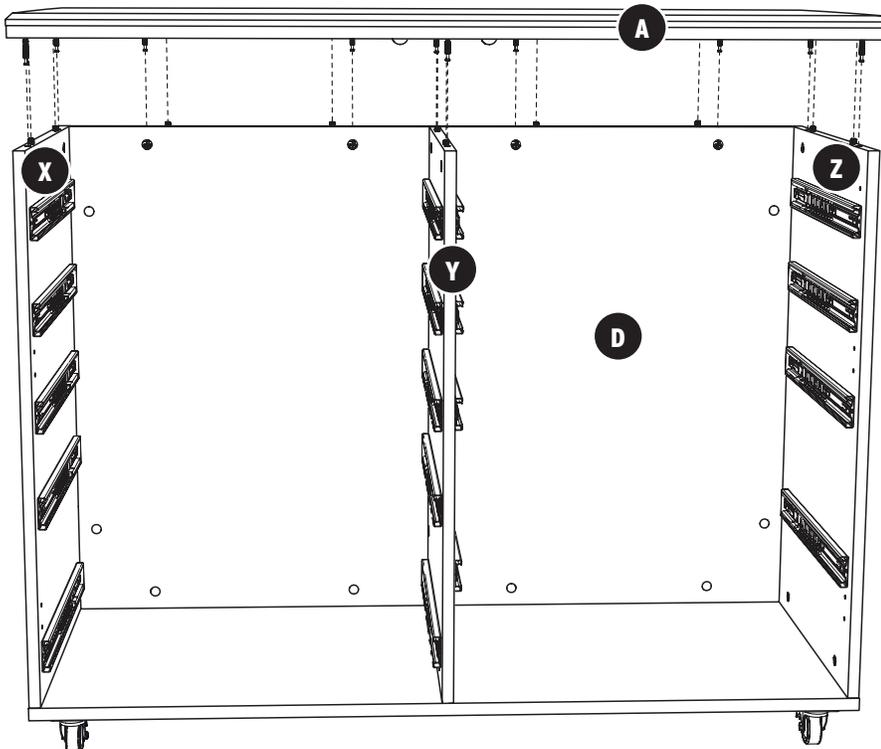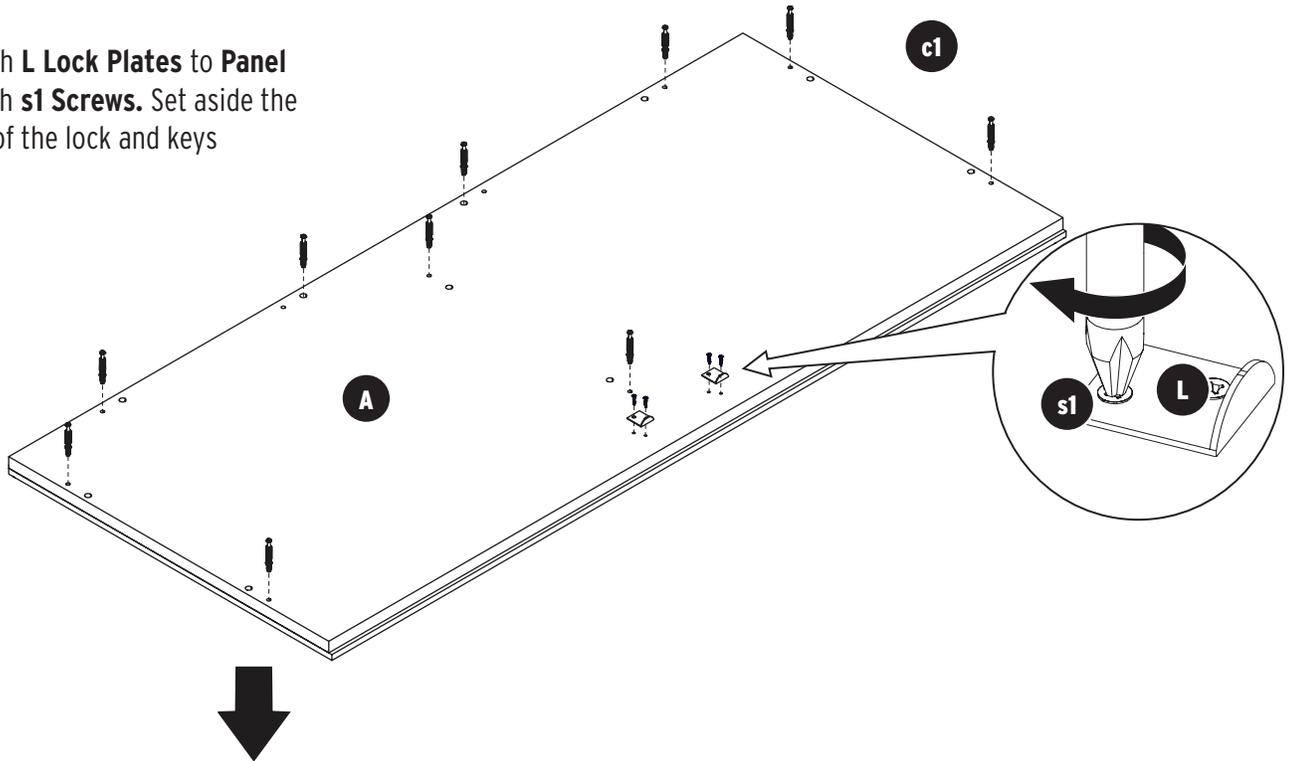

Lower **Panel A**, inserting cam bolts on **Panel A** onto cams on **Panels X, Y, Z and D**. Tighten cam locks and apply **c2 Cam Covers**.

Part 1: Doors

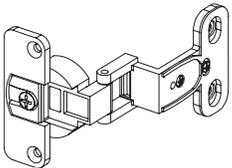

g1 Hinge Body **x6**



L Lock **x2**
Lock plate **x2**
Key **x4**



s1 3.5x14 Screw **x12**




h



s2 3.5x20 Screw **x8**




b2 4x24 Fix Bolt **x4**

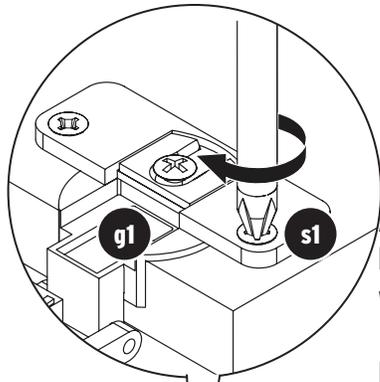



Attach **g1** Hinge Body to Panel **V1** with **s1** Screws.

Repeat with Panel **V2**.

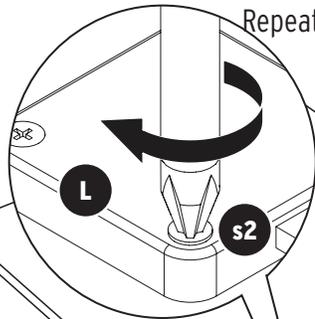

Attach **L** Lock to Panel **V2** with **s2** Screws.

Repeat with Panel **V1**.

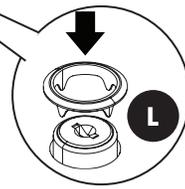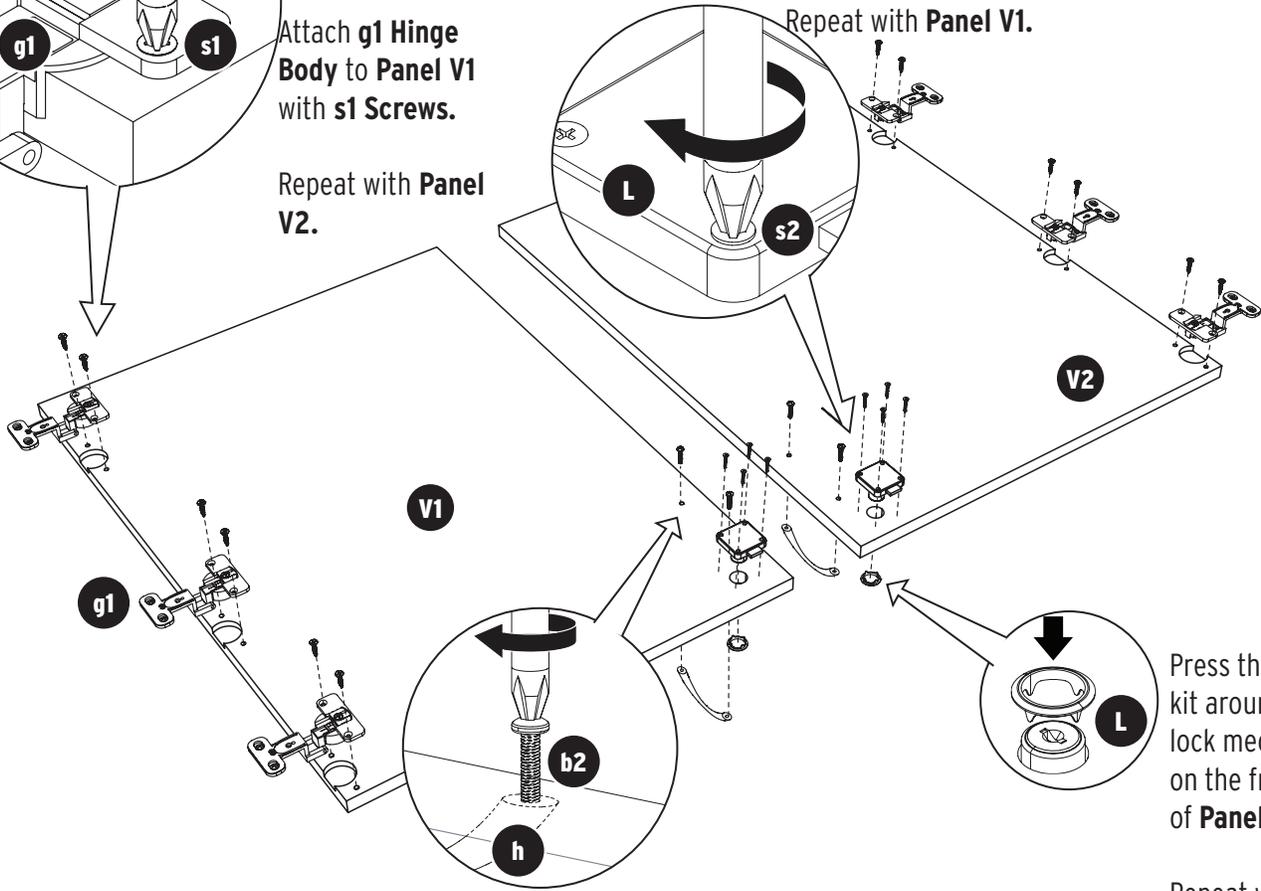


Press the trim kit around the lock mechanism on the front side of Panel **V2**.

Repeat with Panel **V1**.

Part 1: Doors




s1 3.5x14 Screw **x12**

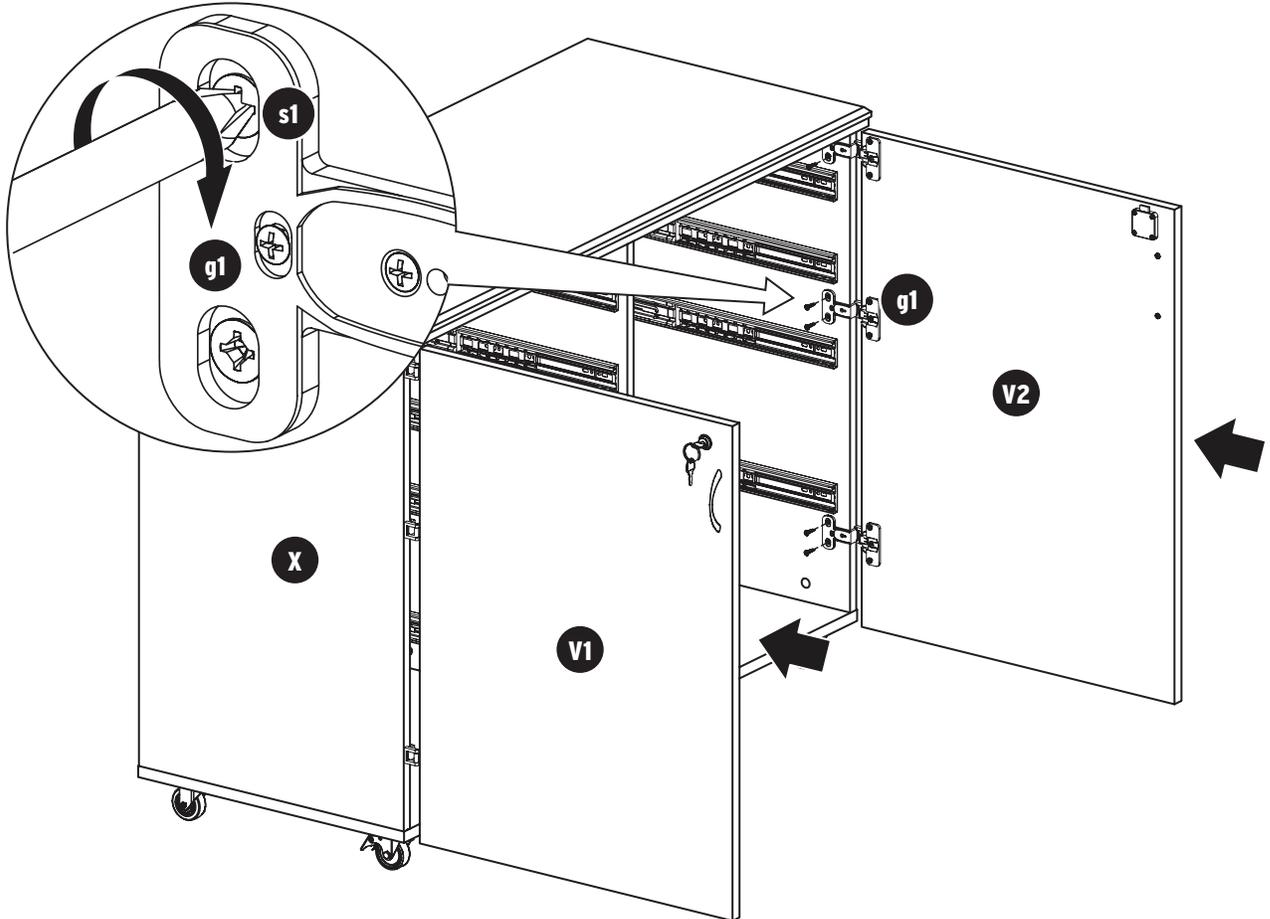

Attach **g1 Hinge Body** on **Panels V1 and V2** to **Panels X and Z** with **s1 Screws**.

Part 1: Gateleg Leaf Supports

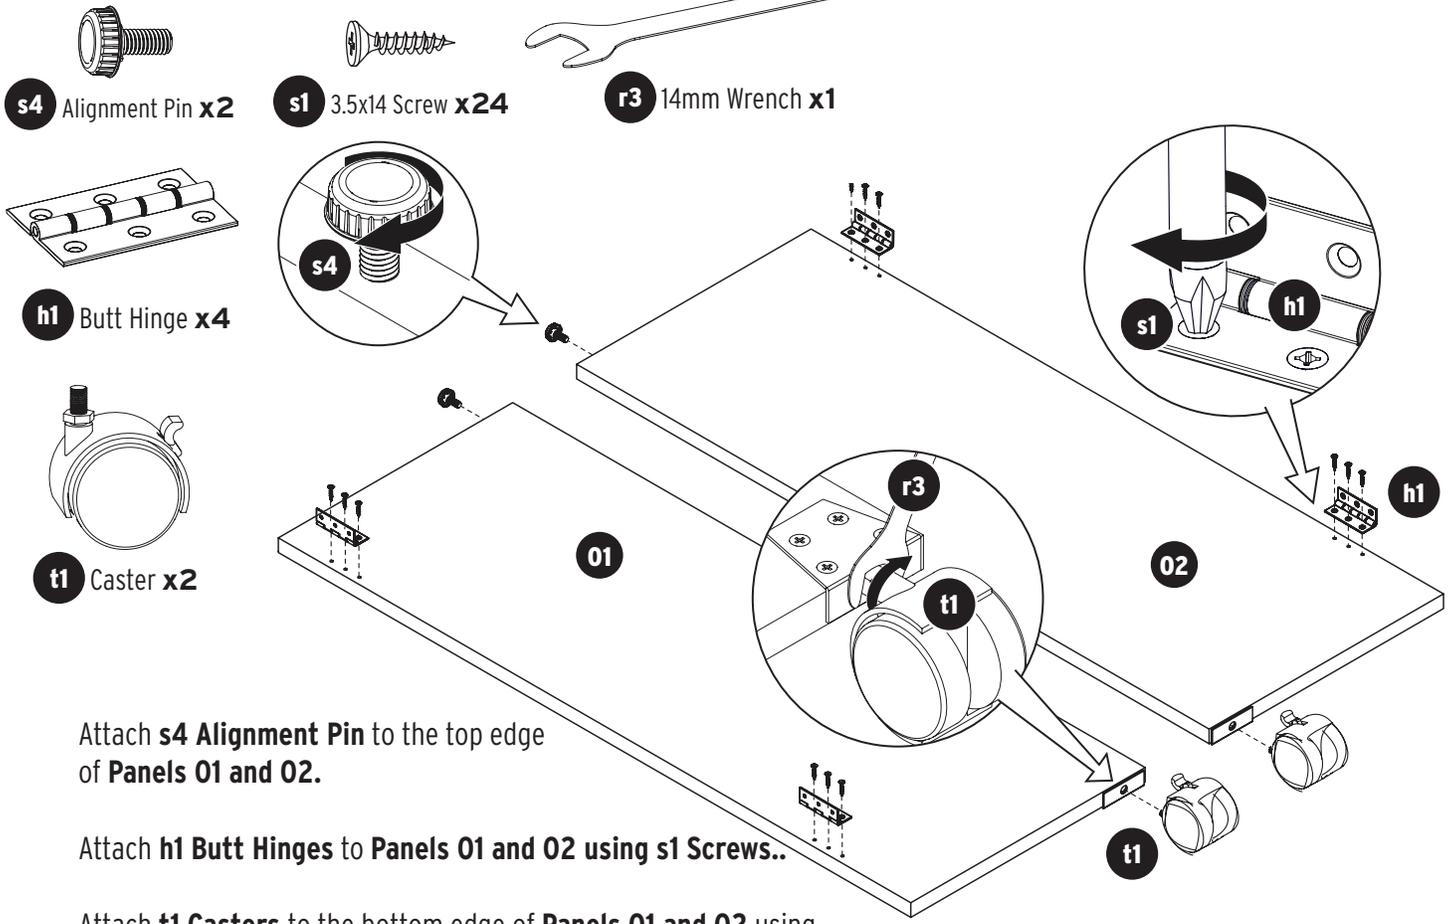


Attach **s4 Alignment Pin** to the top edge of **Panels 01 and 02**.

Attach **h1 Butt Hinges** to **Panels 01 and 02** using **s1 Screws**.

Attach **t1 Casters** to the bottom edge of **Panels 01 and 02** using **r3 Wrench**.


Attach **Panels 01 and 02** to **Panel D** using **S1 Screws**.

You may need a friend to help you hold **Panels 01 and 02** steady as you attach them, but it is not required.

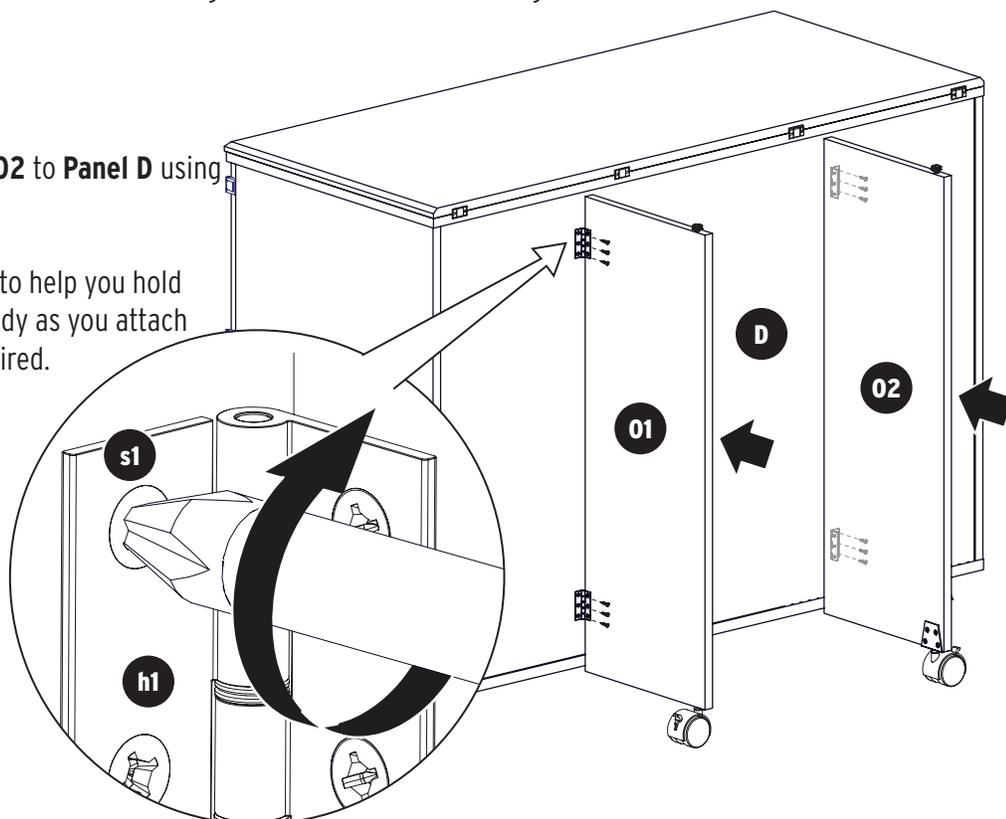

A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do **NOT** extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.











Part 2: Drawers

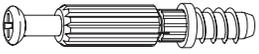

c1 6x35 Cam Bolt **x60**





d1 8x30 Dowel Pin **x32**

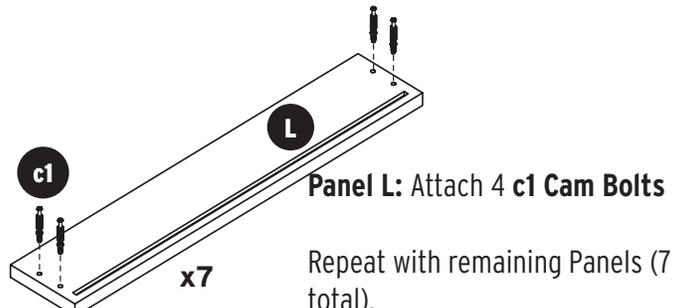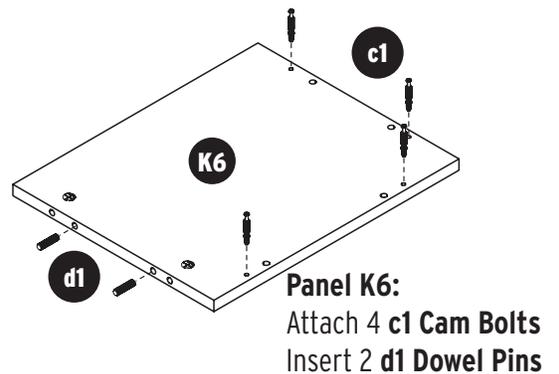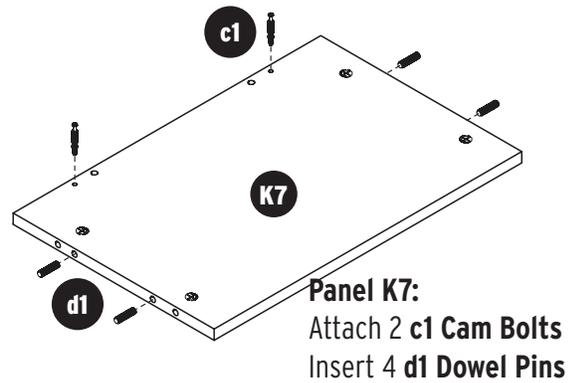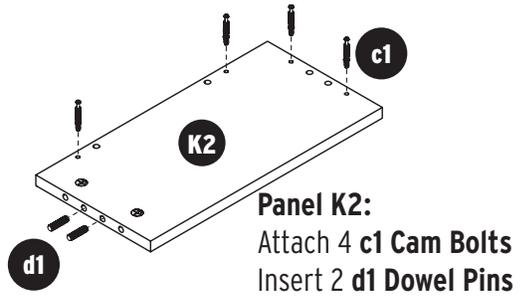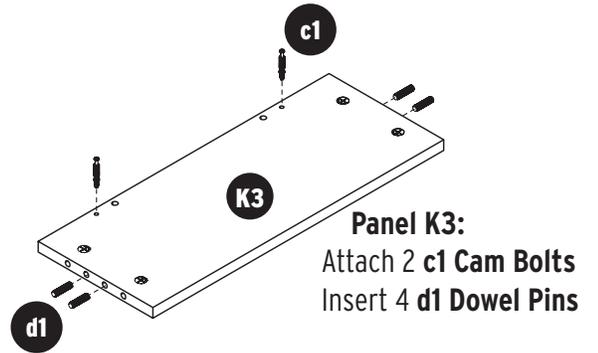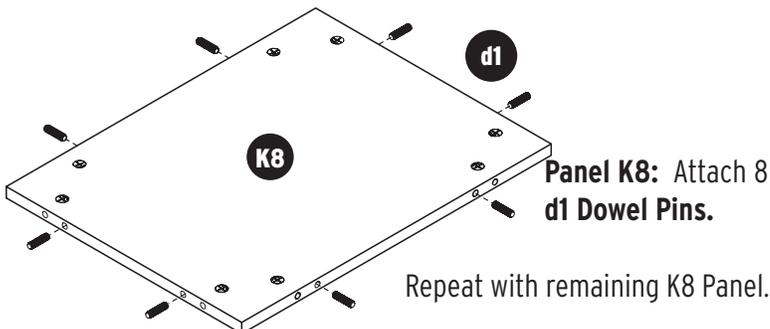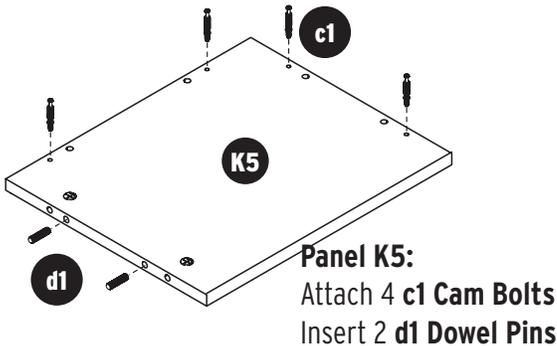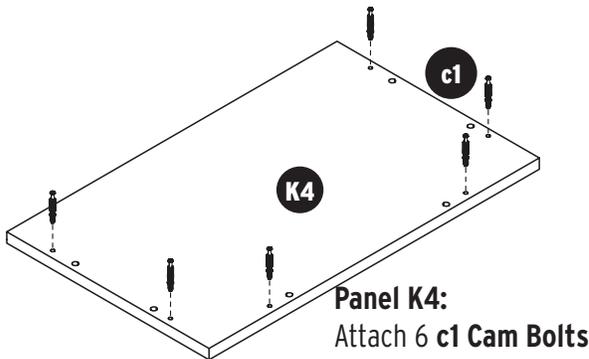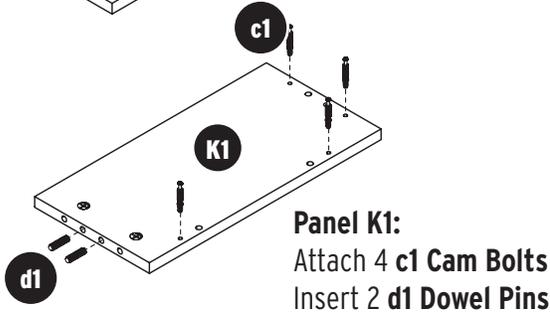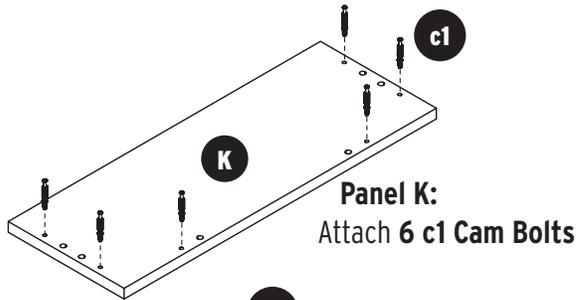

Part 2a: "L" Drawers

c2 5/8" Cam Cover **x4**


s3 3.5x30 Screw **x28**

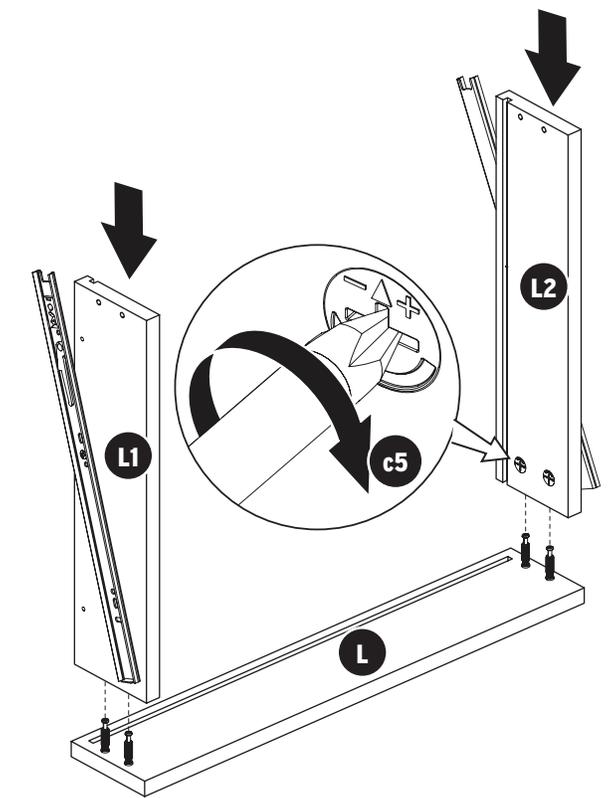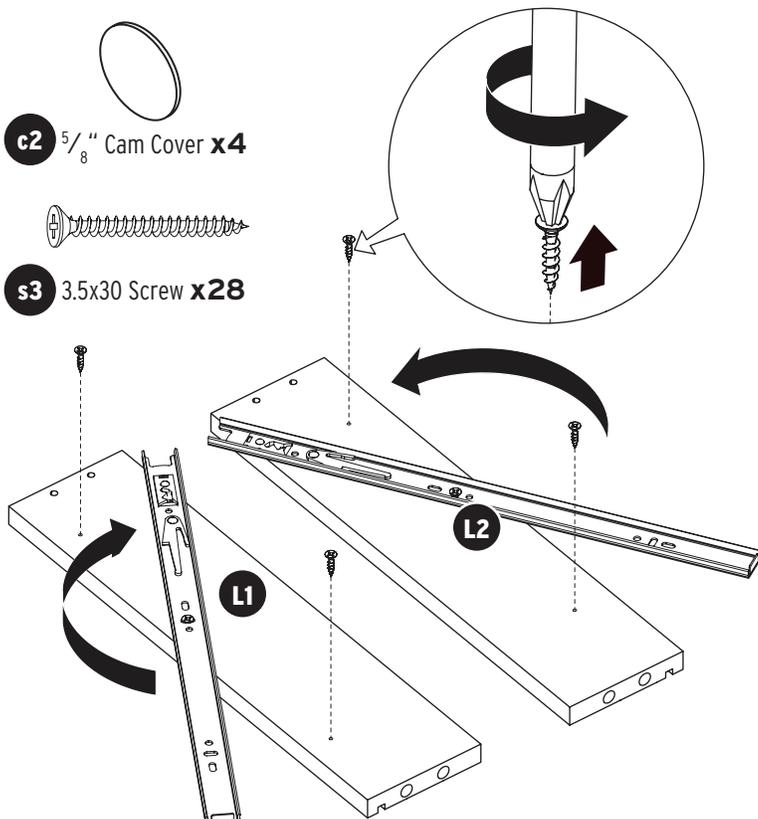


To reach the pre-drilled screw holes on the sides of **Panels L1 and L2**, you will need to tilt the drawer runners.

Attach **Panels L1 and L2** to **Panel L** as shown above. Tighten cams and apply **c2 Cam Covers**. Repeat with remaining 6 drawers (7 total).

Remove the front and back screws on the drawer runners, leaving the middle screw installed. Pivot the drawer runners to access screw holes as shown above. Repeat with remaining 6 drawers (7 total)


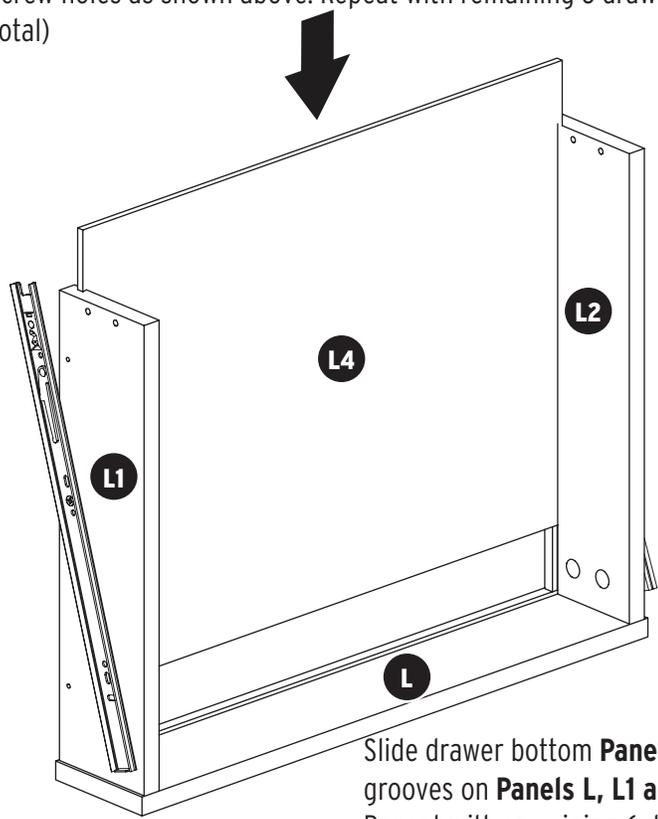


Slide drawer bottom **Panel L4** into the grooves on **Panels L, L1 and L2**. Repeat with remaining 6 drawers (7 total).

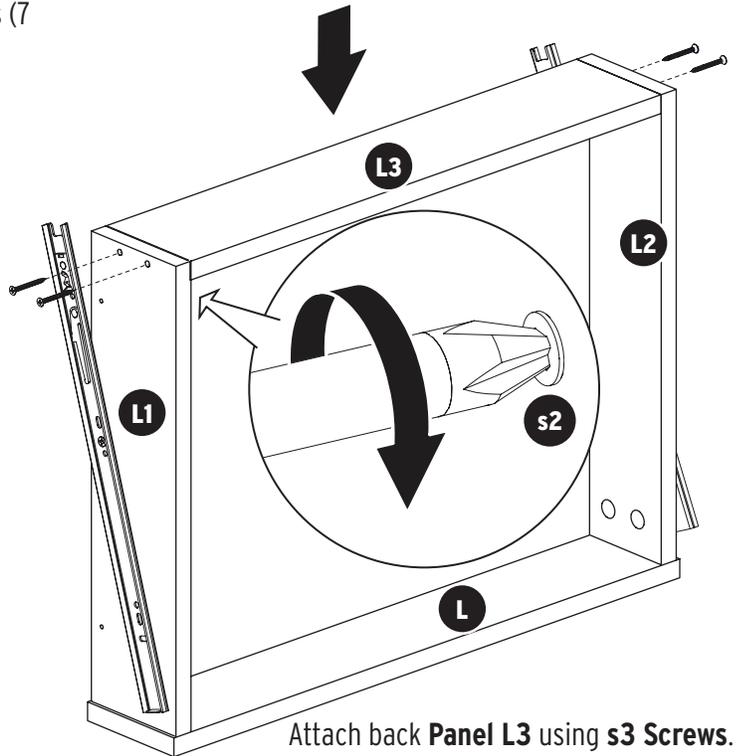


Attach back **Panel L3** using **s3 Screws**. Realign drawer runners and replace screws on drawer runners. Repeat with remaining 6 drawers (7 total).

Part 2b: "K" Drawer

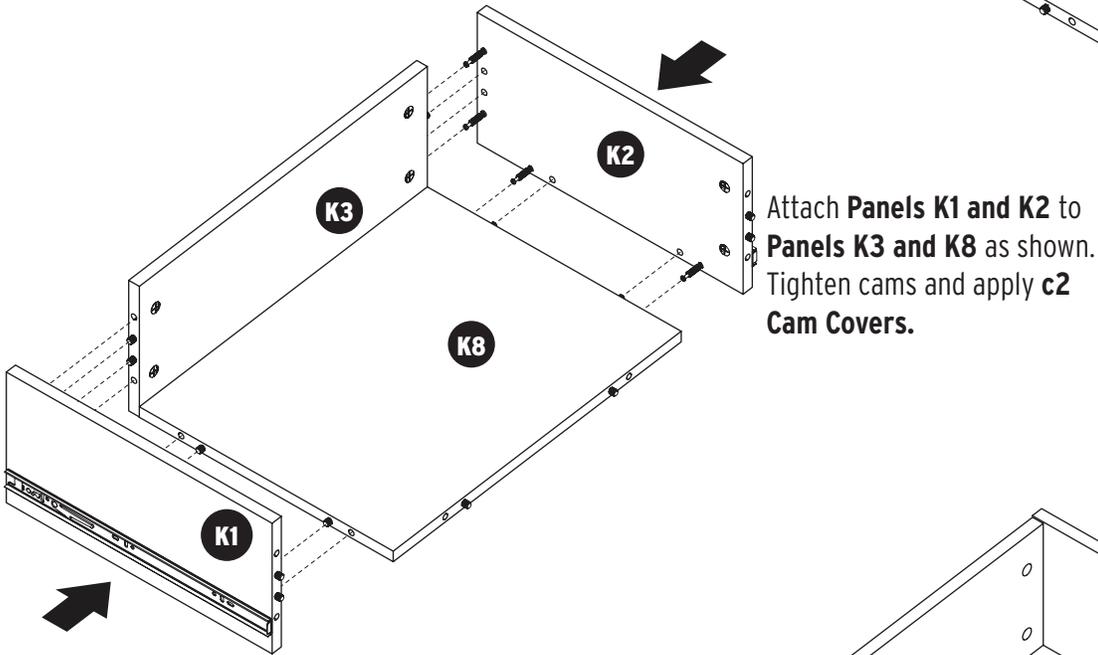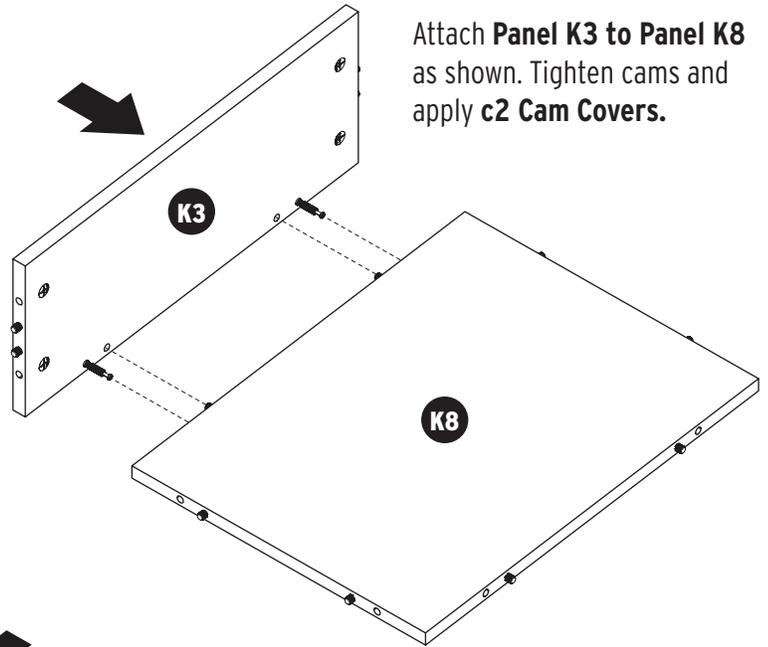


Attach **Panel K to Panels K1, K2 and K8** as shown. Tighten cams and apply **c2 Cam Covers**.

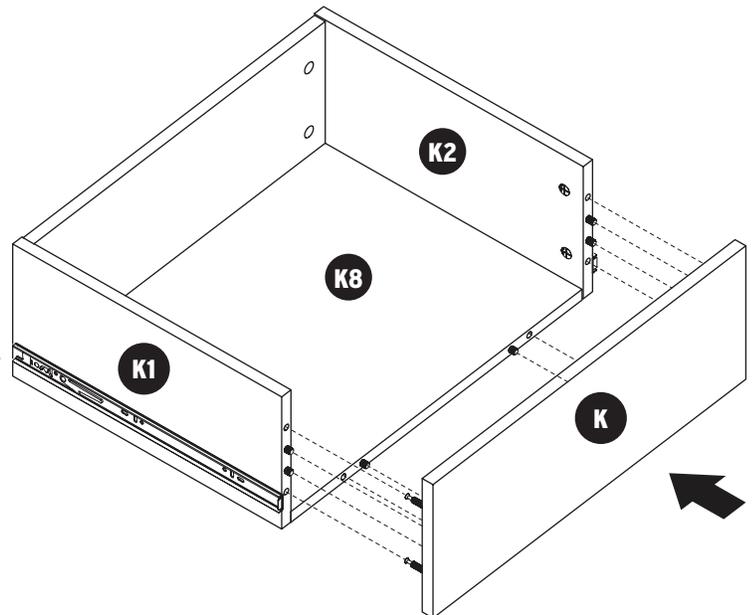


Part 2c: "K4" Drawer



c2 $\frac{5}{8}$ " Cam Cover **x16**

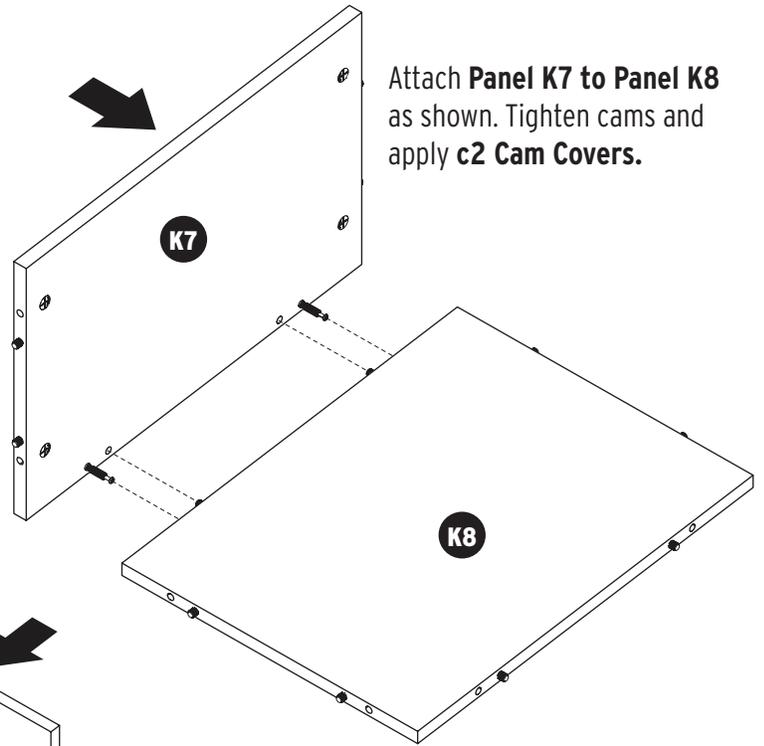


Attach **Panel K7** to **Panel K8** as shown. Tighten cams and apply **c2** Cam Covers.

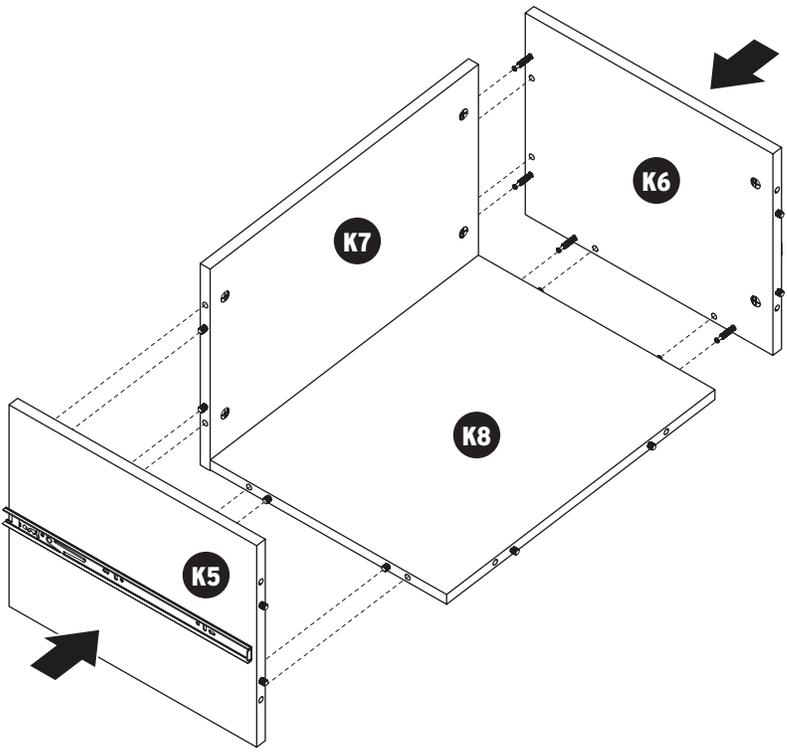


Attach **Panels K5** and **K6** to **Panels K7** and **K8** as shown. Tighten cams and apply **c2** Cam Covers.

Attach **Panel K4** to **Panels K5**, **K6** and **K8** as shown. Tighten cams and apply **c2** Cam Covers.

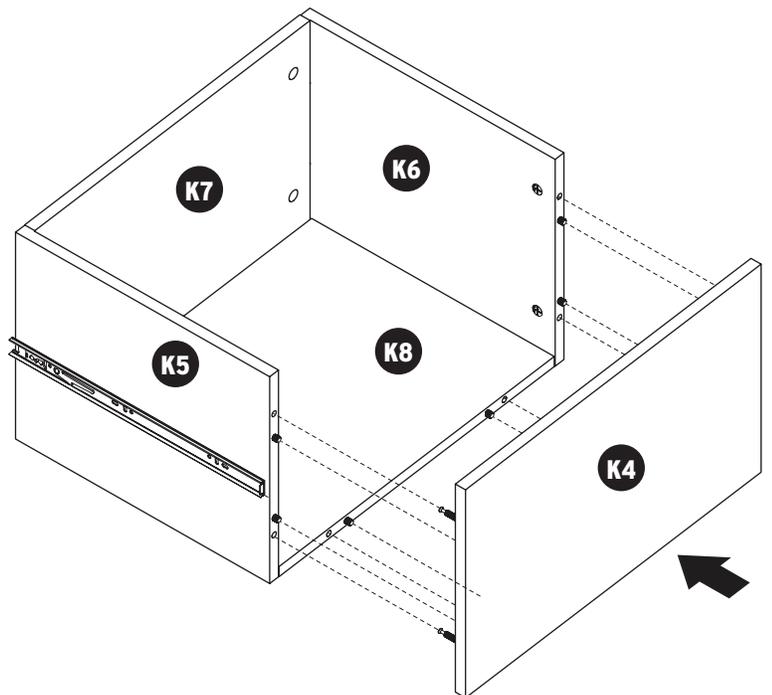

Part 2: Drawers

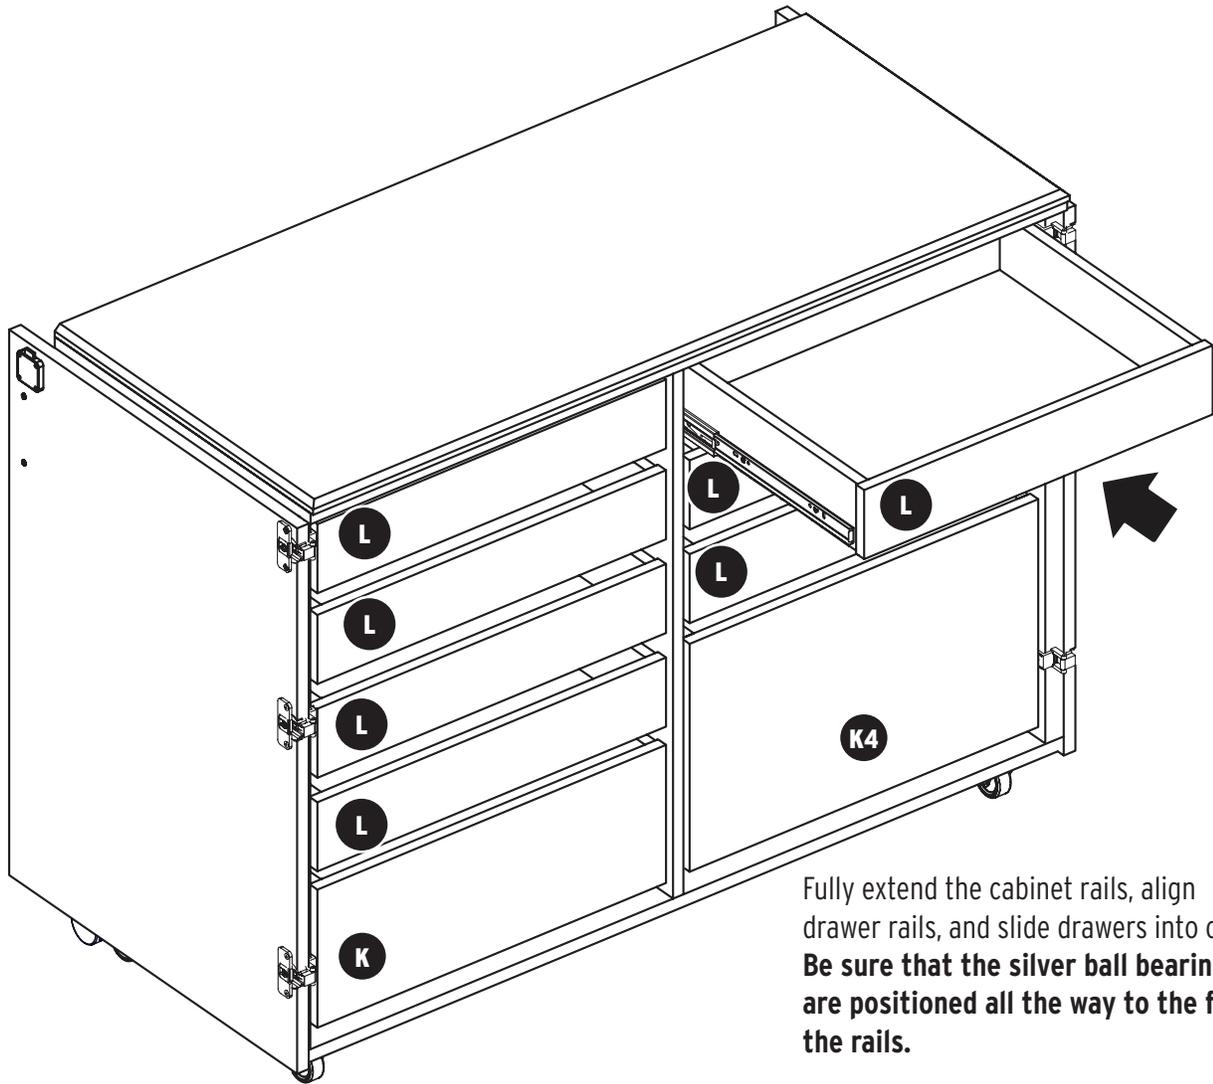

Fully extend the cabinet rails, align drawer rails, and slide drawers into cabinet. **Be sure that the silver ball bearing pieces are positioned all the way to the front of the rails.**

TIP: Once you hear the drawer runners “click” into place, gently open and close the drawers a few times to engage the Soft Close mechanism.



Congratulations! A better sewing experience awaits!



KANGAROO™
sewing furniture

LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC "Arrow" provides a Limited Lifetime Warranty "Warranty" to the original purchaser of this product against defects in materials or workmanship of furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Electrical and mechanical components of furniture are warranted for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request Warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial Warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a Warranty claim, customer may receive a brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, care, or neglect, cuts or scratches, caster damage as a result of moving furniture fully loaded or with locked casters, damage resulting from electrical surge or lightning, or use in commercial or education environments. Kangaroo Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS Warranty, such as loss of use, disassembly, transportation, labor, or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS Warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited Warranty gives you specific legal rights. This limited Warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/Warranty.


SEW IN COMFORT. SEW LONGER.™



Accessories to Complete Your Sewing Studio

Custom Insert


Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

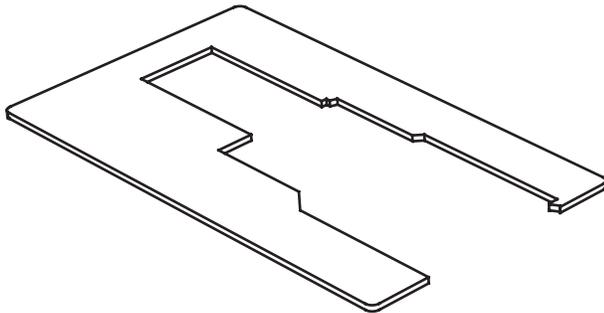

Insert

Arrow Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360 swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!

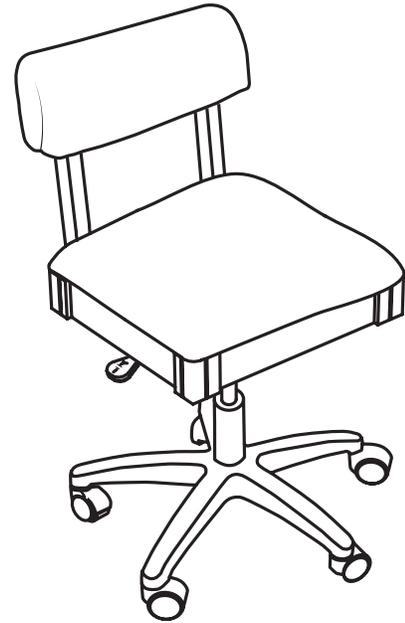

Height Adjustable Sewing Chair

P.O. Box 410 Elkhorn, WI 53121
1-800-533-7347 Ext. 1
CS@ArrowSewing.com
www.ArrowSewing.com

02-22