


ASSEMBLY INSTRUCTIONS Wallaby


ITEM NO.: K8405 Teak

K8411 Ash White

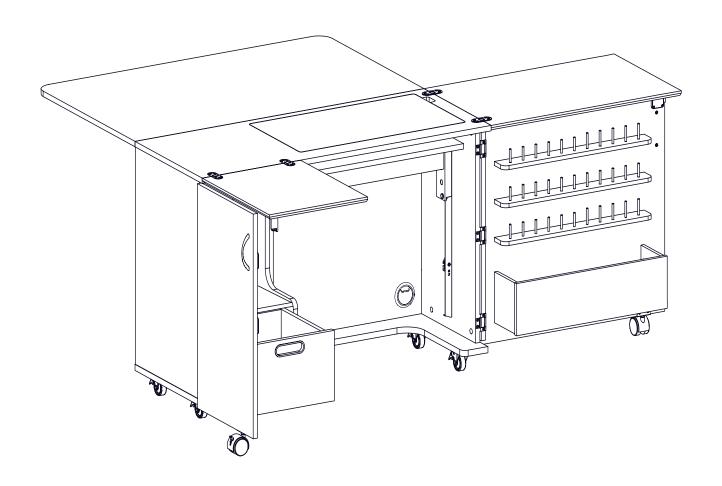

General Assembly Guidelines

1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.

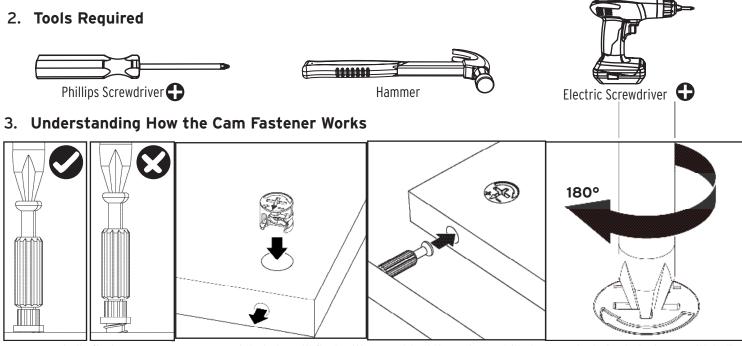

Screw cam bolts flush as illustrated.

surface. The arrow direction must be in the direction of the hole.

Press cam into hole until flush with Insert bolt through pre-drilled Turn clockwise to lock cam with bolt. hole in edge of panel.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better.




4. Glue provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.

Use and Care Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

Cleaning - To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. DO NOT use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.

Electrical and Hydraulic Lifts - Require annual lubrication with WD-40 or similar lubricant.


Parts List: Panels

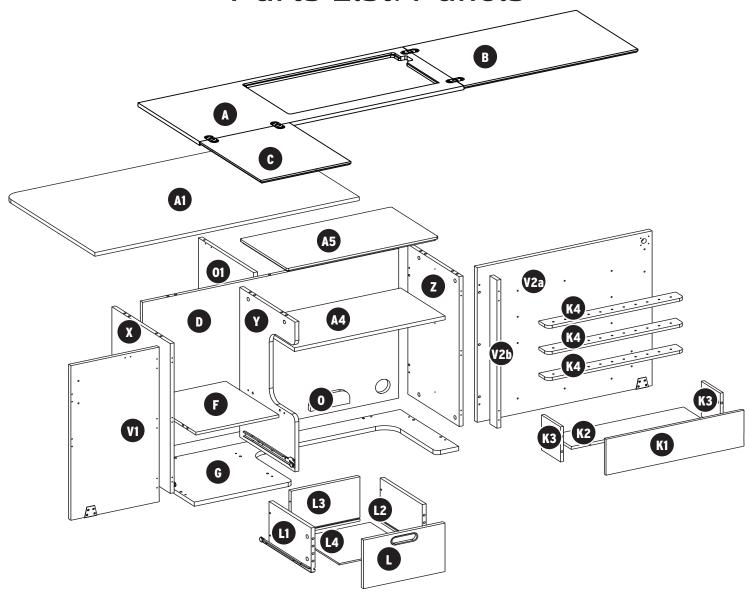

ITEM	DESCRIPTION	QTY.	PACK.	ITEM	DESCRIPTION	QTY.	PACK.
Α	Top Panel	1	3 of 4	V2b	Right Door Edge Panel	1	1 of 4
В	Right Leaf	1	3 of 4	L	Drawer Front	1	1 of 4
C	Left Leaf	1	3 of 4	L1	Drawer Side Left	1	1 of 4
A5	Platform Cover	1	3 of 4	L2	Drawer Side Right	1	1 of 4
G	Bottom Panel	1	3 of 4	L3	Drawer Back	1	1 of 4
D	Back Panel	1	2 of 4	L4	Drawer Bottom	1	1 of 4
Z	Right Side Panel	1	2 of 4	0	Insert Holder	1	1 of 4
A1	Quilt Extension Panel	1	2 of 4	01	Gate Leg	1	1 of 4
V1	Left Door Panel	1	2 of 4	K1	Door Bin Front Panel	1	1 of 4
				K2	Door Bin Bottom Panel	1	1 of 4
V2a	Right Main Door Panel	1	1 of 4	К3	Door Bin Sides	2	1 of 4
X	Left Side Panel	1	1 of 4	K4	Fixed Shelf On Door	3	1 of 4
Υ	Partition	1	1 of 4	A4	Platform	1	1 of 4
F	Fixed Shelf	1	1 of 4	A4	riationiii	ı	1014
					Lift & Rails	1	4 of 4


Parts List: Hardware

TIP: Keep all the parts in their individually labeled bags. This will make finding parts easier as you assemble your cabinet.

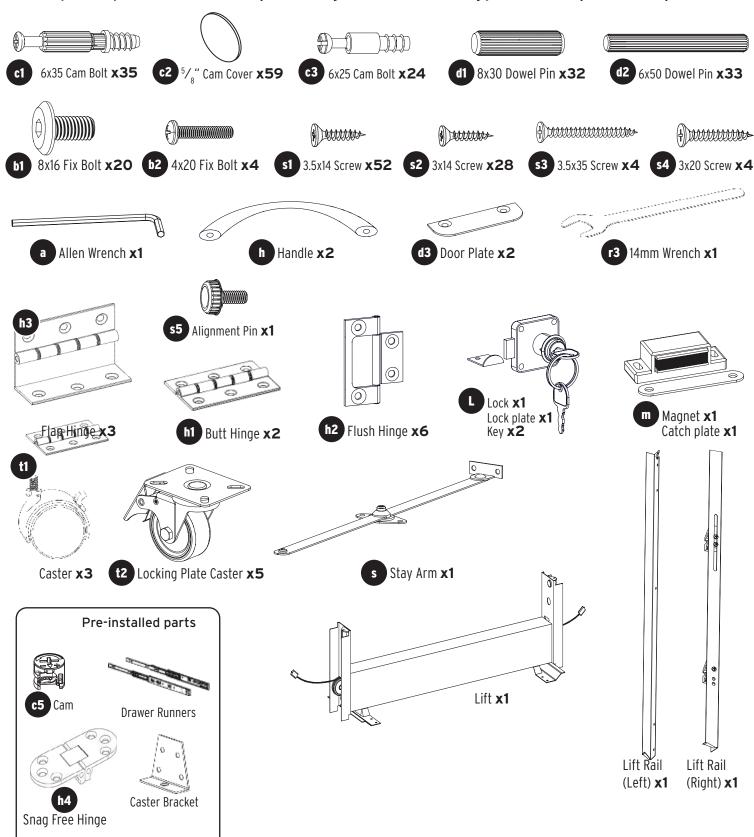


Step 1: Cabinet Base

We can't wait to get your brand new Wallaby Sewing Cabinet up and running. Please contact our Customer Service Team at 1-800-533-7347, ext. 1 during normal business hours with any assembly related questions.

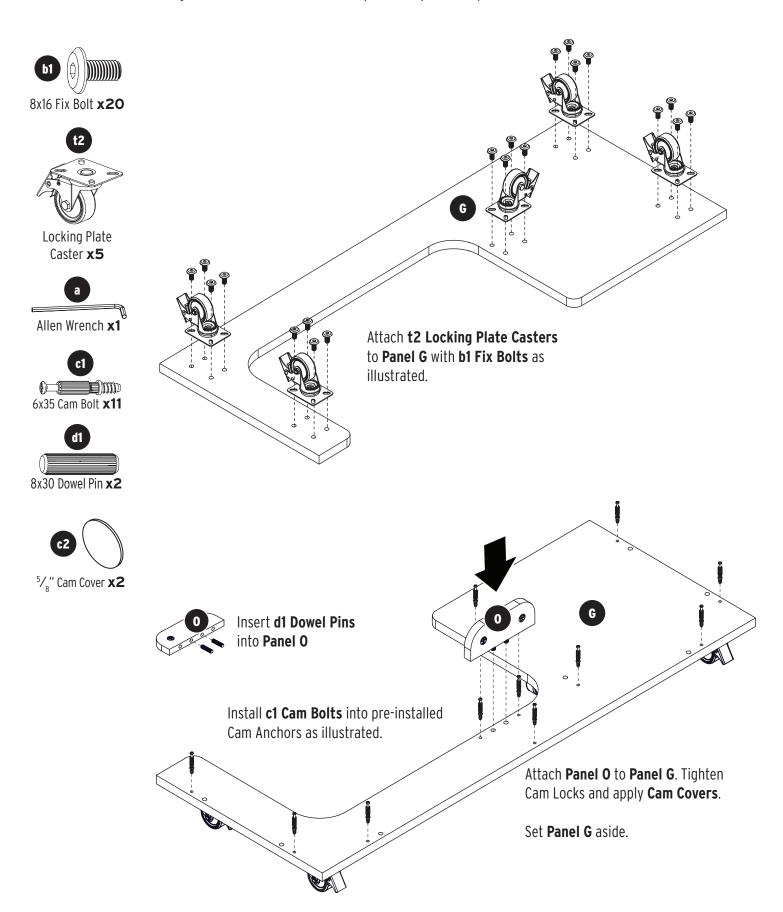


Step 2: Cabinet Sides and Back




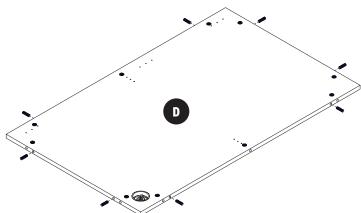


Insert 8 d1 Dowel Pins into the edges of Panel D

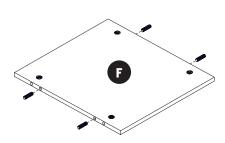


Insert 4 **d1 Dowel Pins** into the edges of **Panel F**

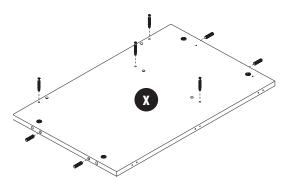

Insert 4 **d1 Dowel Pins** into the edges of **Panel X**Install 4 **c1 Cam Bolts** into pre-installed Cam
Anchors on **Panel X**

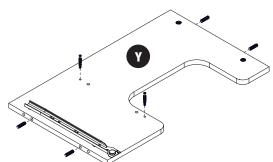


Insert 4 d1 Dowel Pins into the edges of Panel Y
Install 2 c1 Cam Bolts into pre-installed Cam
Anchors on Panel Y

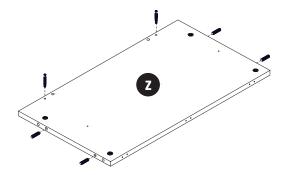

Insert 4 d1 Dowel Pins into the edges of Panel Z Install 2 c1 Cam Bolts into pre-installed Cam Anchors on Panel Z

Step 2: Cabinet Sides and Back

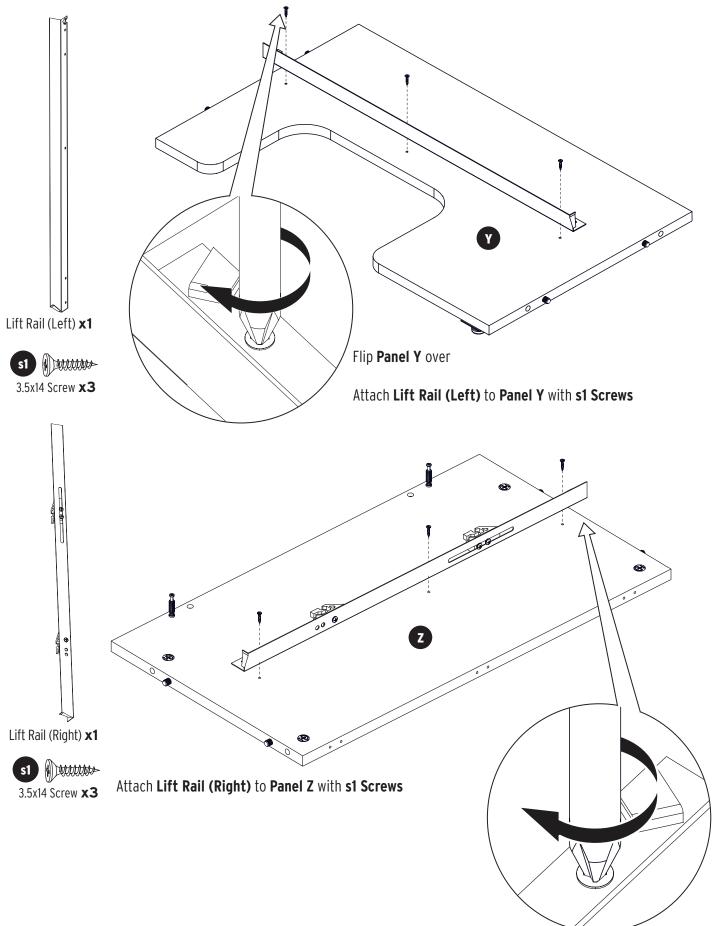



Step 2: Cabinet Sides and Back

Note: We recommend doing this step with panels upside down as shown so panels are in correct position to attach Panel G.


Note: Cam Locks on Panel D will be facing the back of the cabinet.

⁵/₈" Cam Cover **x8**

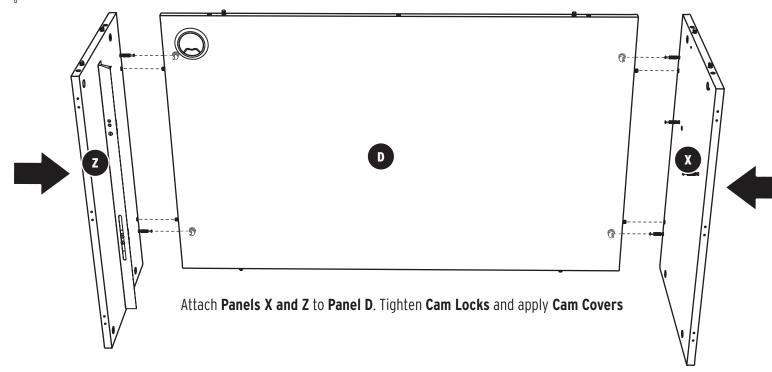

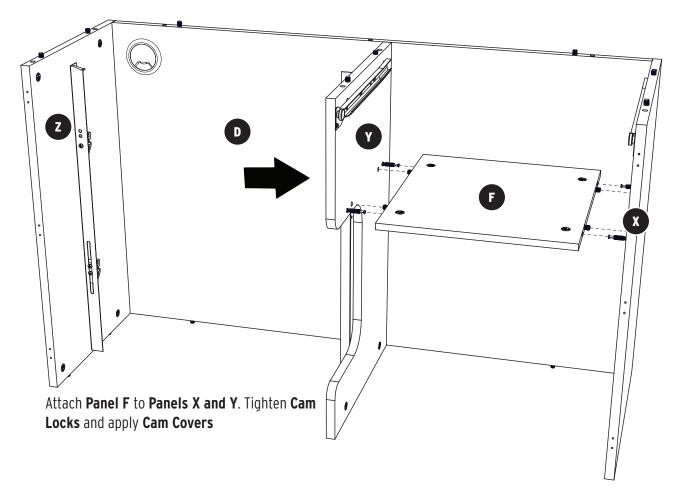

Step 3: Attaching the Base

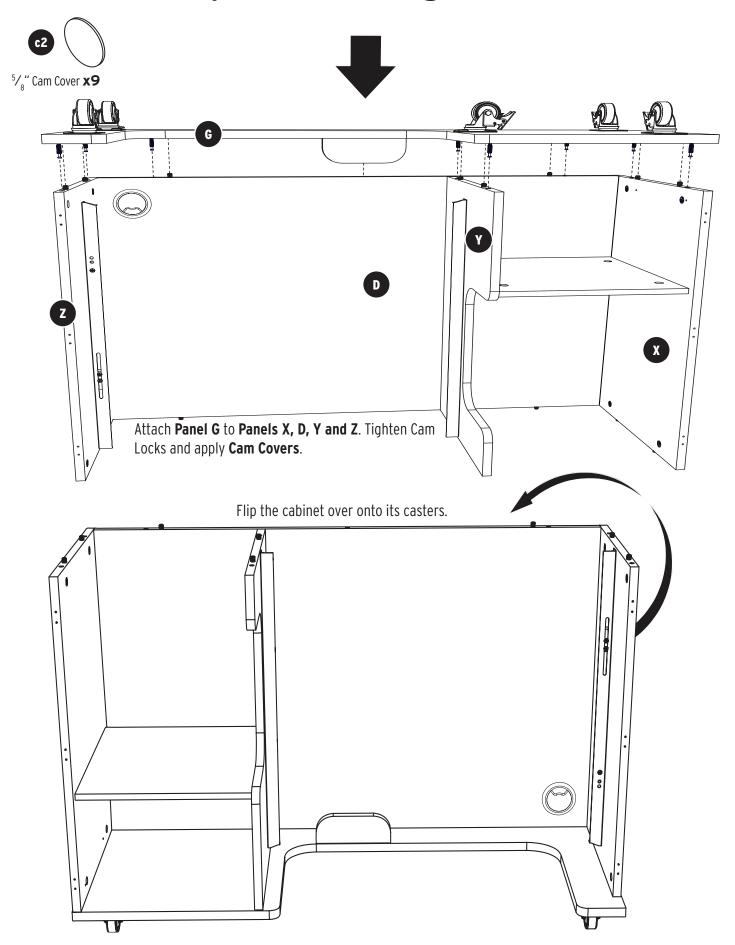


Step 4: Lift Panel

LIFT INSTALLATION WARNING:


DO NOT remove the small wooden block from the Lift until assembly is complete. If the block is removed or falls out before lift assembly is complete, the cables will retract, making installation difficult. If the block falls out before complete assembly, Call Customer Service during normal business hours at 1-800-533-7347, ext. 1 for assistance, or visit www.arrowsewing.com/assembly-videos and find the "Alternative Airlift Attachment Steps" video.

This illustration shows the back view of the Lift. Notice the wooden block and zip tie; the wooden block holds the piston in place so that the cables can be easily handled and inserted

into the Lift Rails installed on your cabinet.

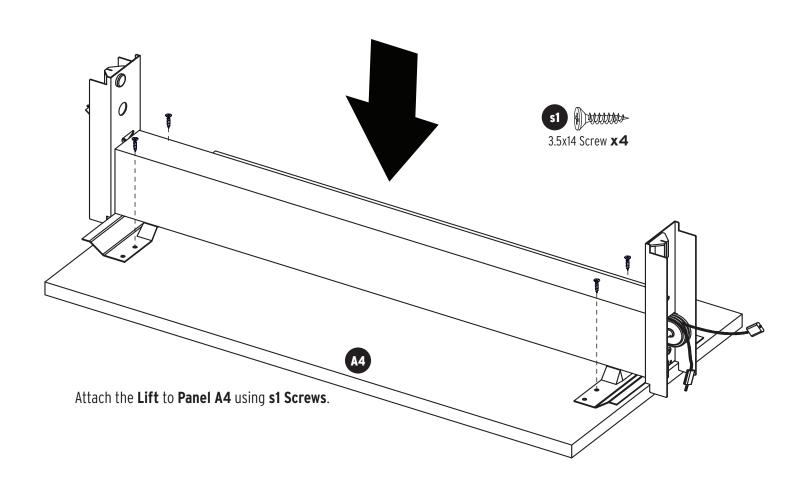

Step 4: Lift Panel

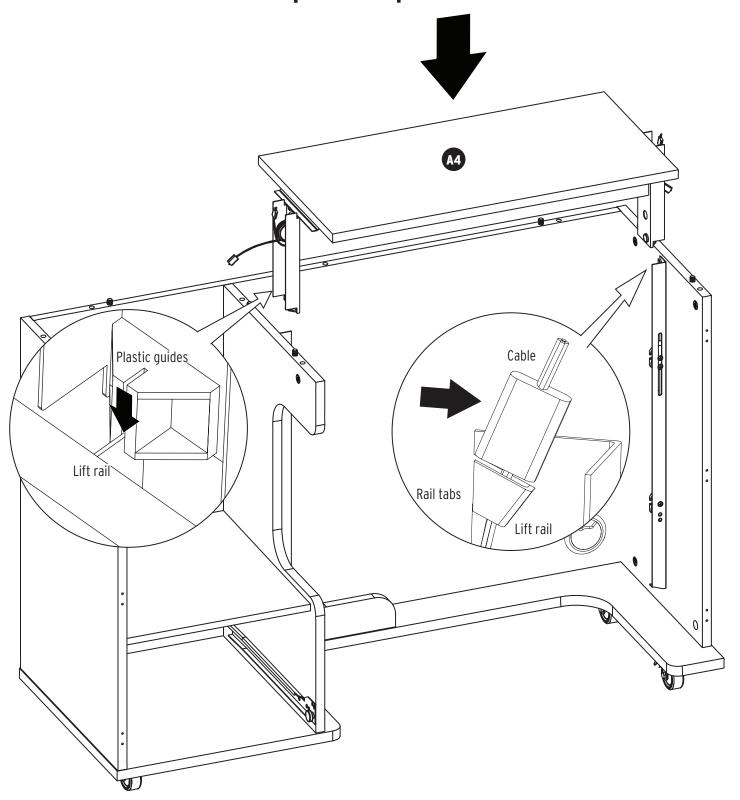

Guide **Lift** onto **Lift Rails** using plastic guides. Insert ends of cable into rail tabs; make sure the cable is hooked into the rail tabs on both sides.

Cut the zip tie on the wooden block, but DO NOT remove the block yet.


Push the **Lift** down to first lock position and remove the wooden block. **DO NOT ADJUST LIFT POSITION until the top is installed**, or you risk the Lift coming out and cables becoming disengaged.

Step 4: Attaching the Top Insert Cam Bolts into Panel A. Attach Lock Plate to Panel A using s1 Screws, 6x35 Cam Bolt **x9** making sure that the flat face of the **Lock** Plate faces toward the front edge of Panel A. Stay Arm **x1** Attach s Stay Arm with s1 Screws. Front Edge Lock Plate x1 3.5x14 Screw **x4 c2** 5/₈" Cam Cover **x9**


A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do **NOT** extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.

Lower **Panel A** onto **Panels X, D, Y and Z.** Tighten Cam Locks and apply Cam Covers.

Step 4: Gate Leg and Quilt Panel

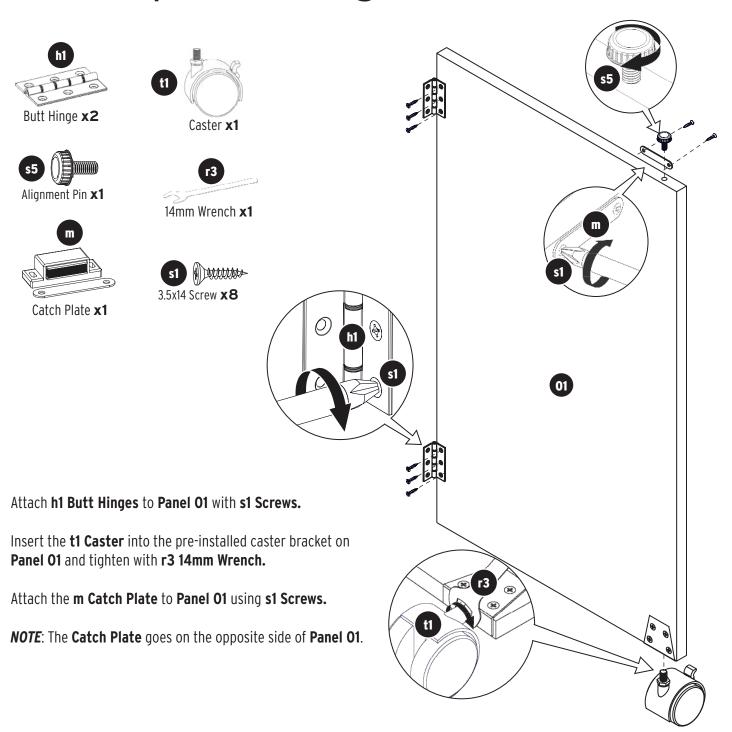

Step 4: Gate Leg and Quilt Panel

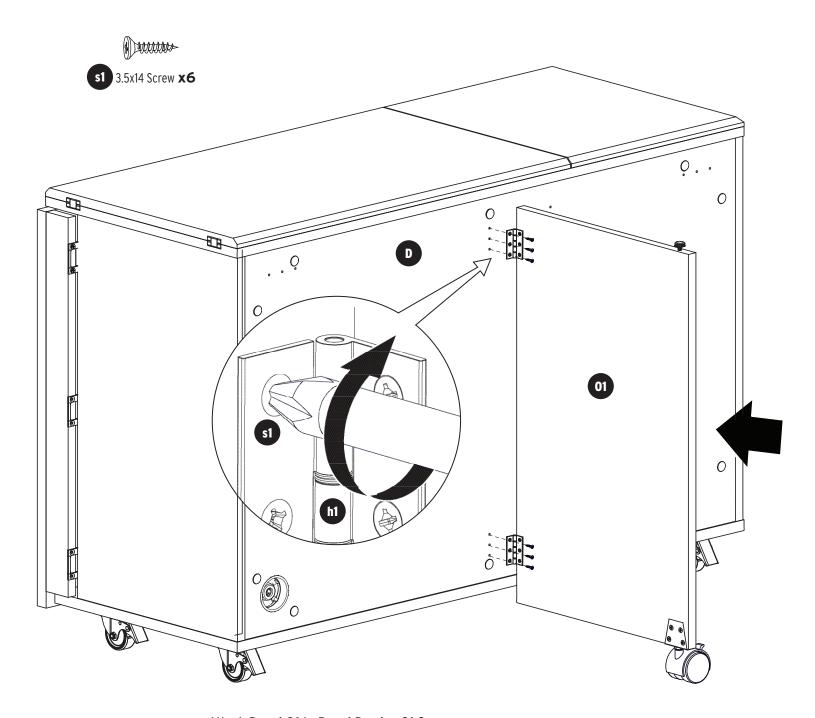


Attach Panel O1 to Panel D using S1 Screws.

You may need a friend to help you hold **Panel O1** steady as you attach it, but it is not required.


A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do NOT extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.

Step 4: Gate Leg and Quilt Panel

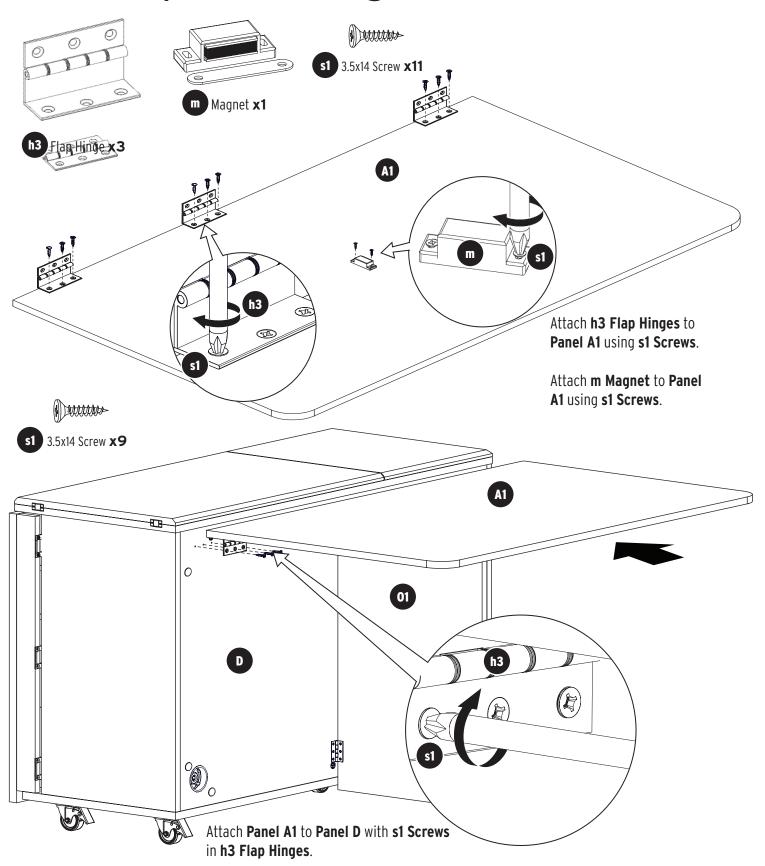



A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do NOT extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.

Step 5: Drawer

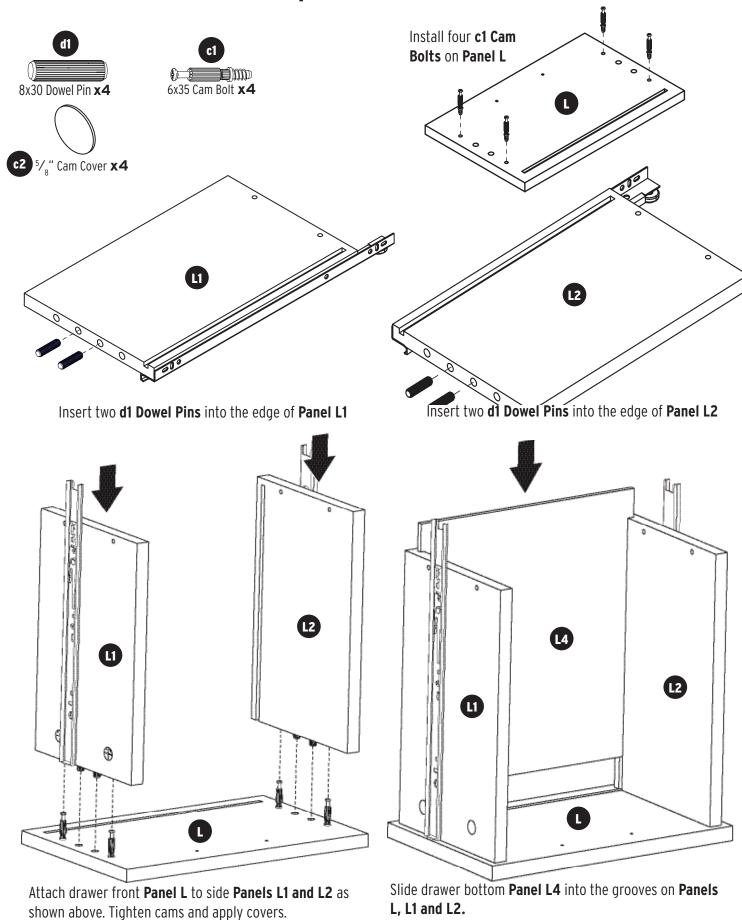

Step 5: Drawer

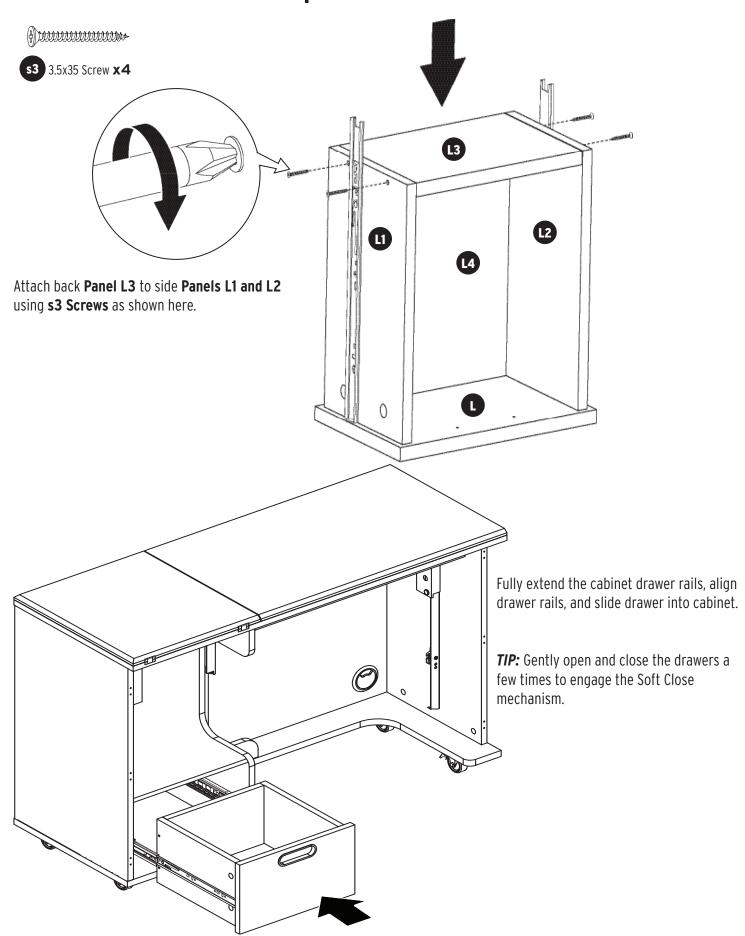

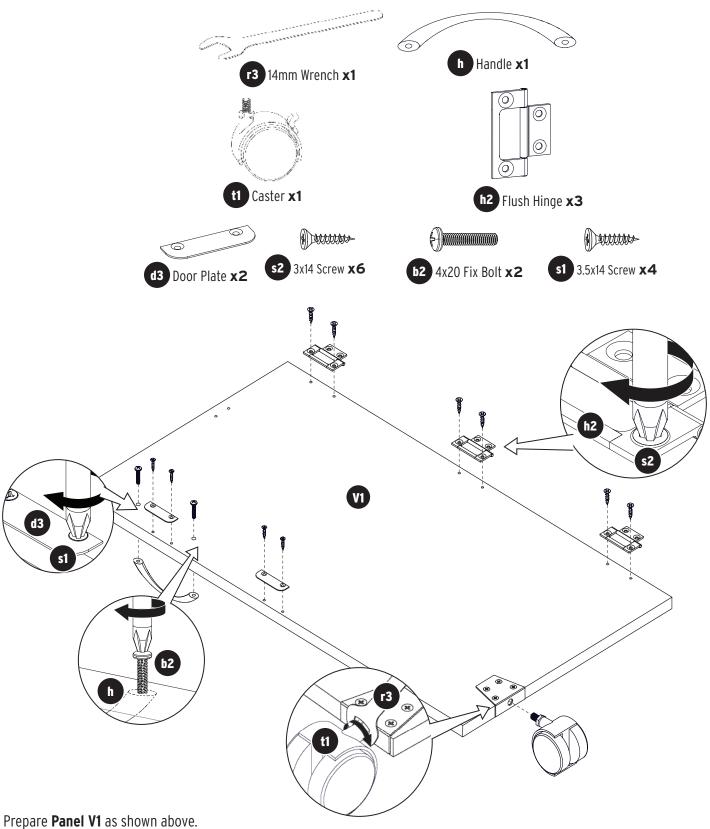


Attach 3 h2 Flush Hinges with s2 Screws.

Attach 2 d3 Door Plates with s1 Screws. NOTE: The rounded edge of d3 Door Plates will overhang the edge of the panel.

Insert **t1 Caster** into pre-installed caster bracket and tighten with **r3 14mm Wrench**.

Attach h Handle using b2 Fix Bolts.

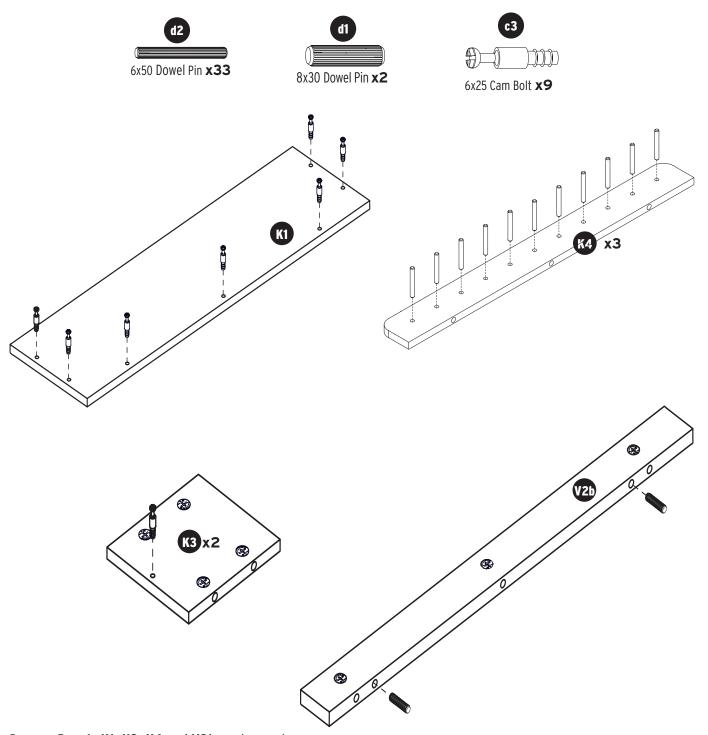


Prepare Panels K1, K3, K4 and V2b as shown above.

Insert 11 d2 Dowel Pins into Panel K4. Repeat x3 Insert 7 c3 Cam Bolts into Panel K1 Insert 1 c3 Cam Bolt into Panel K3 Repeat x2 Insert 2 d1 Dowel Pins into the edge of Panel V2b

NOTE:


c3 Cam Bolts are somewhat smaller than the **c1 Cam Bolts** used thus far. While **c1 Cam Bolts** will screw into pre-installed metal cam anchors, **c3 Cam Bolts** screw directly into the Panel.



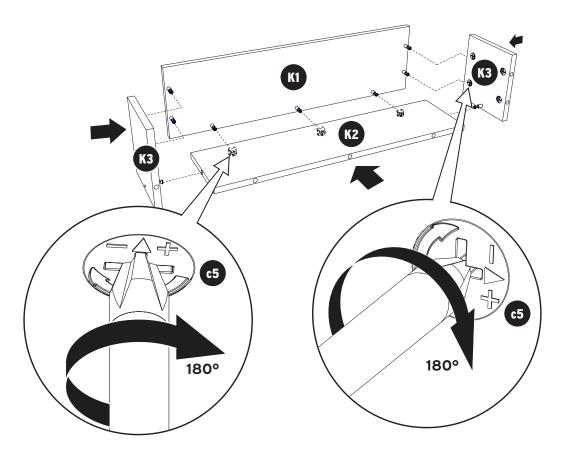

Insert cam bolts on **K3 Panels** (sides) into cams in **Panel K2** (bottom) and tighten cams. Apply **c2 Cam Covers.**

Insert cam bolts on **Panel K1** (front) into cams in **Panel K2** (bottom) and **K3 Panels** (sides). Tighten cams and apply **C2 Cam Covers.**

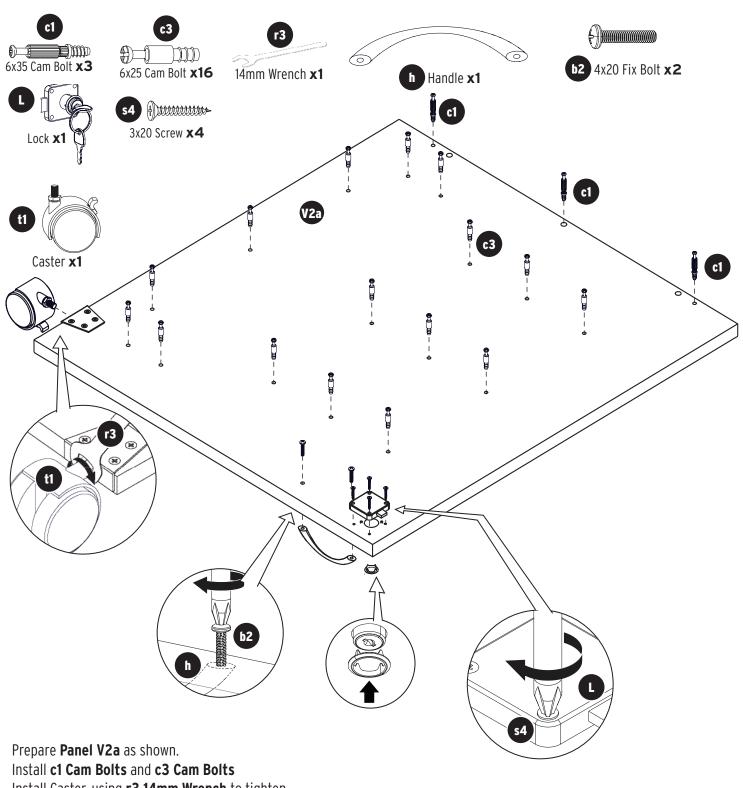


Install Caster, using **r3 14mm Wrench** to tighten

Install h Handle, using b2 Fix Bolts

Install L Lock, using s4 Screws, and Lock Ring, pressing firmly to attach


NOTE:

c3 Cam Bolts are somewhat smaller than the **c1 Cam Bolts**. While **c1 Cam Bolts** will screw into pre-installed metal cam anchors, **c3 Cam Bolts** screw directly into the Panel.

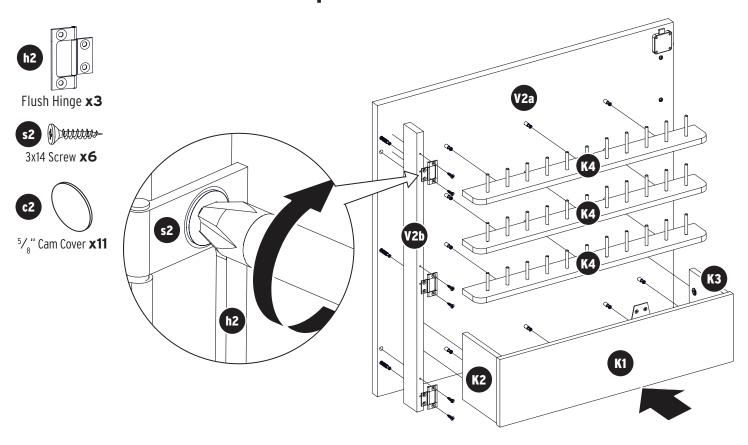


Insert c1 Cam Bolts on Panel V2a into cams on Panel V2b. Tighten and apply Cam Covers Insert c3 Cam Bolts on Panel V2a into cams on Panels K1 and K4. Tighten and apply Cam Covers Attach h2 Flush Hinges to Panel V2b with s2 Screws as illustrated above



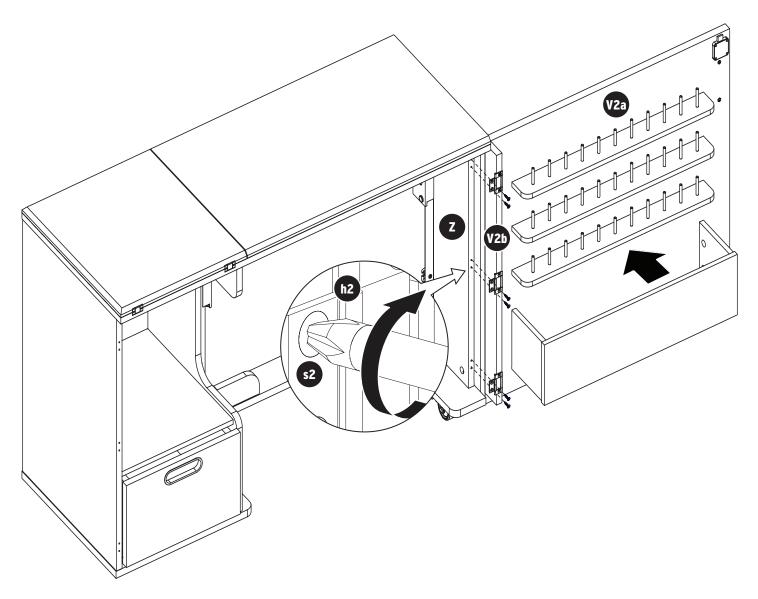

Attach **h2 Flush Hinges** on **Panel V2b** to **Panel Z** with **s2 Screws** as illustrated here. You may find it helpful to have a friend help you hold the door steady as you attach the hinges, but it is not required.

A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do NOT extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.

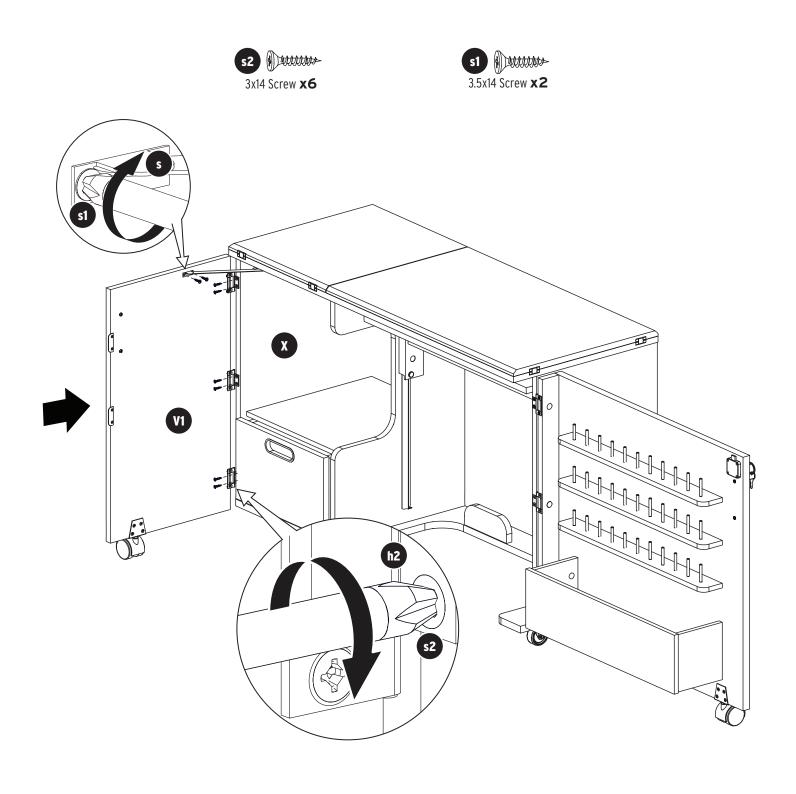


Attach h2 Flush Hinges on Panel V1 to Panel X with s2 Screws. You may find it helpful to have a friend help you hold the door steady as you attach the hinges, but it is not required. Attach s Stay Arm with s1 Screws to Panel V1

Assembled Wallaby Cabinet

A SPECIAL NOTE ABOUT USING TABLETOP LEAVES: Do NOT extend the leaves until you have support panels in place. Doing so may damage the cabinet and void your warranty.

Note in the illustration below that both of the leaves are supported by the front doors. The quilt panel is supported by the gate leg attached to the back of the cabinet.

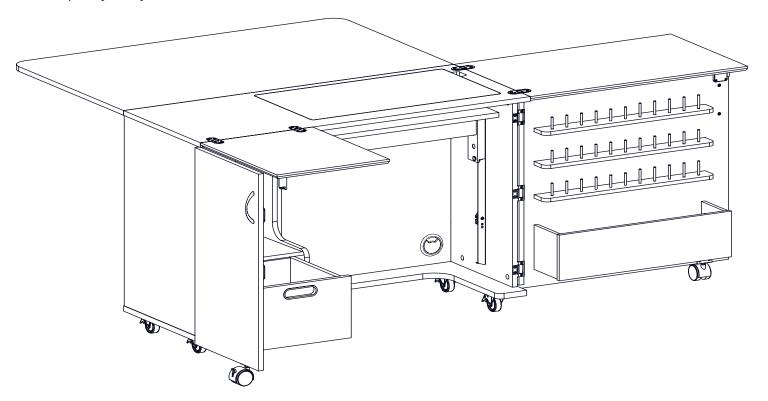



LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC "Arrow" provides a Limited Lifetime Warranty "Warranty" to the original purchaser of this product against defects in materials or workmanship of furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Electrical and mechanical components of furniture are warrantied for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request Warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial Warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a Warranty claim, customer may receive a brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, care, or neglect, cuts or scratches, caster damage as a result of moving furniture fully loaded or with locked casters, damage resulting from electrical surge or lightning, or use in commercial or education environments. Kangaroo Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS Warranty, such as loss of use, disassembly, transportation, labor, or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.


ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS Warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited Warranty gives you specific legal rights. This limited Warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/Warranty.

Accessories to Complete Your Sewing Studio

Custom Insert

Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

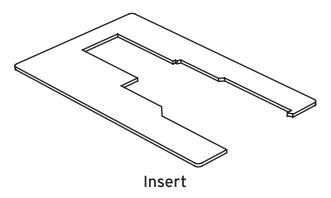

Arrow Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360 swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!



Height Adjustable Sewing Chair

P.O. Box 410 Elkhorn, WI 53121 1-800-533-7347 Ext. 1 CS@ArrowSewing.com www.ArrowSewing.com