
ASSEMBLY INSTRUCTIONS **Outback**

ITEM NO.:	K9605EL	Teak Electric Lift	K9605XL	Teak Hydraulic Lift
	K9607EL	Gray Electric Lift	K9607XL	Gray Hydraulic Lift
	K9611EL	Ash White Electric Lift	K9611XL	Ash White Hydraulic Lift

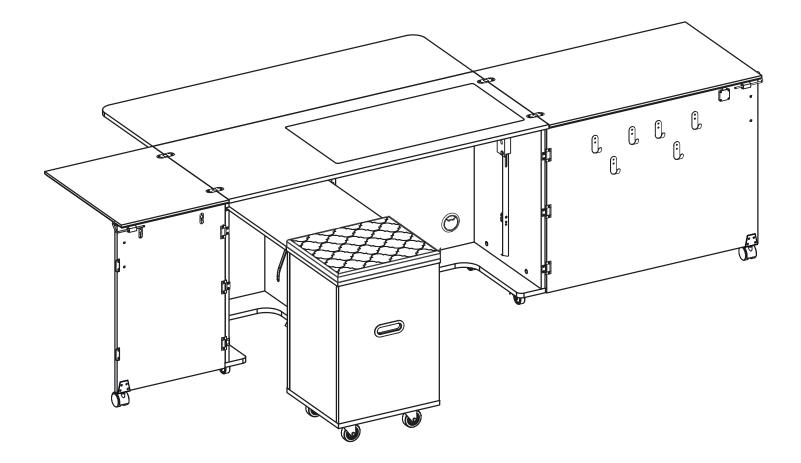

SEW IN COMFORT. SEW LONGER.™

Assembly Instructions for XL Hydraulic Lift Models Only

KANGAROO sewing furniture

General Assembly Guidelines


- 1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.
- 2. Tools Required







Torque set to 3-5

3. Understanding How the Cam Fastener Works

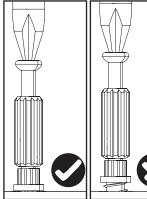

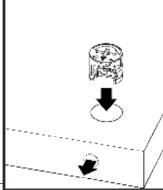

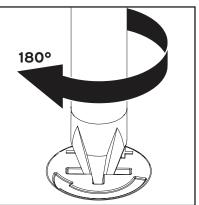

Screw cam bolts flush as illustrated.

surface. The arrow direction must be in the direction of the hole.

Press cam into hole until flush with Insert bolt through pre-drilled Turn clockwise to lock cam with bolt. hole in edge of panel.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better./



4. Glue provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.



Use and Care Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:


Cleaning - To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. DO NOT use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.


Electric and Hydraulic Lifts - Require annual lubrication with WD-40 or similar lubricant.

	Р	art	s Lis	st: P	anels		
	P	art	s Lis	A3	anels		
		ľ	Caddy parts t is importa	nt to build	ed on Page 5. the Caddy FIRST.	04	
ITEM	DESCRIPTION	QTY.	PACK	ITEM	DESCRIPTION	QTY.	PACK.
	Main Cabinet Hardware Box		1 of 4	(Caddy Hardware Box	1	4 of 4
X	Left Panel		1 of 4		Caddy Top Panels	1	4 of 4
Z	Right Panel		1 of 4	G1	Caddy Bottom Panel	1	4 of 4
01	1 Left Gate Leg Panel		1 of 4	D1	Caddy Back Panel	1	4 of 4
02	02 Right Gate Leg Panel		1 of 4	X1	Caddy Left Side	1	4 of 4
Y	Y Center Panel		1 of 4	Z1	Caddy Right Side	1	4 of 4
04*	Support Foot for Electric Lift Only	1	1 of 4	03	Caddy Thread Spool Holder Board	2	4 of 4
V1	V1 Left Door Panel		2 of 4	L	Caddy Small Drawer Front	2	4 of 4
٧2	V2 Right Door Panel		2 of 4	L1	Caddy Small Drawer Left Side	2	4 of 4
D	D Back Panel		2 of 4	L2	Caddy Small Drawer Right Side	2	4 of 4
A1			2 of 4	L3	Caddy Small Drawer Back	2	4 of 4
A/B/C			3 of 4	L4	Caddy Drawer Bottom	3	4 of 4
A3			3 of 4	I	Ironing Board Panel	1	4 of 4
G Bottom Panel		1	3 of 4	К	Caddy Large Drawer Front	1	4 of 4
Metal Bar		1	3 of 4	K1	Caddy Large Drawer Left Side	1	4 of 4
A2	Lift Panel	1	3 of 4	K2	Caddy Large Drawer Right Side	1	4 of 4
o 11 - i				K3	Caddy Large Drawer Back	1	4 of 4

Parts List: Hardware

TIP: Keep all the parts in their individually labeled bags. This will make finding parts easier as you assemble your cabinet.

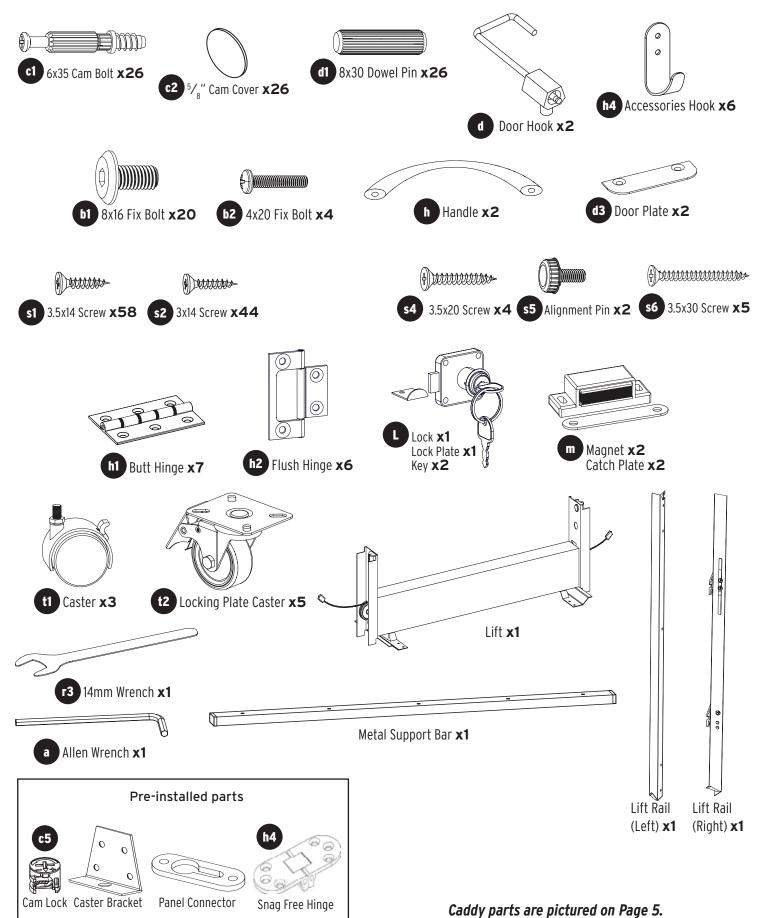

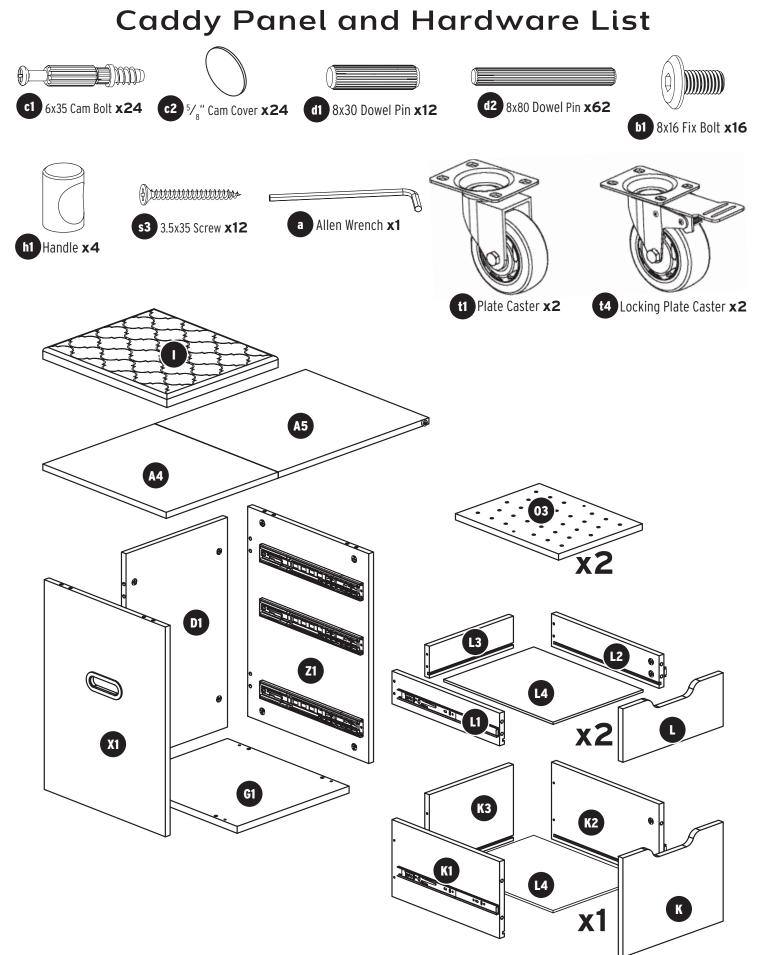

Caddy panels are listed on Page 3.


Part 1: Caddy

We can't wait to get your brand new Outback Sewing Cabinet up and running! Please contact our Customer Service Team at 1-800-533-7347, ext. 1 during normal business hours with any assembly related questions.


You will find all parts and panels for the Caddy in Box 1. It is important to build the caddy before building the main cabinet.



Caddy Step 1: Base

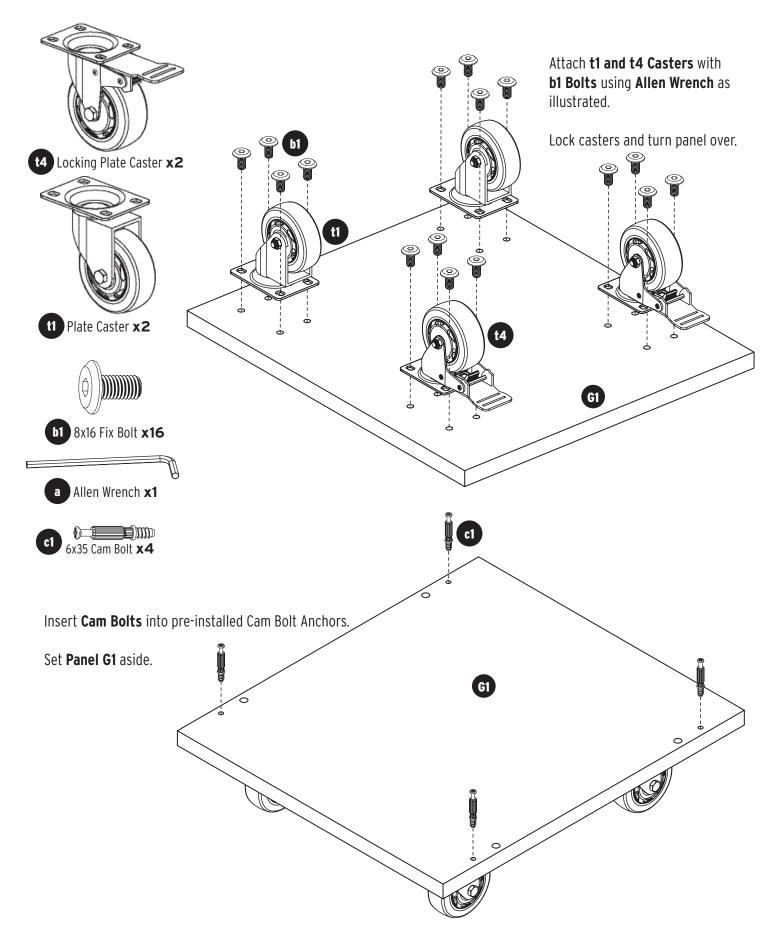


Caddy Step 2: Sides and Back

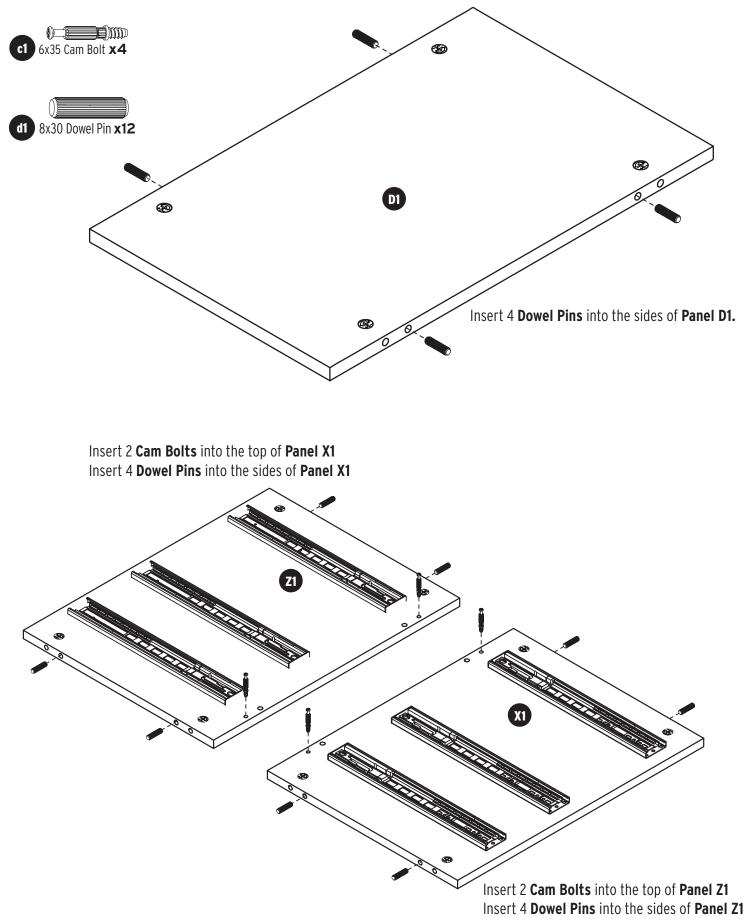


Outback

Caddy Step 2: Sides and Back

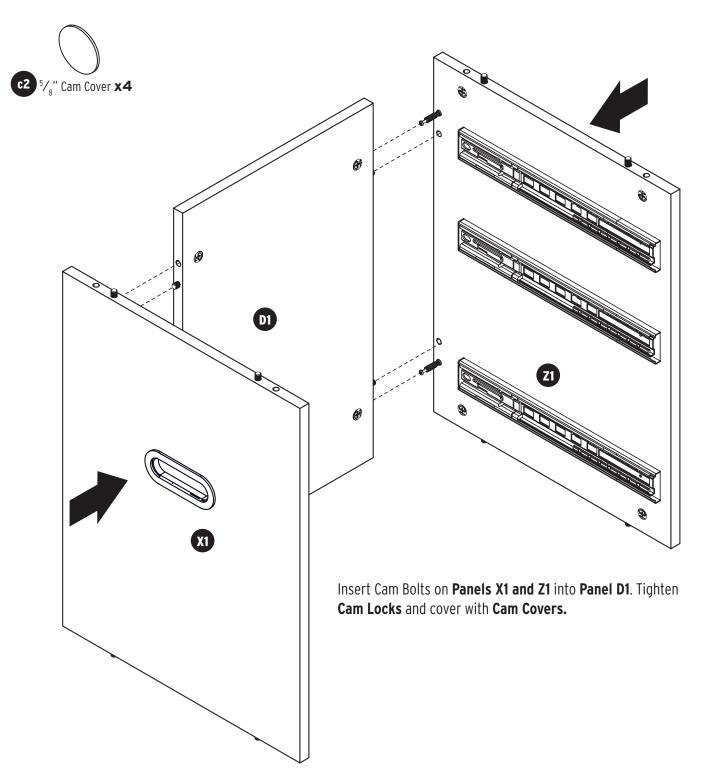


Caddy Step 3: Attaching the Base

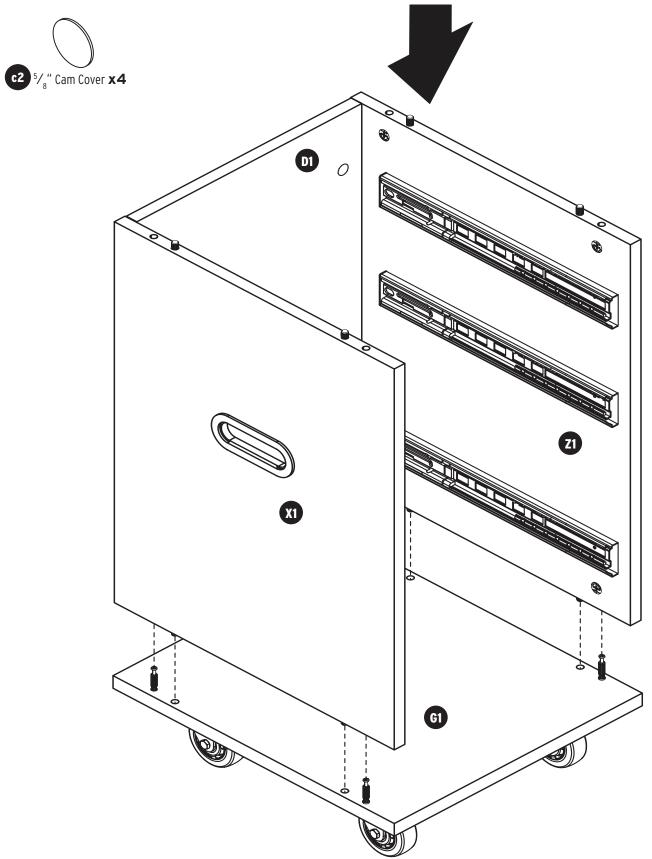


Attach Panel G1 as shown. Tighten Cam Locks and cover with Cam Covers.

NOTE: Make sure the locking casters are at the front of the Caddy before attaching the sides and back.

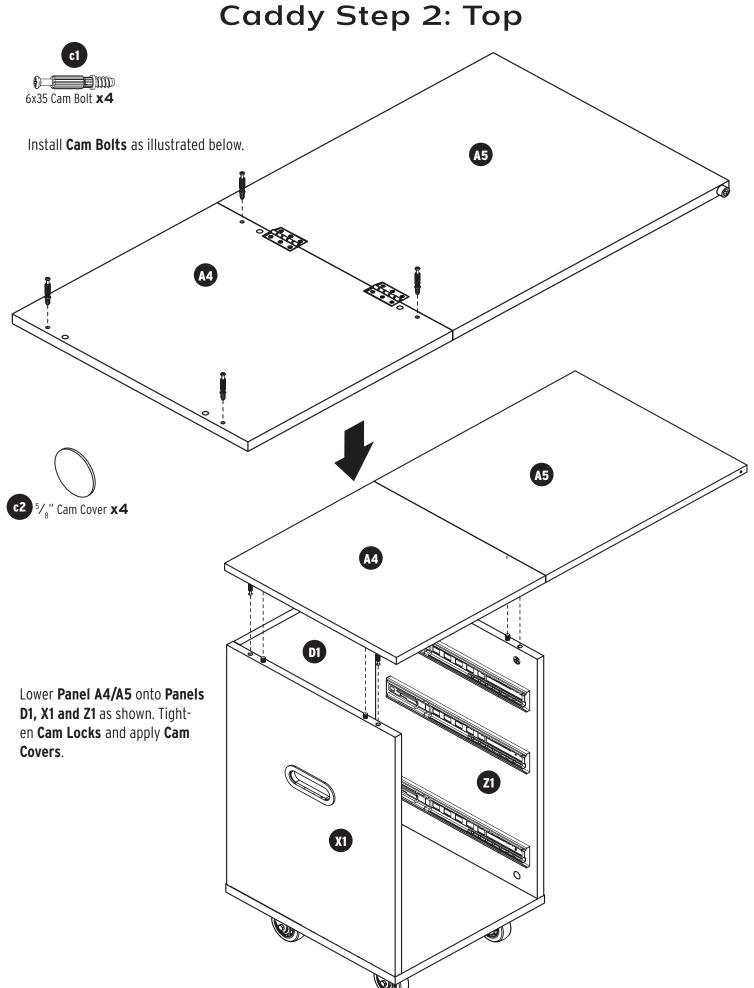



11

 Caddy Step 3: Drawers






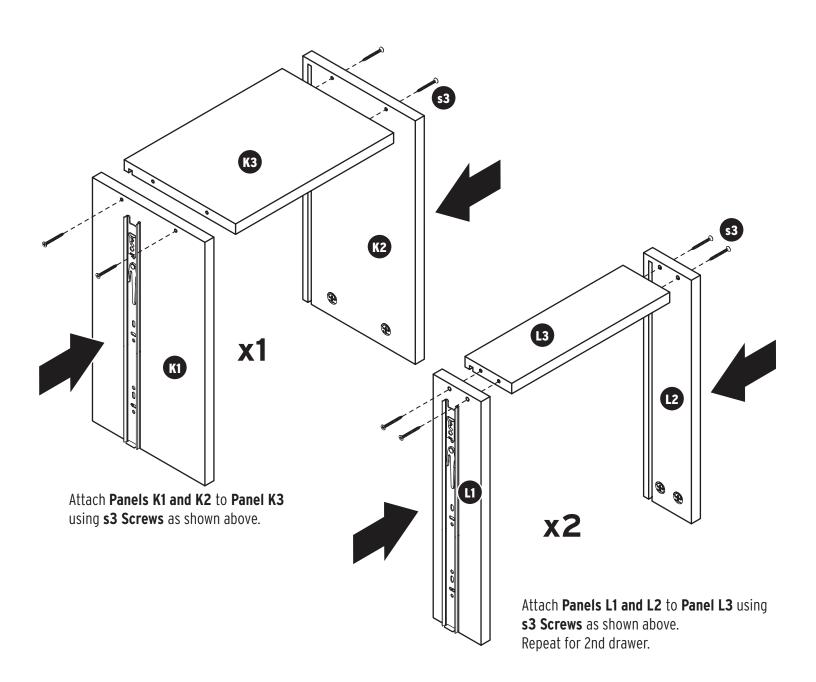

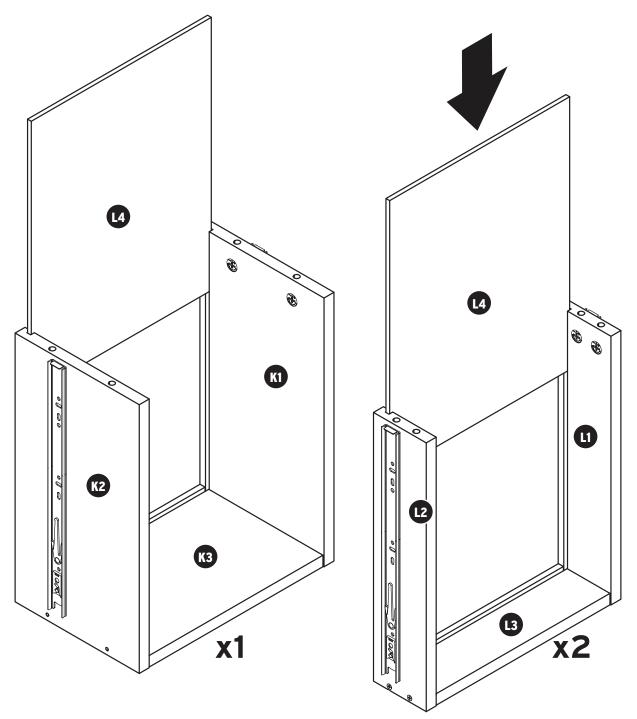


Slide drawer bottom Panels L4 into grooves on Panels L1/L2/L3 and Panels K1/K2/K3 as shown above.

Caddy Step 3: Drawers

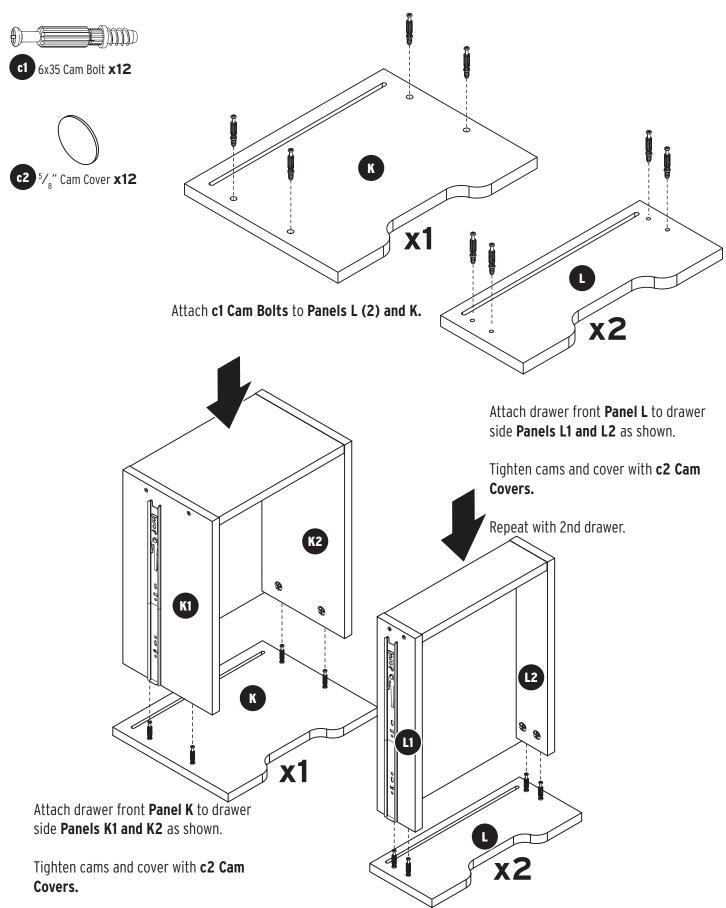

Caddy Step 3: Drawers

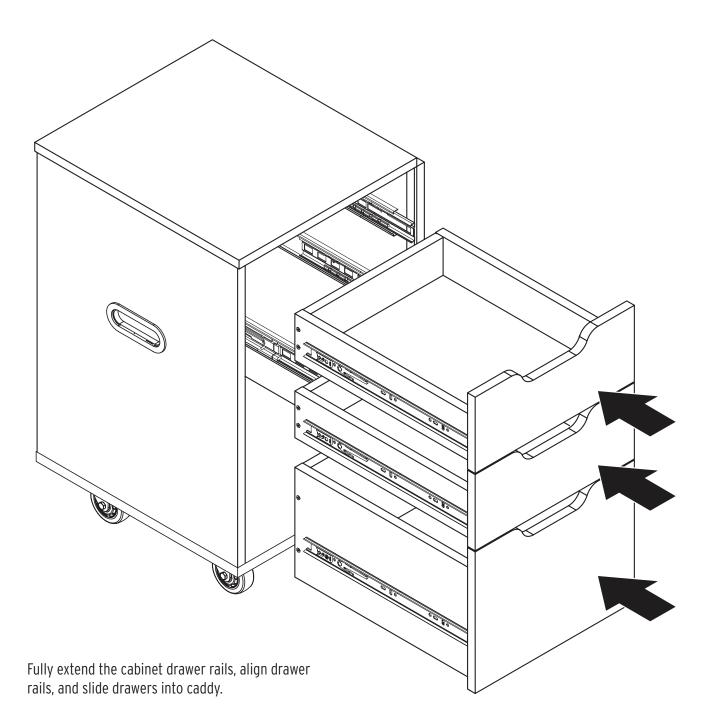

Be sure that the silver ball bearing pieces are positioned all the way to the front of the rails.

TIP: Gently open and close the drawers a few times to engage the Soft Close mechanism.

WARNING: CADDY IS PRONE TO TIPPING WHEN NOT ATTACHED TO THE MAIN CABINET. Always have your Caddy anchored to your cabinet to


prevent tipping (see page 31).

Caddy Step 4: Thread Spool Boards

2 bx80 Dowel Pin x62


Insert **d2 Dowel Pins** into **Panel O3.** If you choose to use glue in this step, note that the dowels will not be reconfigureable once glue has set.


Attach **h1 Handles** to **Panel O3** using the bolts found with the h1 Handles.

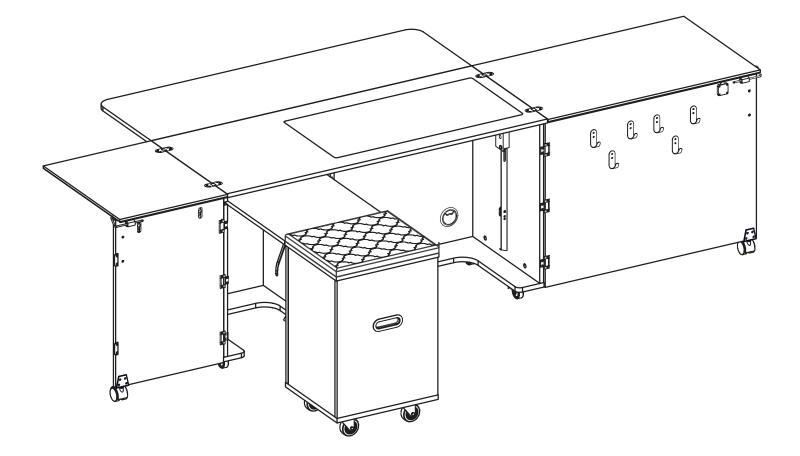


Refer to the packing chart on Page 3 for panel locations.

Main Cabinet Step 1: Base

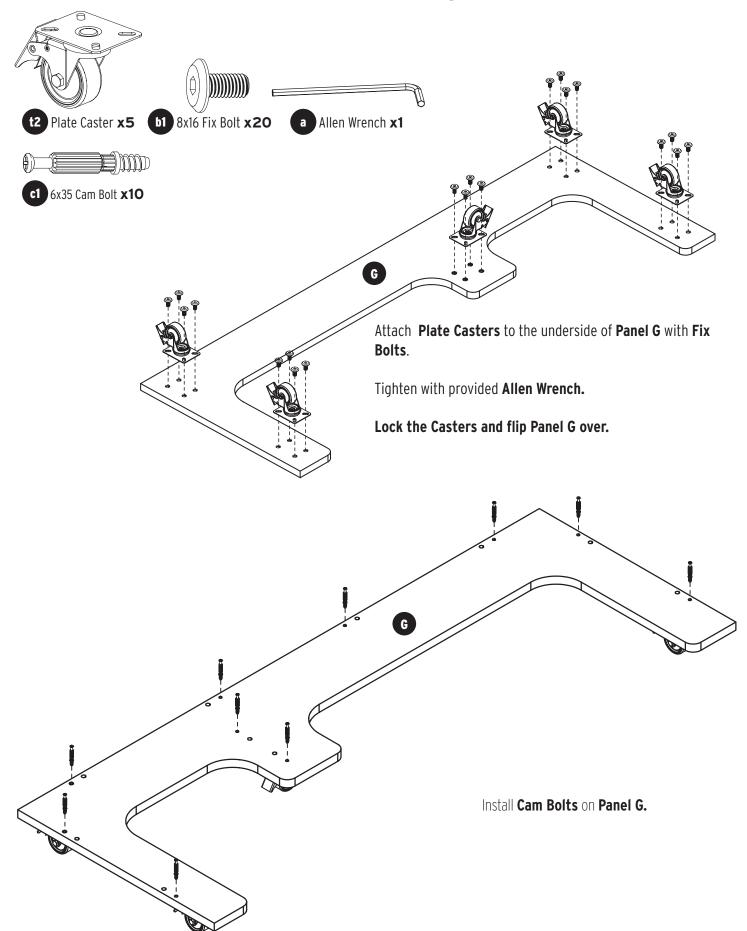

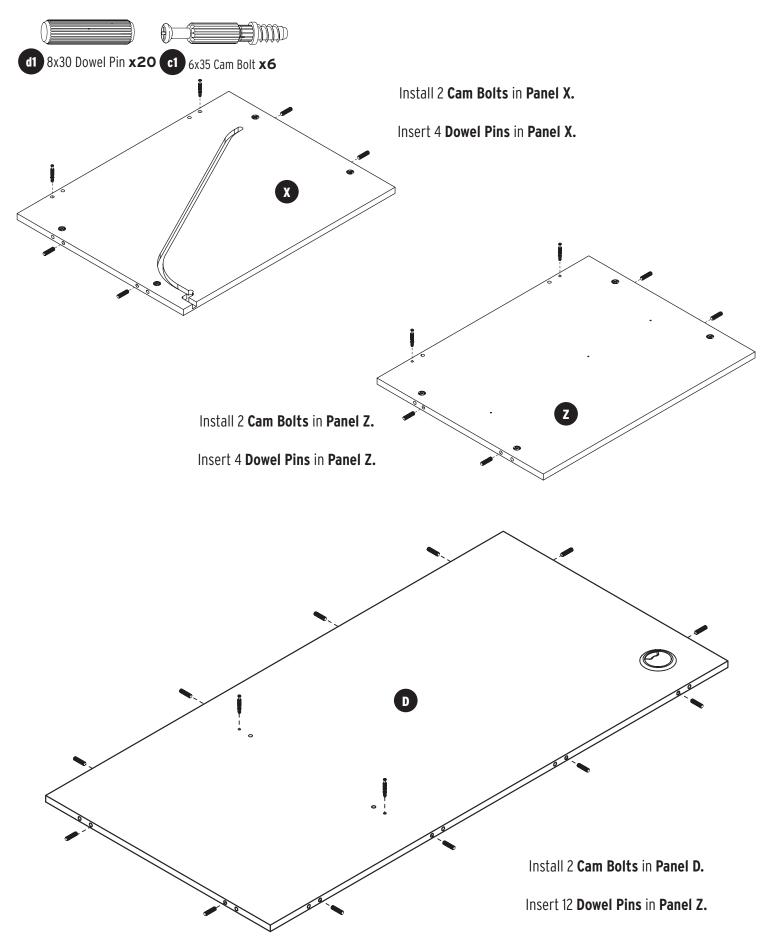

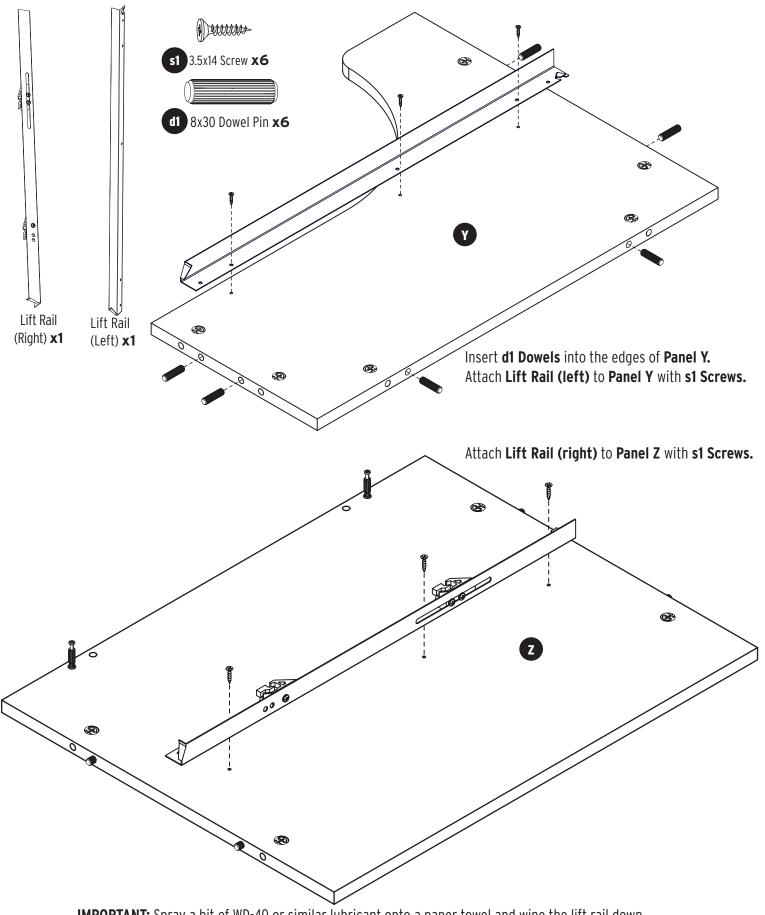


IMPORTANT: Spray a bit of WD-40 or similar lubricant onto a paper towel and wipe the lift rail down. This is necessary in order for the lift to function smoothly, and must be repeated annually.




NOTE: The illustration below shows upside down assembly of **Panels D, X and Z.** Assembling these panels upside down will make attaching **Panel G** easier.


Note that **Panel D** must have **Cam Locks** facing the back of the cabinet.

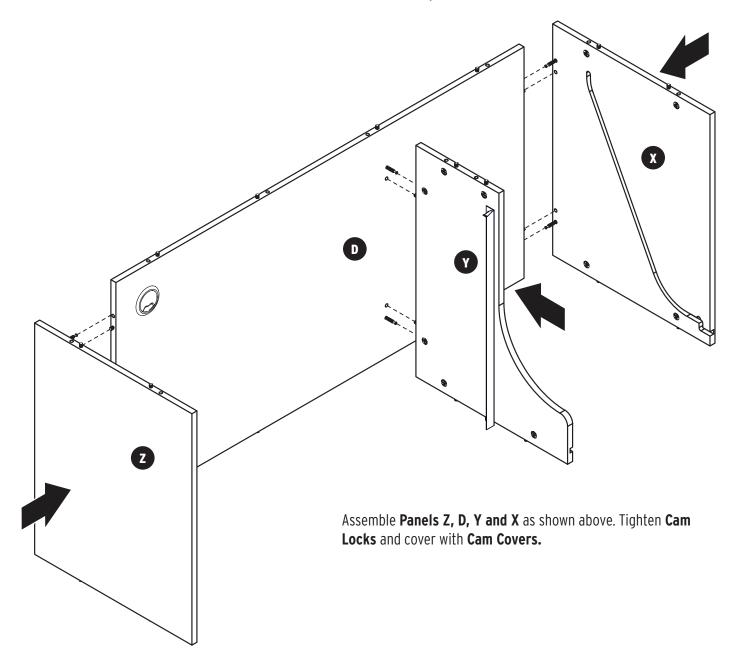



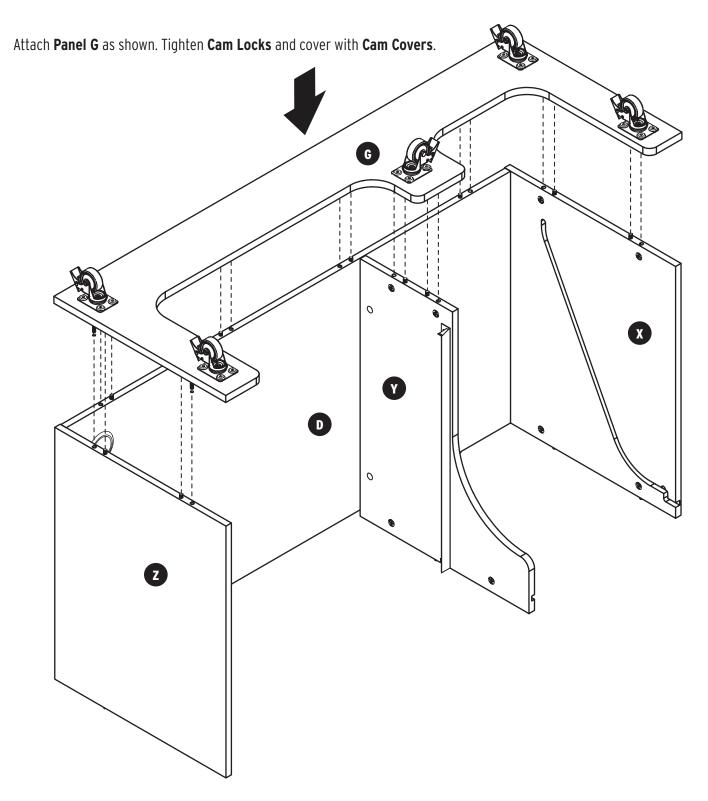


Main Cabinet Step 3: Lift Installation

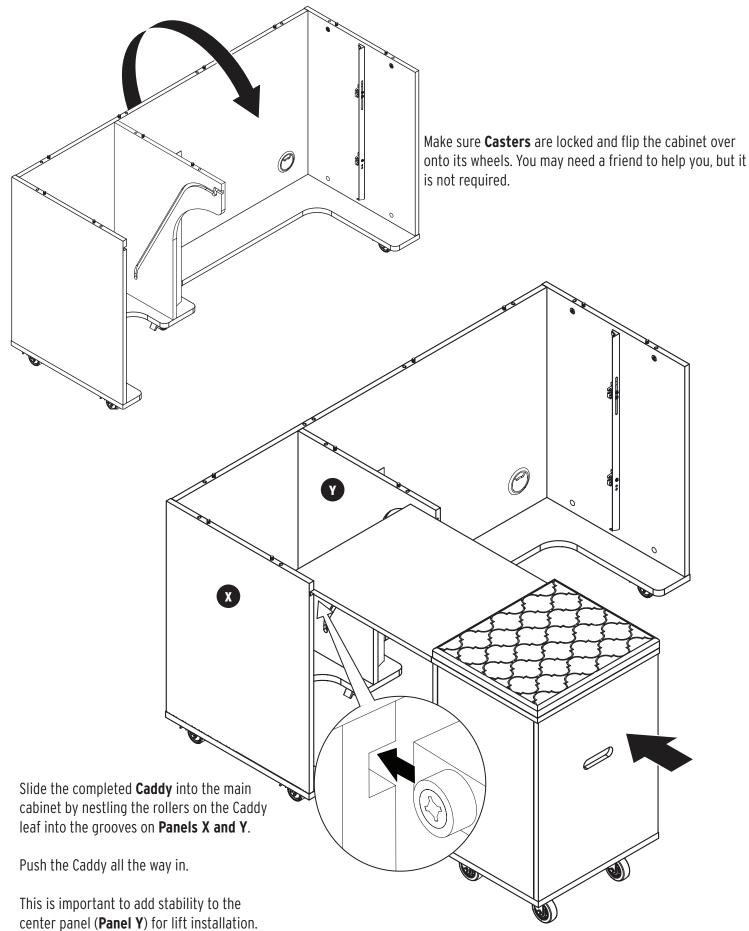


Main Cabinet Step 3: Lift Installation

LIFT INSTALLATION WARNING:


DO NOT remove the small wooden block from the Lift until assembly is complete. If the block is removed or falls out before lift assembly is complete, the cables will retract, making installation difficult. If the block falls out before complete assembly, Please call Customer Service at 1-800-533-7347, ext. 1 for assistance, or visit www.arrowsewing.com/assembly and find the "Alternative Airlift Attachment Steps" video.

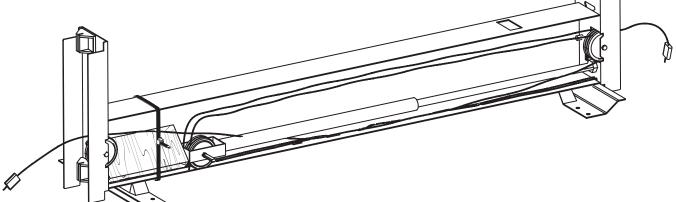

This illustration shows the back view of the **Lift**. Notice the wooden block and zip tie; the wooden block holds the piston in place so that the cables can be easily handled and inserted into the **Lift Rails** installed on your cabinet.

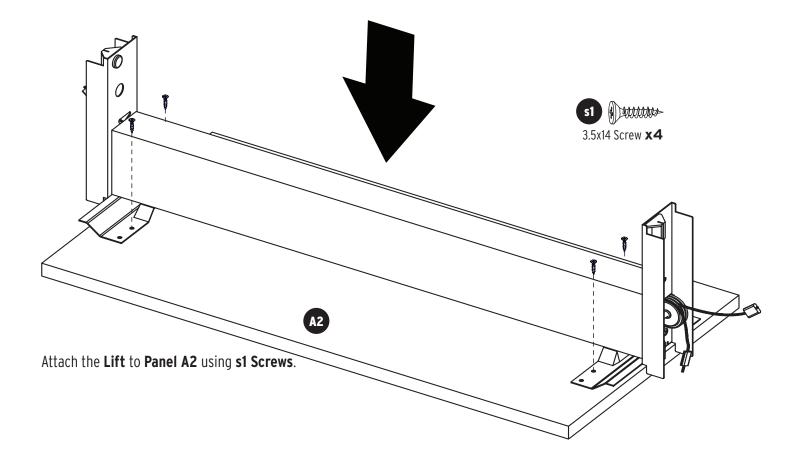

Main Cabinet Step 4: Lift Installation

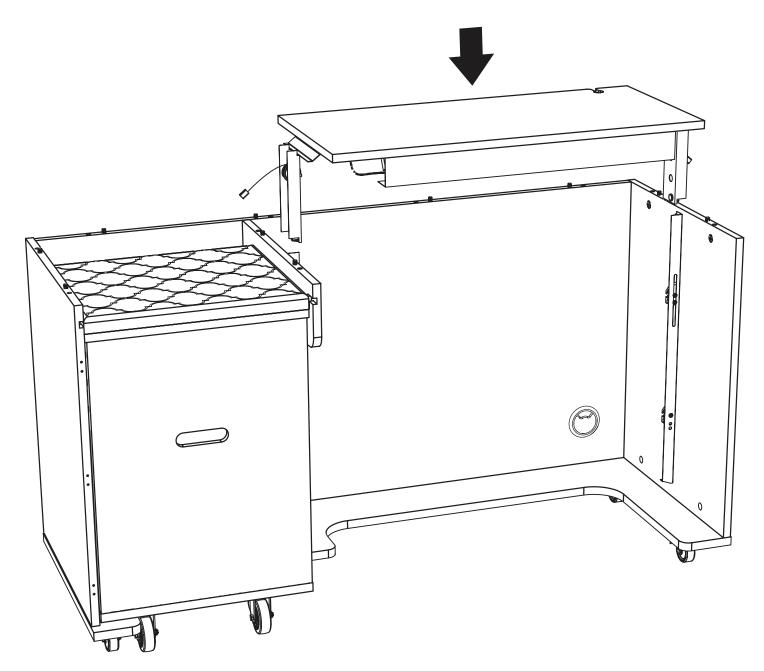

Guide Lift onto Lift Rails using plastic guides. Insert ends of cable into rail tabs; make sure the cable is hooked into the rail tabs on both sides.


NOTE: See Page 26 for close-up illustrations of Lift Panel assembly.

Cut the zip tie on the wooden block, but DO NOT remove the block yet.

Lower the Lift to first lock position and remove the wooden block. DO NOT ADJUST LIFT POSITION until the top is installed, or you risk the Lift coming out and cables becoming disengaged.


You will need to remove the Caddy from the cabinet at this time so that you can reach the necessary cam locks in Step 5.


Main Cabinet Step 4a: Lift Installation Close-Up

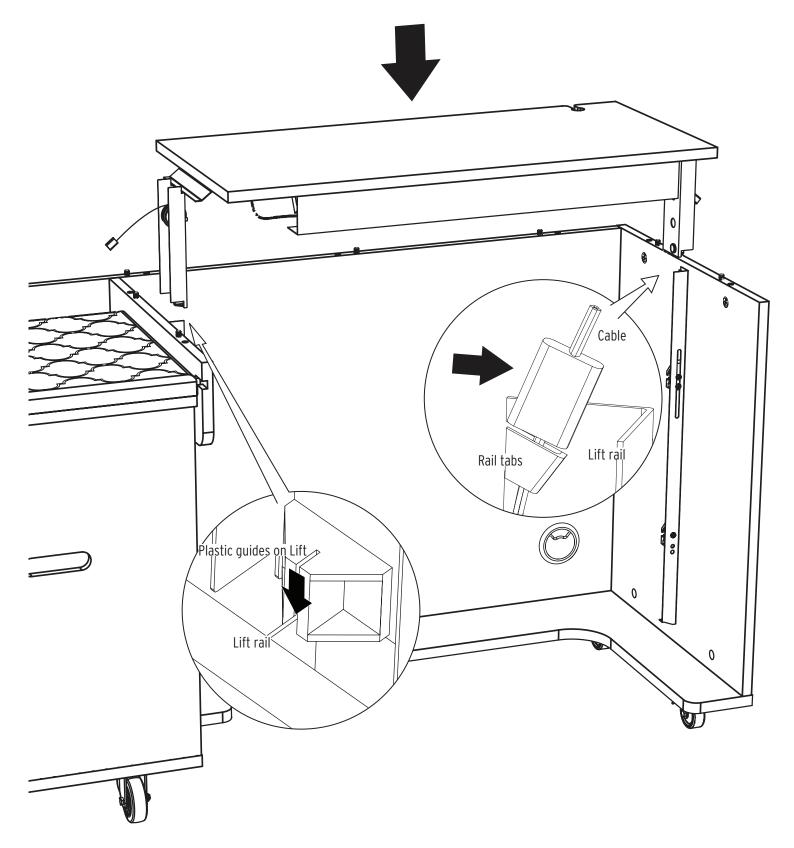

REMINDER: Our Customer Service Team is available for any assembly related questions. Please call 1-800-533-7347, ext. 1 to speak with an Assembly Expert.


Main Cabinet Step 5: Top and Quilt Panel

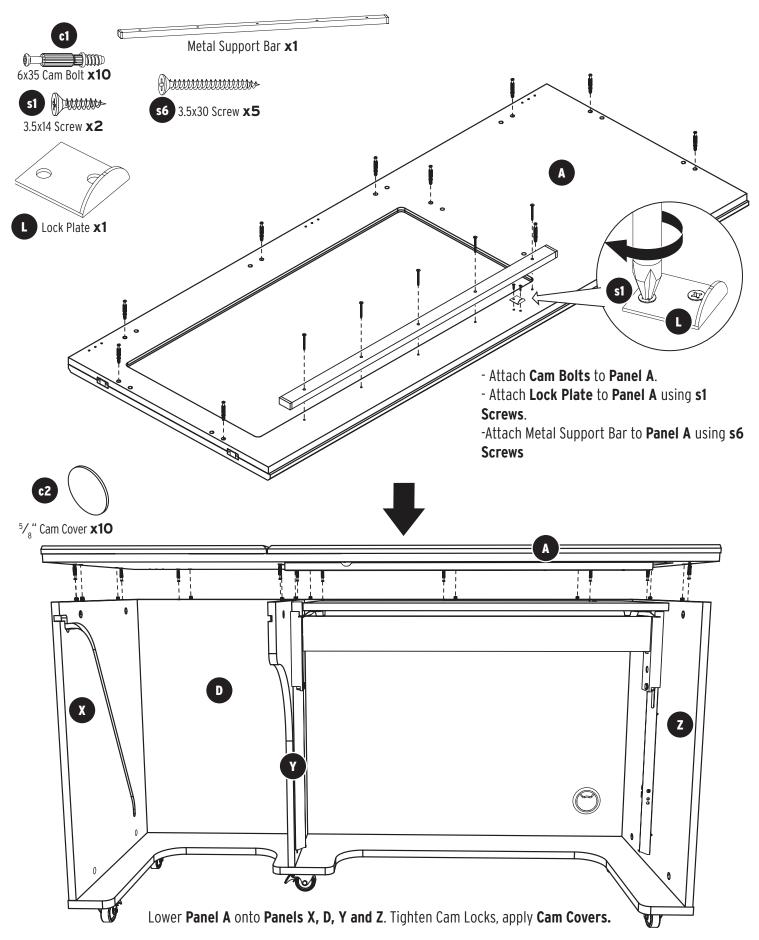

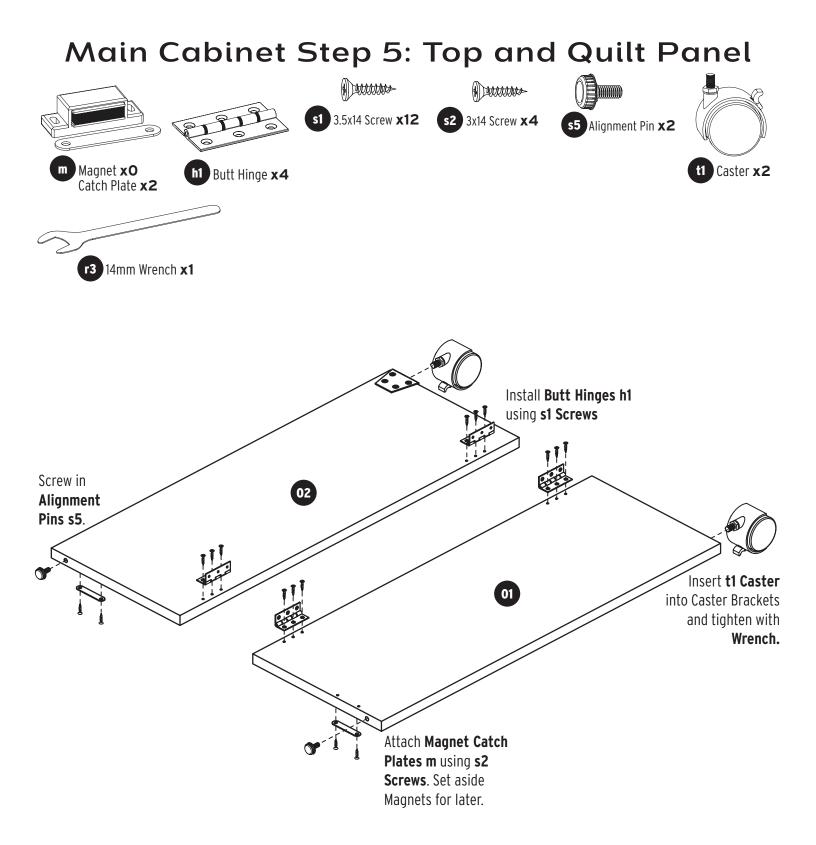


Main Cabinet Step 5: Top and Quilt Panel


s1 3.5x14 Screw **x12**

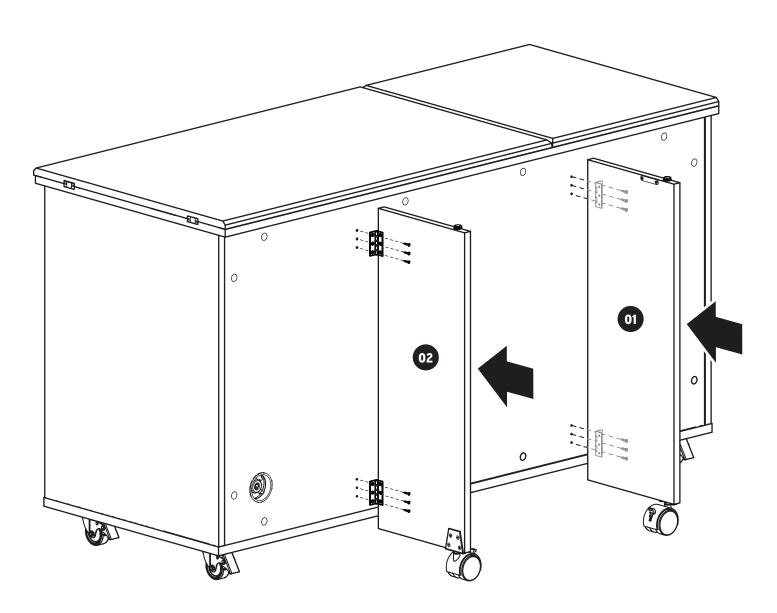


Attach **Butt Hinges** on **Panels O1 and O2** to **Panel D** using **S1 Screws** as illustrated.

Main Cabinet Step 5: Top and Quilt Panel

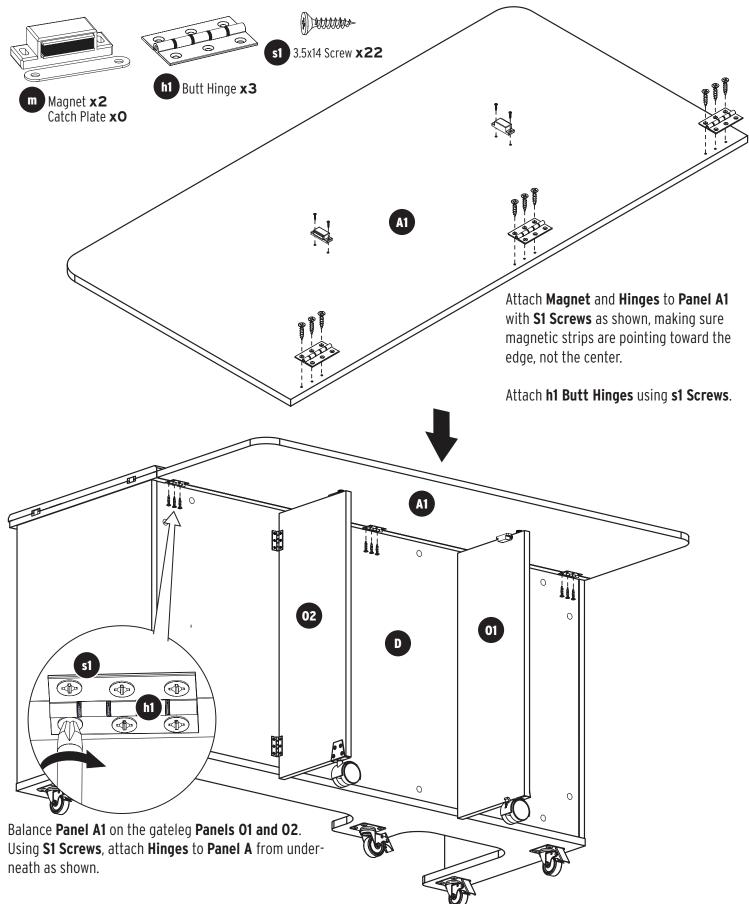


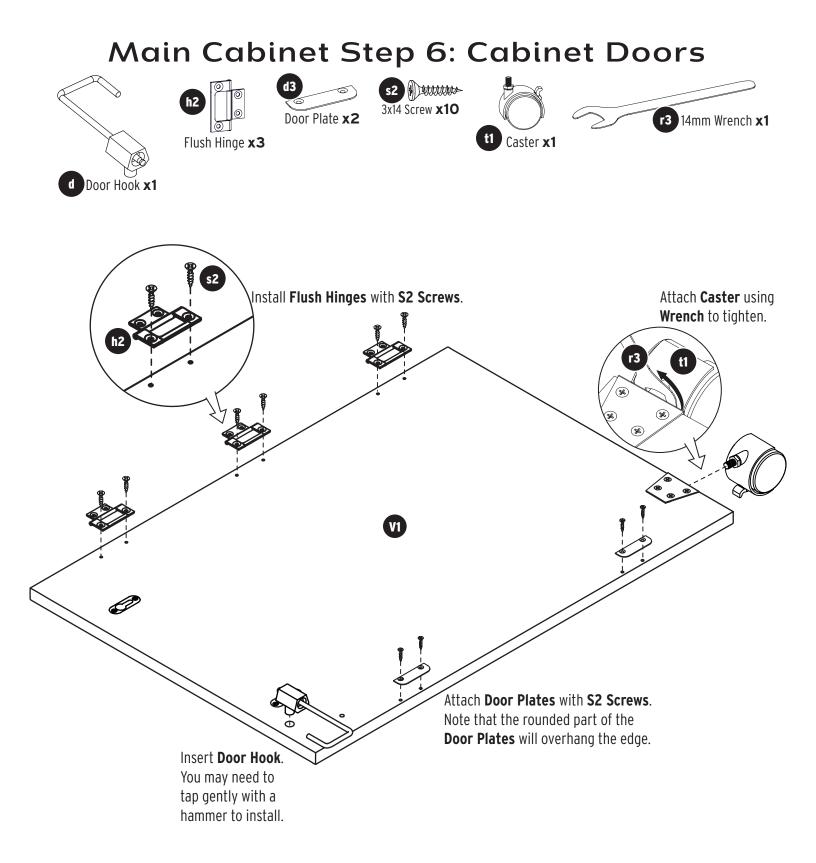



Main Cabinet Step 6: Cabinet Doors

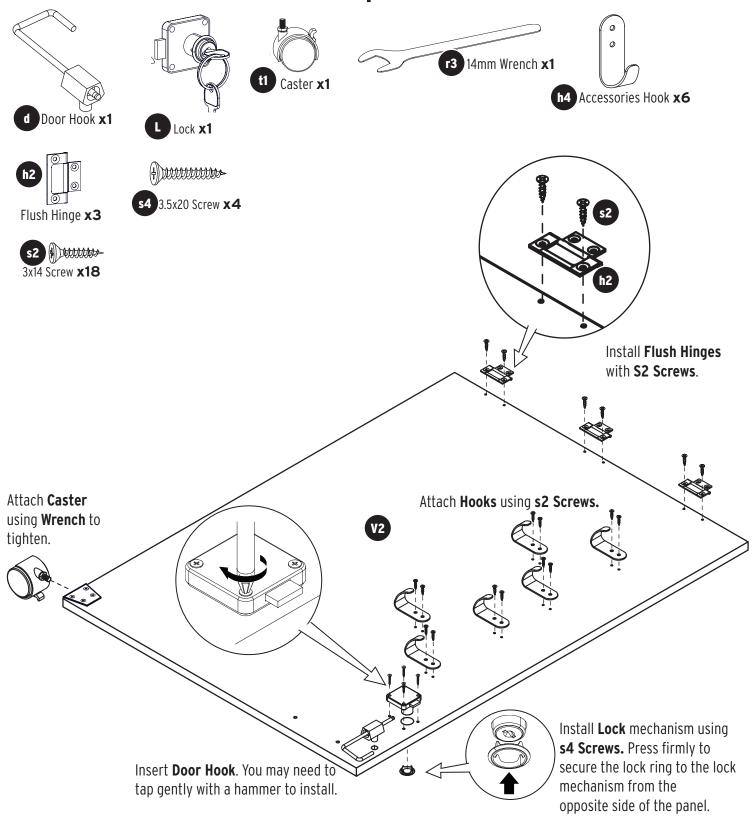

Main Cabinet Step 6: Cabinet Doors

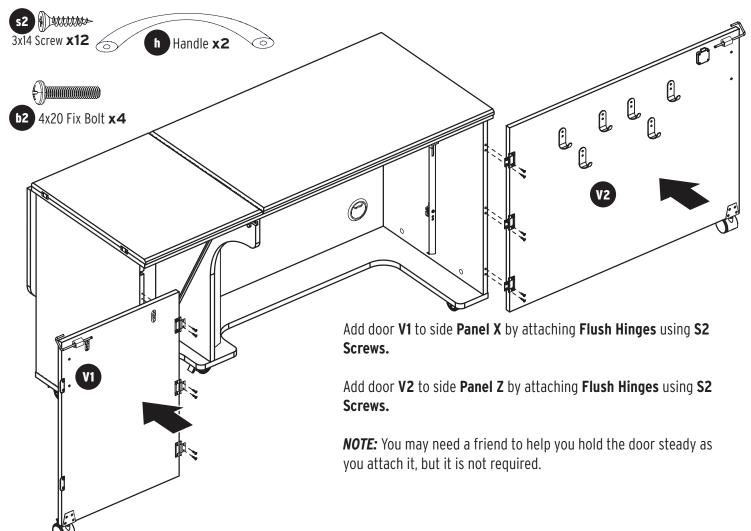

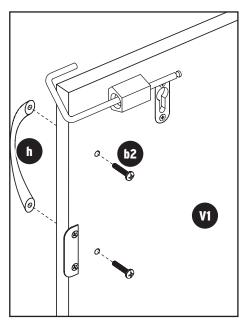


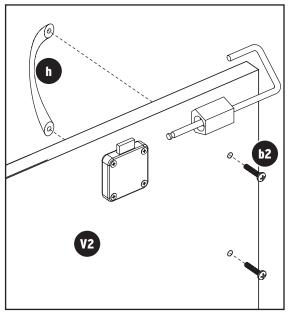

Attach h Handles to Doors V1 and V2, using b2 Fix Bolts to secure.

Caddy Positioning

Your caddy can be positioned in either of the configurations shown below. Be sure to always have the caddy attached to the cabinet to prevent tipping.

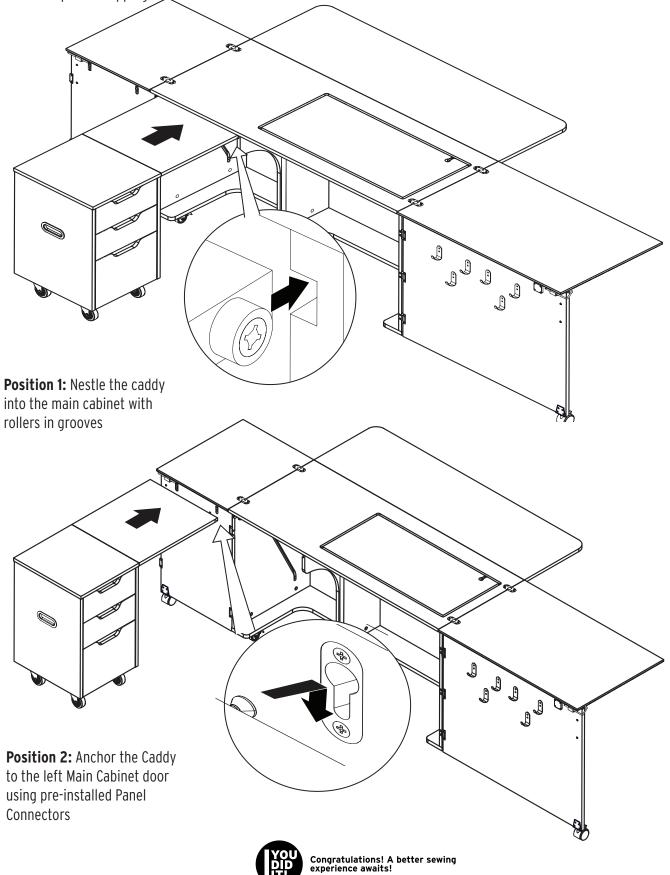



LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC "Arrow" provides a Limited Lifetime Warranty "Warranty" to the original purchaser of this product against defects in materials or workmanship of furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Electrical and mechanical components of furniture are warrantied for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request Warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial Warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a Warranty claim, customer may receive a brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the following: Failure to follow product assembly instructions, information or warnings; misuse or abuse; intentional damage; fire, flood, alteration or modification of the product; use of the product in a manner inconsistent with its intended use; any condition resulting from incorrect or inadequate maintenance, cleaning, care or neglect; cuts or scratches; caster damage as a result of moving furniture fully loaded or with locked casters; damage resulting from electrical surge or lightning; or use in commecial or education environments. Arrow Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS Warranty, such as loss of use, disassembly, transportation, labor, or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS Warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited Warranty gives you specific legal rights. This limited Warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/Warranty.


SEW IN COMFORT. SEW LONGER.™



Accessories to Complete Your Sewing Studio

Custom Insert

Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

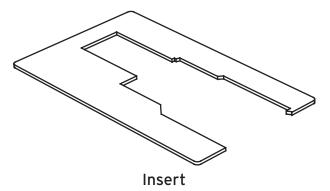

Arrow Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360 swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!



Height Adjustable Sewing Chair

P.O. Box 410 Elkhorn, WI 53121 1-800-533-7347 Ext. 1 CS@ArrowSewing.com www.ArrowSewing.com

05-22

SEW IN COMFORT. SEW LONGER.™