



Bandicoot II


ITEM No.:K8205 Teak

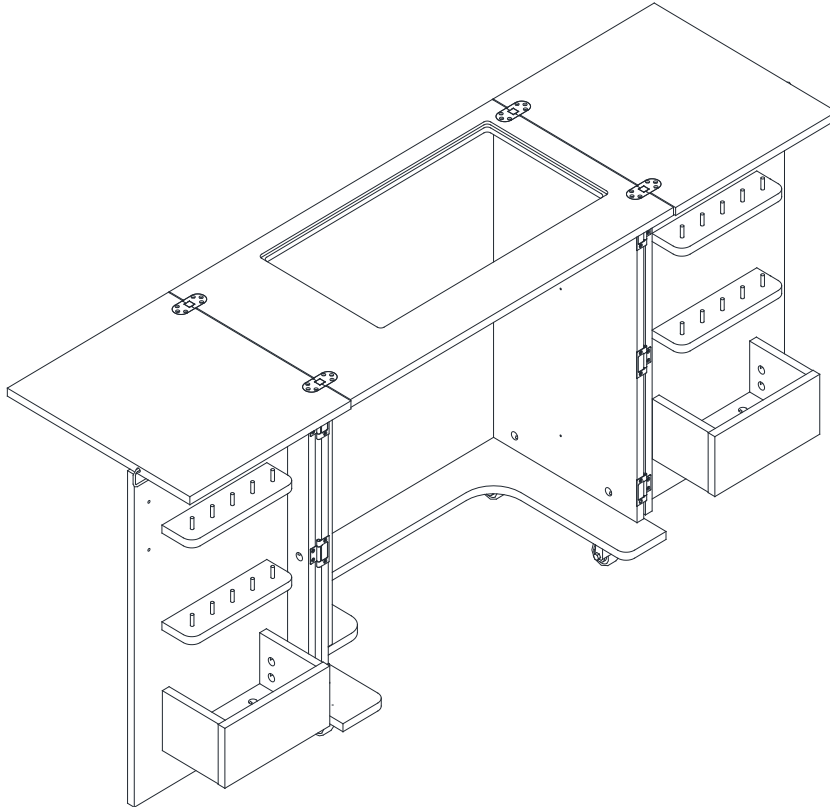

For a video can be found on our website at www.arrowcabinets.com in the Video Section.
For more information, please call 1-800-533-7347 press 1 or Email: cs@arrowcabinets.com

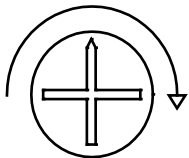


Turn clockwise to lock cam with bolt.




The arrow direction=front

Incorrect Correct

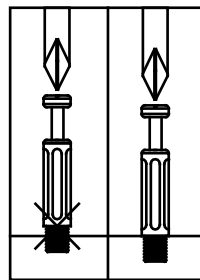

Screw cam bolts all the way in.

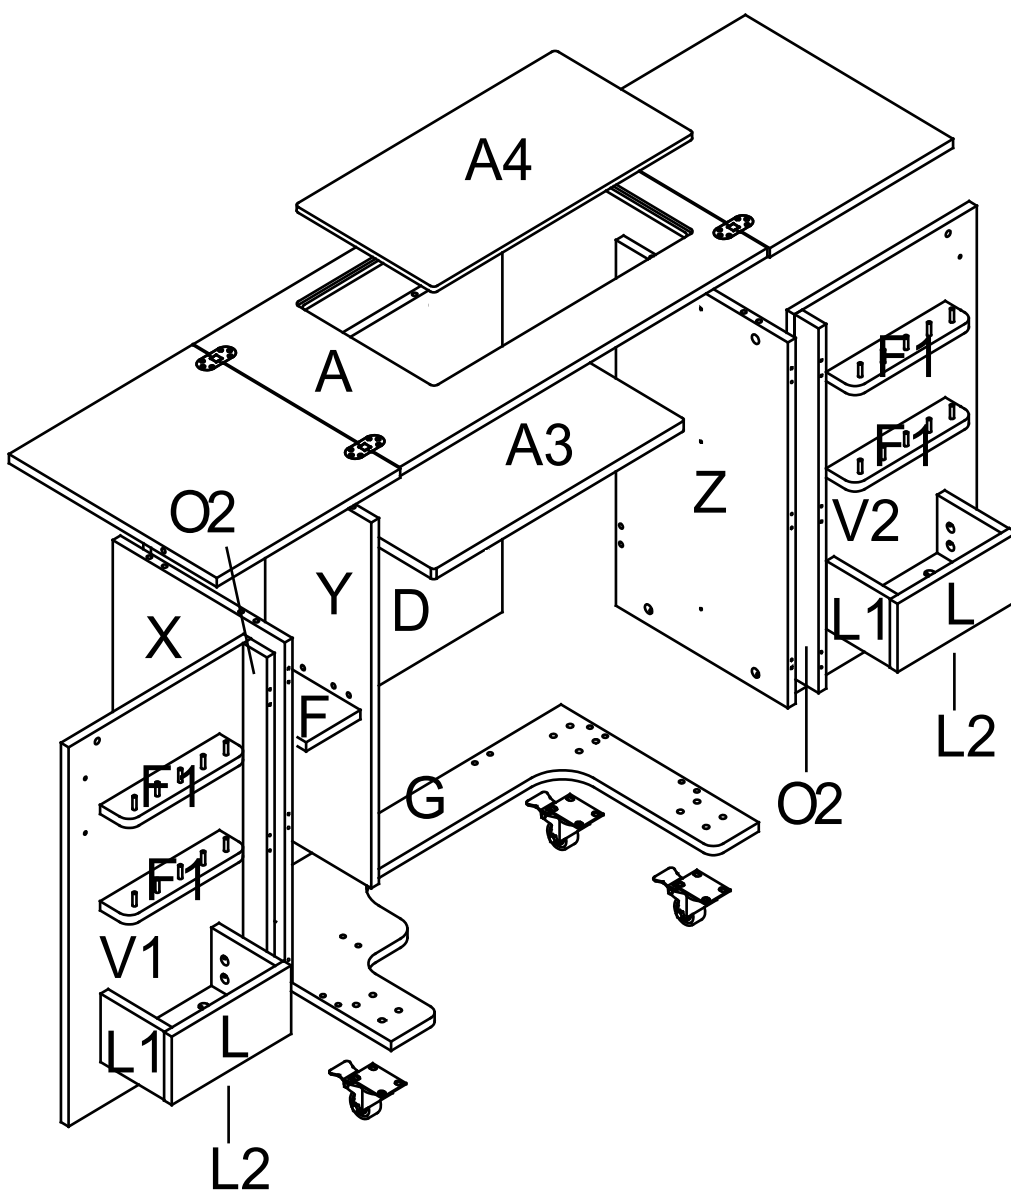

PARTS LIST

ITEM	DESCRIPTION	QTY.	PACK.
A	Top panel	1	1 OF 2
A4	Cover	1	1 OF 2
G	Bottom panel	1	1 OF 2
D	Back panel	1	2 OF 2
X	Left side panel	1	2 OF 2
Z	Right side panel	1	2 OF 2
Y	Partition	1	2 OF 2
F	Fixed shelf	1	2 OF 2
VI	Left door panel	1	2 OF 2
O1	Left door edge panel	1	2 OF 2
V2	Right door panel	1	2 OF 2
O2	Right door edge panel	1	2 OF 2
F1	Door shelf	4	2 OF 2
L	Door bin front	2	2 OF 2
L1	Door bin side	4	2 OF 2
L2	Door bin bottom	2	2 OF 2
A3	Platform	1	2 OF 2

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
(c1)	6*35 Cam Bolt	30	(s1)	3.5*14 Screw	14
(c3)	6*25 Cam Bolt	36	(h)	Handle	2
(d1)	8*30 Dowel pin	28	(b2)	Fix Bolt	4
(c2)	(5/8") Cam Cover	66	(h2)	Hinge	6
(t2)	Castor	4	(s2)	3*14 Screw	28
(a)	Wrench	1	(d)	Door Hook	2
(d2)	6*50 Dowel Pin	20	(m)	Magnet	2
(b1)	8*16 Fix Bolt	20			



(c1) 6*35 Cam Bolt-30



(d1) 8*30 Dowel Pin-28



(c2) (5/8") Cam Cover-66



(c3) 6*25 Cam Bolt-36




(d2) 6*50 Dowel Pin-20



(t2) Castor-4



(b1) 8*16 Fix Bolt-20



(a) Wrench-1




(s1) 3.5*14 Screw-14



(h) Handle-2




(b2) 4*20 Fix Bolt-4




(h2) Hinge-6




(s2) 3*14 Screw-28



(m) Magnet-2

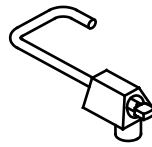


(d) Door Hook-2

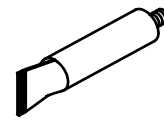


Glue=1

Pre-installed parts



(c5) Cam


STEP 1

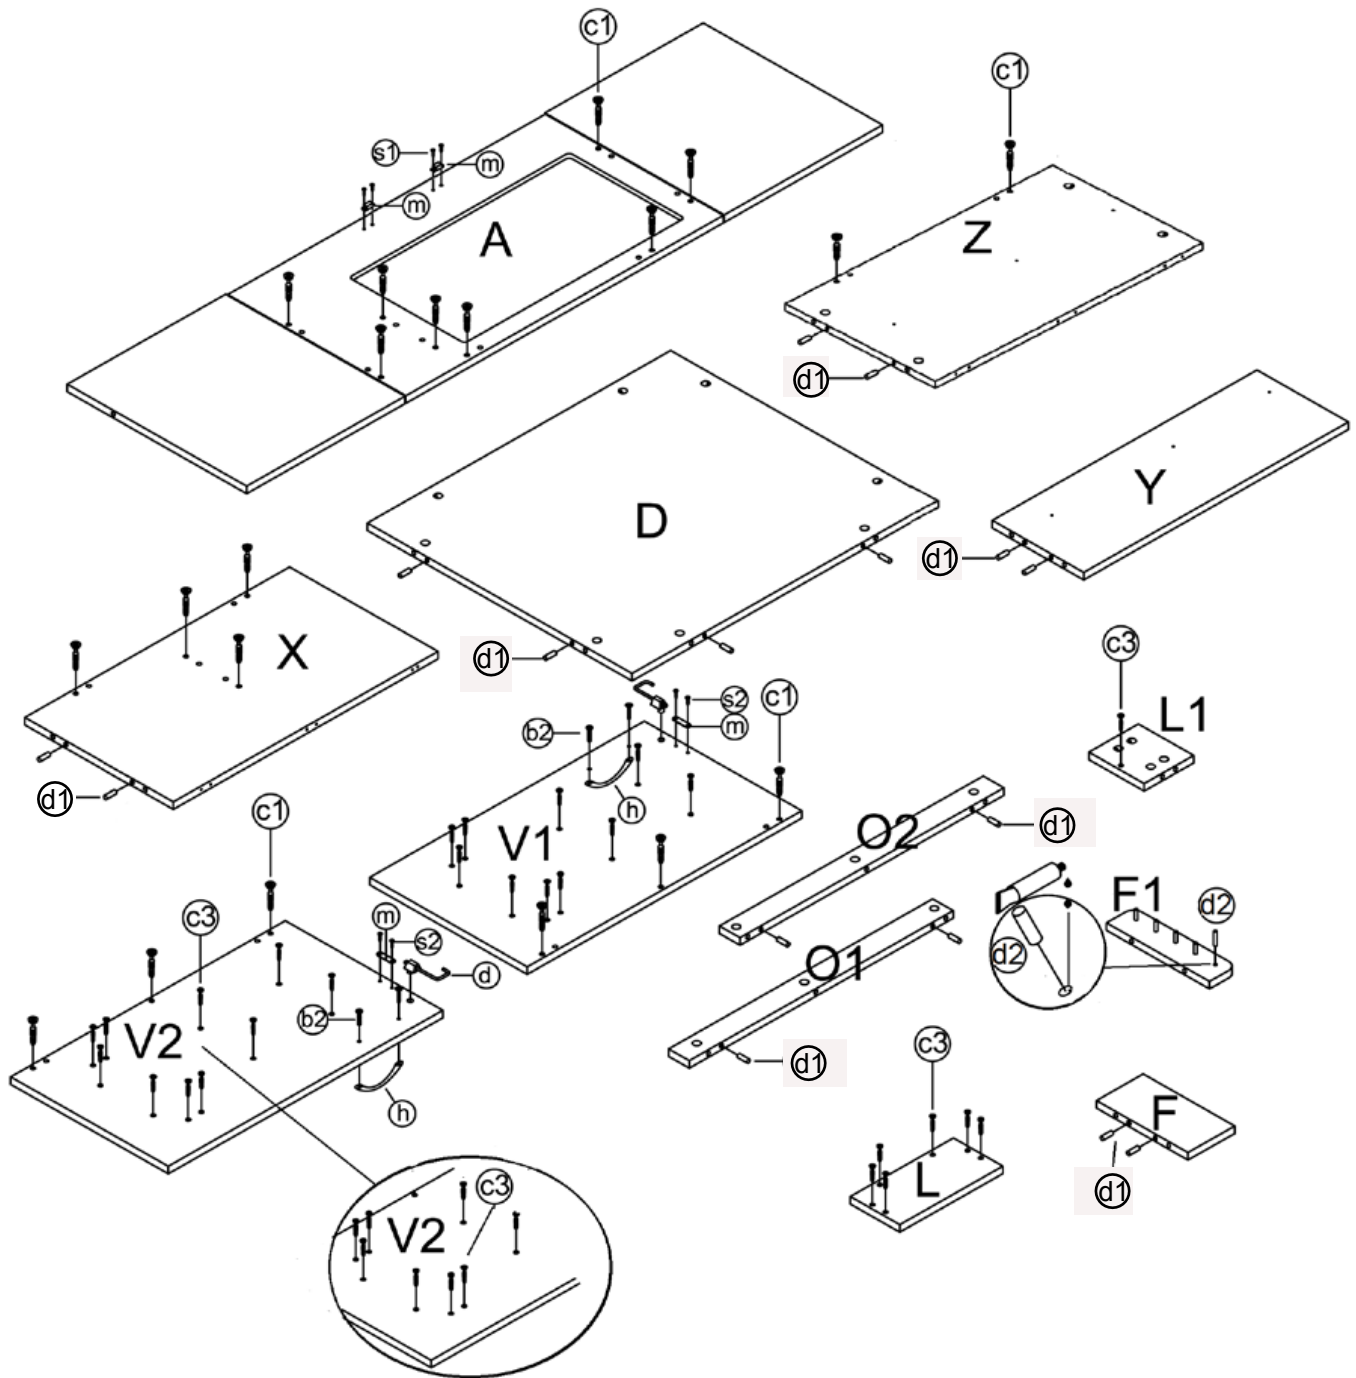

Preparation Panel A. D. X. Z. Y. V1. V2. L*2. L1*4. F. F1*4. O1. O2.


1. Insert camps bolts (c1) into panels A, V1, V2, X and Z as illustrated above.
2. Insert dowel pins (d1) to panels X, Z, Y, O1, O2, F and D as illustrated above.
3. Insert camps bolts (c3) into panels V1, V2, L and L1 as illustrated above.
4. Fix handles (h) to panels V1 and V2 with fix bolts (b2) as illustrated above.
5. Insert dowel Door Hook (d) to panels V1 and V2 as illustrated above.
6. Fix magnet catch plate (m) to door V1 and V2 using (s2) screws.
7. Attach the door magnet (m) to Top Panel A using (s1) screws as illustrated above.
8. Insert dowels (d2) into F1 shelves securing with drop of glue in hole.

STEP 2

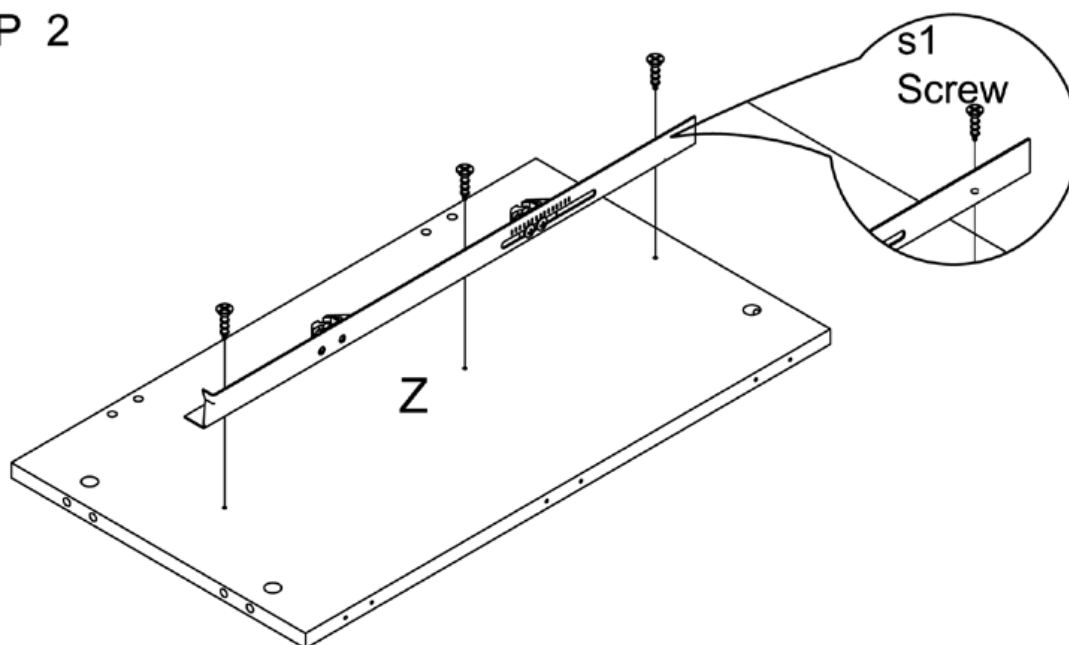


1. Fix Lifter Rail (right) to z panel with (s1) screws following predrilled holes as shown on the illustration above.

STEP 3

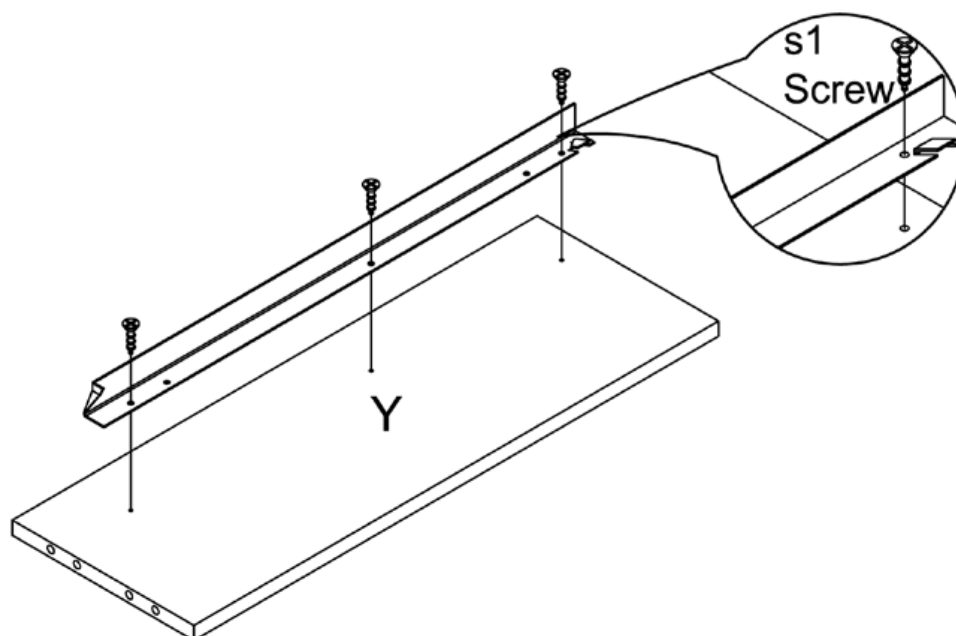

1. Fix Lifter Rail (left) to Y panel with (s1) screws following predrilled holes as shown on the illustration above.


STEP 4

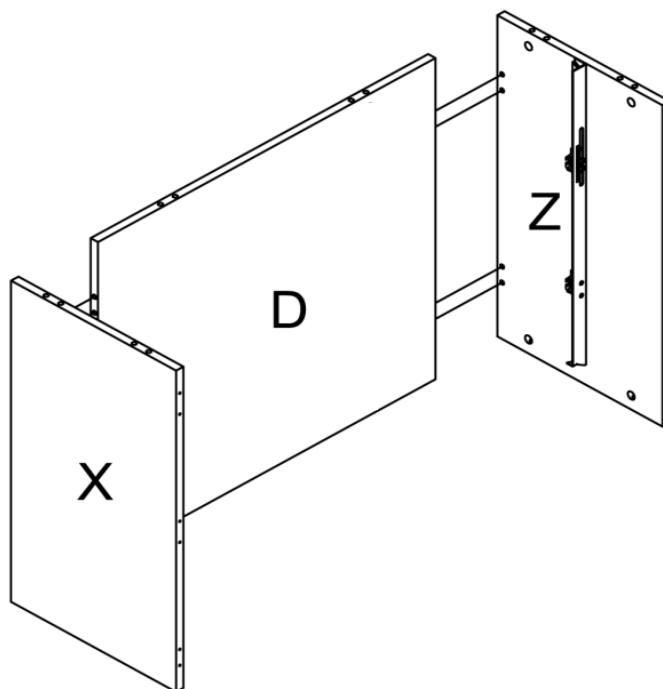

Panel D,X, and Z assembly.

1. Insert cam bolts (C1) on panel X and Z into cams on panels D and tighten in a clockwise direction as illustrated above.


STEP 5

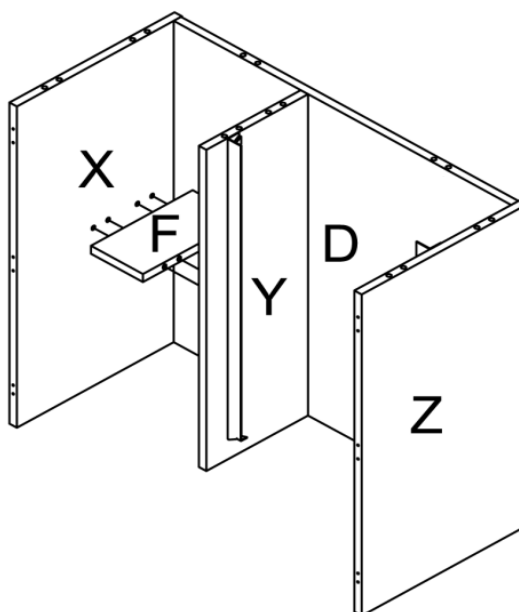

Panel F and Y assembly.

1. Insert cam bolts (C1) on panel X and Y into cams on panels F and tighten in a clockwise direction as illustrated above.


STEP 6

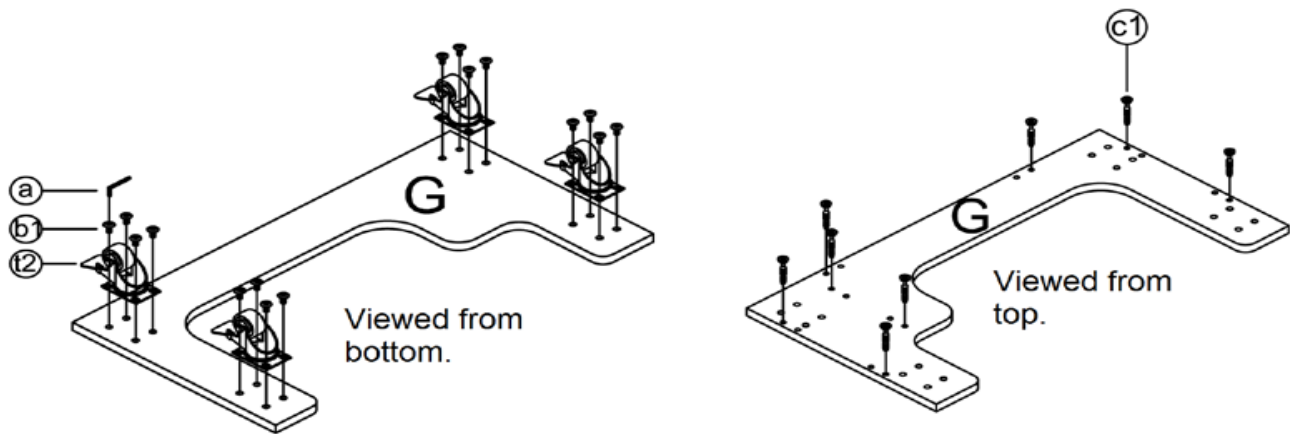

Panel G assembly.

1. Fix castors (12) to panel G with screws (b1) as illustrated above. Tighten with wrench (a)
2. Turn panel over
3. Insert cam bolts (c1) into panel G as illustrated above.

STEP 7

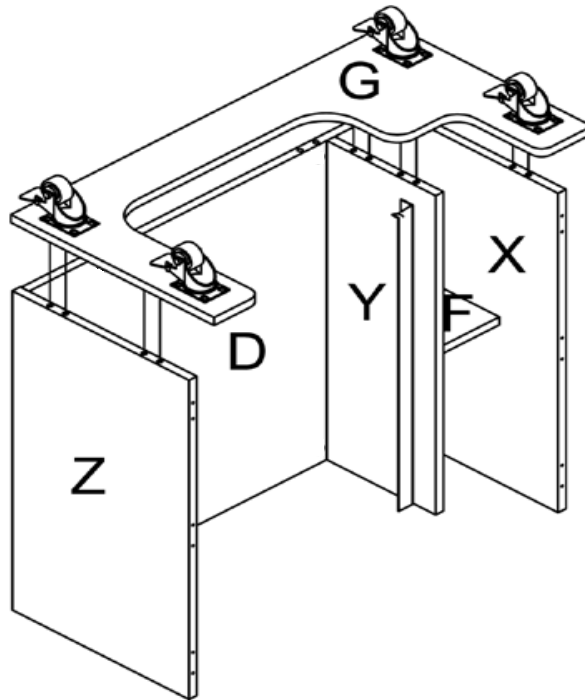


Panel G assembly.

2 people should carefully turn cabinet over supporting panel Y which is attached to F and X but not to back panel D.


1. Insert cam bolts (c1) on panel G into cams on panels X, Z, D and Y and tighten in a clockwise direction as illustrated above.

STEP 8 Lifter Panel assembly

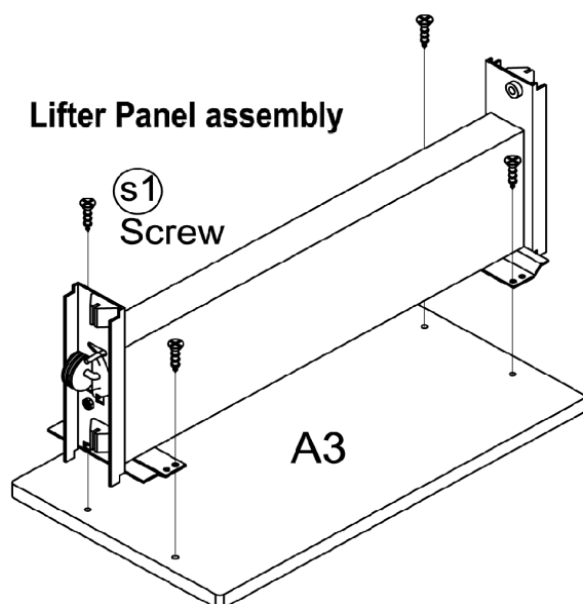

1. Fix Lifter to A3 panel with (S1) screws following predrilled holes as shown on the illustration above.

Lifter Installation

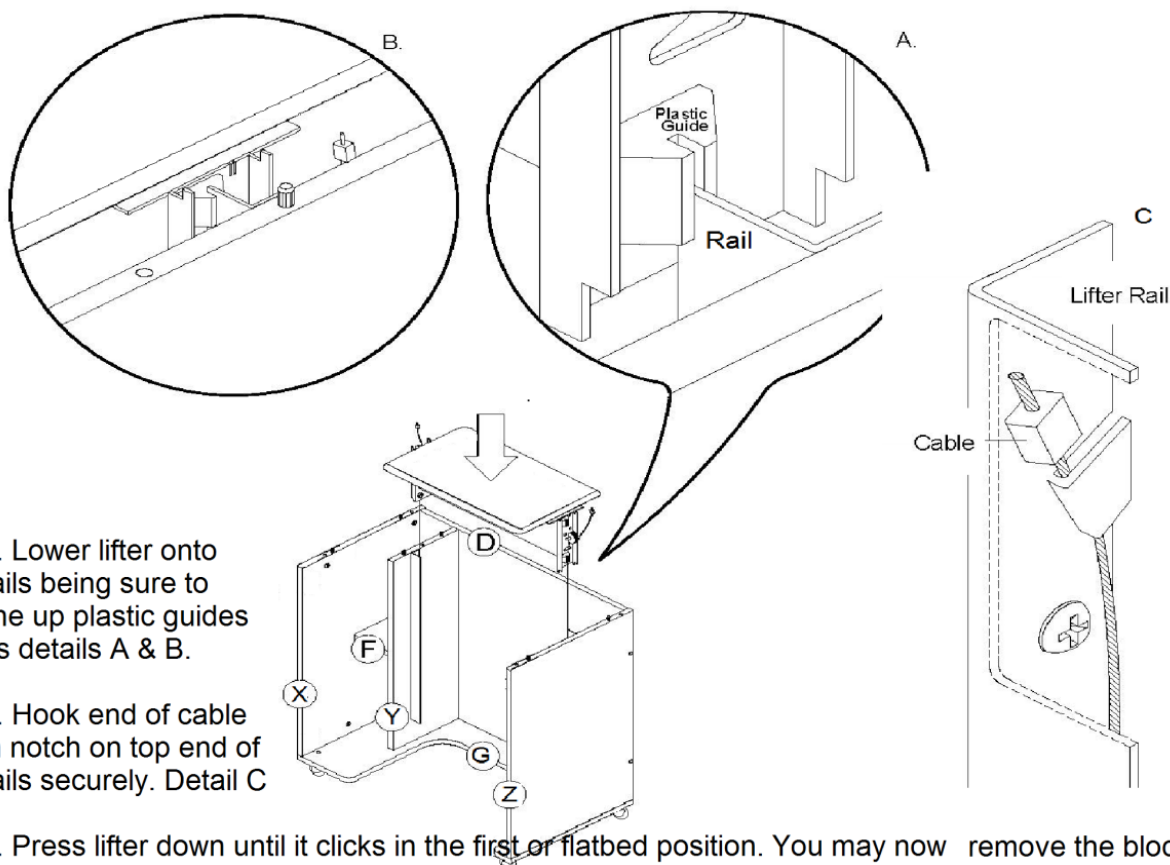


1. Lower lifter onto rails being sure to line up plastic guides as details A & B.

2. Hook end of cable in notch on top end of rails securely. Detail C

3. Press lifter down until it clicks in the first or flatbed position. You may now remove the block of wood in the mechanism.

4. If you are not able to hook cables, watch our video at www.Arrowcabinets.com in the Assembly Video section under Kangaroo Cabinets called Alternate Airlift or call 1-800-533-7347 #1.


STEP 9 Panel A assembly.

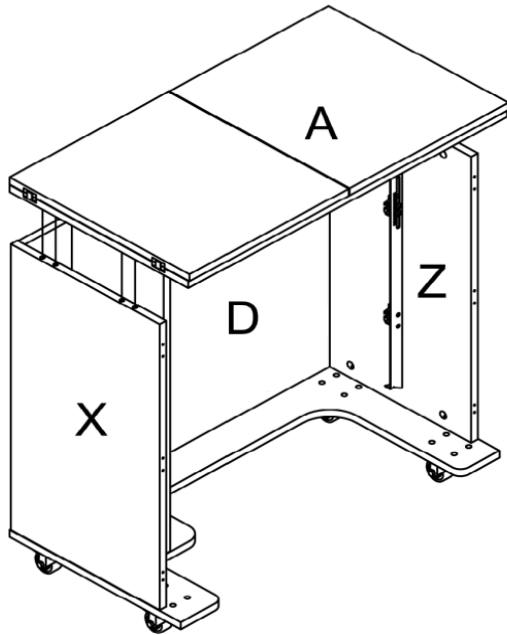

1. Insert cam bolts (c1) on panel A into cams on panels X, Z, D and Y lowering top A onto unit and tighten cams in a clockwise direction


STEP 10

Door Bins **Panel L*2,L1*4 and L2*2 assembly.**

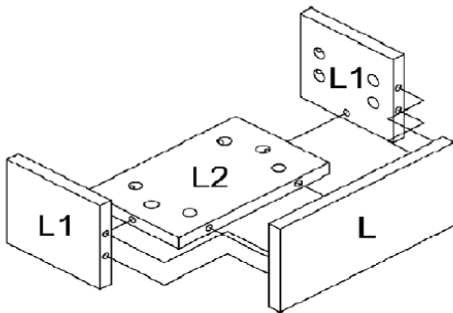


1. Insert cam bolts (c3) on panel L and L1 into cams on panels L2 and tighten in a clockwise direction as illustrated

STEP 11 Panel V1,V2,O1 and O2 assembly.

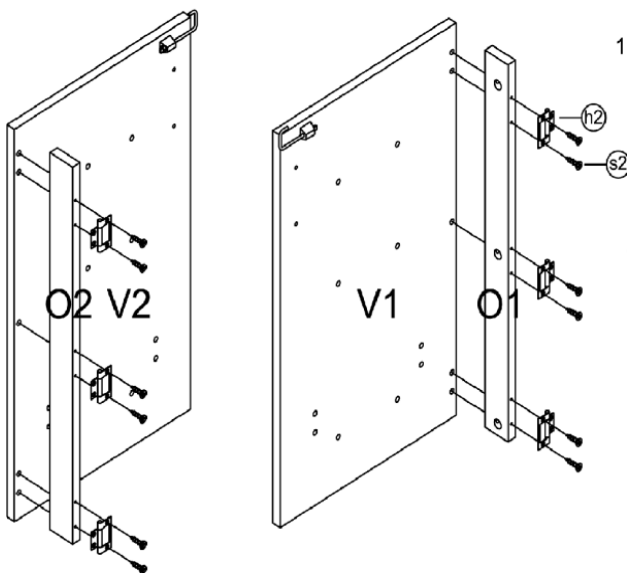

1. Insert cam bolts (c1) on panel V1 and V2 into cams on panels O1 and O2 and tighten in a clockwise direction
2. Fix Hinge (h2) to panels O1 and O2 with Screw (s2) as illustrated


STEP 12

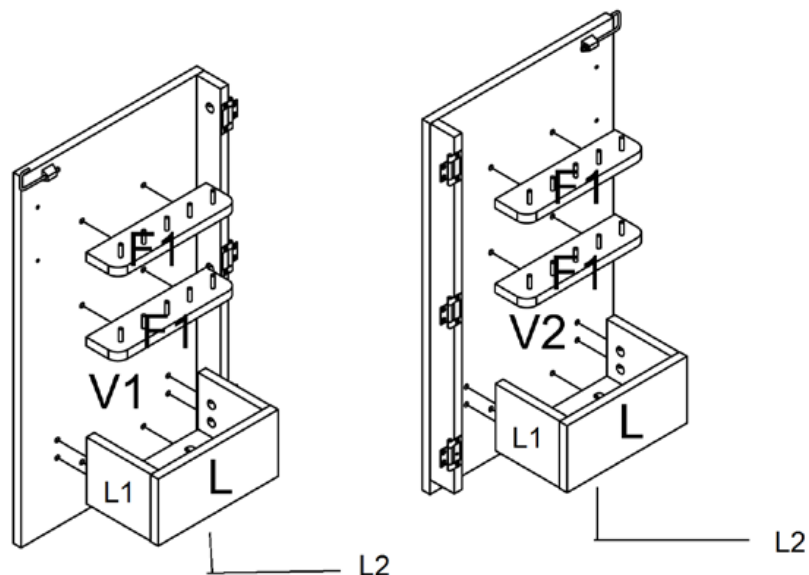

Panel F1 and L assembly.

1. Insert cam bolts (C1) on panel V1 and V2 into cams on panels F1 and L 1*4. and L2*2 tighten in a clockwise direction as illustrated above.

STEP 13

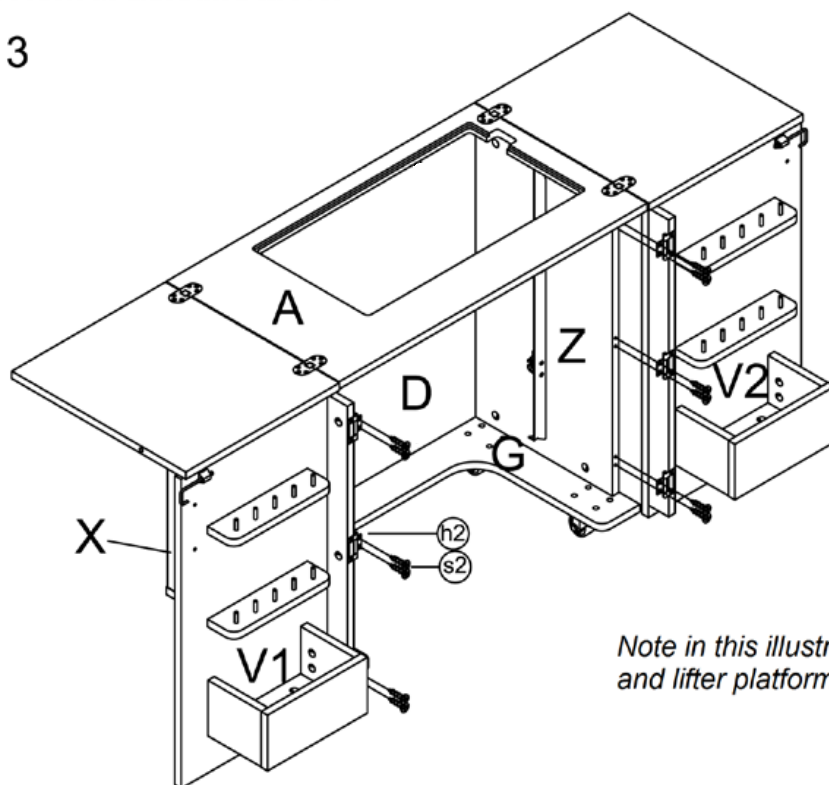

Note in this illustration, the installed lifter and lifter platform are not shown.

Panel V1 and V2 assembly.

1. Fix Hinge (h2) to panels X and Z with Screw (s2) as illustrated above.

You have now successfully completed the assembly on item:

ITEM No.:K8205 Teak

