Electric Lift Installation Template




Make sure your printer output is set to Actual Size or 100%. Doublecheck your printed template against your controller. If all 3 of the holes do not line up with the 3 drilling markers, call Customer Service for assistance at 1-800-533-7347, ext. 1

Position the template inside the cabinet as shown.

The top edge of the template paper should touch the top panel of the cabinet, and the front edge of the template paper should be even with the front edge of the right-hand side panel.

Tape the template in place to prevent it from shifting as you drill.

You will need a 1/16" Drill Bit.

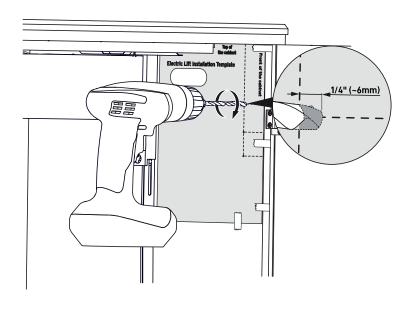

Top of the cabinet

